

Head Term Bd w/air  
 Ser # 135  
 TC K 777

# TC-K555ES

US Model  
 Canadian Model  
 AEP Model  
 UK Model  
 E Model



"Dolby" and the double-D symbol are the trade marks of Dolby Laboratories Licensing Corporation. Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.

## STEREO CASSETTE DECK

### SPECIFICATIONS

Recording system 4-track 2-channel stereo  
 Fast-forward and rewind time  
 Approx. 90 sec. (with C-60 cassette)  
 Bias frequency 105 kHz  
 Signal-to-noise ratio (NAB, at peak level)

Wow and flutter 0.04 % WRMS (NAB)  
 ±0.12 % (DIN)

— Continued on page 2 —

Cassette \ Dolby NR switch	OFF	B-TYPE ON	C-TYPE ON
TYPE IV (Sony METALLIC)	60 dB	67 dB	73 dB
TYPE III (Sony FeCr)	62 dB	69 dB	75 dB
TYPE II (Sony UCX)	59 dB	66 dB	72 dB
TYPE I (Sony BHF)	56 dB	63 dB	69 dB

Tape Transport Mechanism Type	TCM-110C3
-------------------------------	-----------


#### Total harmonic distortion

0.8 % (with Sony METALLIC and FeCr cassettes)


#### Frequency response DOLBY NR OFF

- With TYPE IV cassette (Sony METALLIC)
  - 20 - 19,000 Hz
  - 25 - 18,000 Hz (±3 dB)
  - 25 - 14,000 Hz (±3 dB, 0 VU recording)
  - 25 - 19,000 Hz (DIN)
- With TYPE III cassette (Sony FeCr)
  - 20 - 19,000 Hz
  - 25 - 18,000 Hz (±3 dB)
  - 25 - 19,000 Hz (DIN)
- With TYPE II cassette (Sony UCX)
  - 20 - 18,000 Hz
  - 25 - 17,000 Hz (±3 dB)
  - 25 - 17,000 Hz (DIN)
- With TYPE I cassette (Sony BHF)
  - 20 - 18,000 Hz
  - 25 - 17,000 Hz (DIN)

#### SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK  ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

#### ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET UNE MARQUE  SUR LES DIAGRAMMES SCHEMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.



# SONY

## SERVICE MANUAL

Inputs	Line inputs (phono jacks) Sensitivity 77.5 mV (-20 dB) Input impedance 50 k ohms	Power consumption	26 watts
Outputs	Line outputs (phono jacks) Output level 0.435 V (-5 dB) at a load impedance of 50 k ohms Load impedance over 10 k ohms Headphone output Output level, variable from -20 dB to -50 dB at a load impedance of 8 ohms	Dimensions	Approx. 430 × 105 × 285 mm (w/h/d) (17 × 4¼ × 11¼ inches) including projecting parts and controls
General		Weight	Approx. 6.1 kg (13 lbs 8 oz)
Power requirements	AEP model: 220 V ac, 50/60 Hz (240 V ac adjustable by authorized Sony personnel) UK model: 240 V ac, 50/60 Hz (220 V ac adjustable by authorized Sony personnel) US, Canadian model: 120 V ac, 60 Hz E model: 110, 120, 220 or 240 V ac adjustable, 50/60 Hz	Peak program meters	Response range -40 dB to +8 dB Frequency response 20 - 20,000 Hz ±1.5 dB Response time 1 millisecond Decay time (from 0 dB to -20 dB) 750 milliseconds
		Overshoot	none

0 dB = 0.775 V

## FEATURES

### Three-head system

Separate record and playback heads allow optimum gap settings and impedance ratings for distortion-free recording and greatly extended frequency response. For good tape-to-head contact the heads are mounted in one block and each head is separately adjusted for precise azimuth alignment. The three-head system also enables you to monitor the recorded tape while actually recording.

### Newly-developed LA (LaserAmorphous) head

The record/playback head is made of a special amorphous magnetic alloy developed by Sony, and its cores are solidly welded by laser. This new highly-durable head provides a wider dynamic range and a more extended frequency response, especially in the high-frequency range. The head is designed to take full advantage of the potential of the metal tapes.

### Closed-loop dual-capstan tape drive system

Two pairs of capstans and pinch rollers ensure uniform tape tension and stable tape-to-head contact. As a result, wow and flutter and modulation noise are greatly reduced.

### Dolby C-type NR (noise reduction) system

In addition to the conventional B-type Dolby NR system, this cassette deck employs the newly-developed C-type Dolby NR system which reduces tape noise twice as effectively as the B-type system. The C-type system also incorporates an anti-saturation network to improve the high-frequency dynamic range by 4 dB at 10 kHz.

### Digital linear counter

This counter indicates the recording or playback time elapsed on the tape so that the tape can be precisely indexed. While conventional displays can only indicate the elapsed recording time, this display can indicate with a minus sign how much recording time remains.

### Bright FL-display peak program meters

The peak program meters follow the transient peaks of the music and maintain the peak readings for about 4 seconds. This double indication makes it easy to set critical recording levels precisely.

### Remote control operation

Using the optional RM-50 or RM-80 remote control unit, various operations—recording, playback, record muting operation, etc.—can be remotely controlled.

When the RM-65 synchro remote control unit is used to connect this cassette deck with a turntable equipped with a synchro remote control jack, the operation of the cassette deck and the turntable will be synchronized.

### Two motors

The two-motor drive system assures accurate and stable tape transport. The capstan is driven by a linear torque BSL (brushless and slotless) motor to keep wow and flutter low and to provide smooth torque.

### Useful functions

- Record muting function allows you to easily insert a moderately long blank space between selections.
- Auto play permits one step rewind and playback from the beginning of the tape and the memory function allows you to easily locate any desired point on the tape.
- A timer switch is provided to turn the deck on and off any number of times at preset times set on an optional timer.

## SAFETY CHECK-OUT (US Model)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:


Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

### LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers). Leakage current can be measured by any one of three methods.


1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

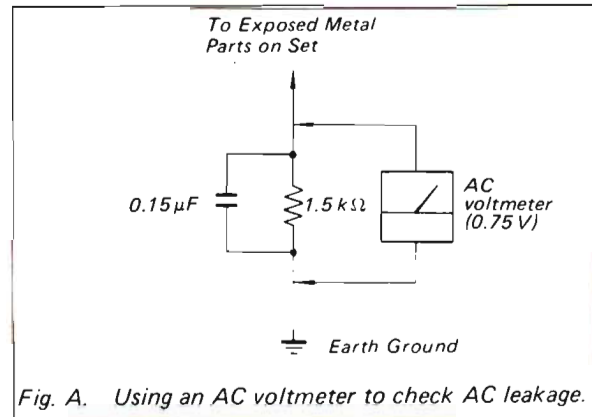


## MODEL IDENTIFICATION

— Specification Label —

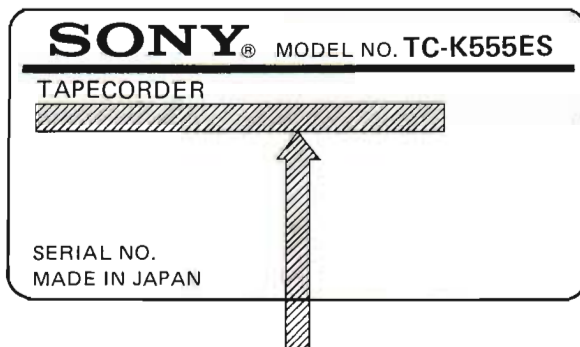

US, Canadian model: AC 120 V 60 Hz 26 W

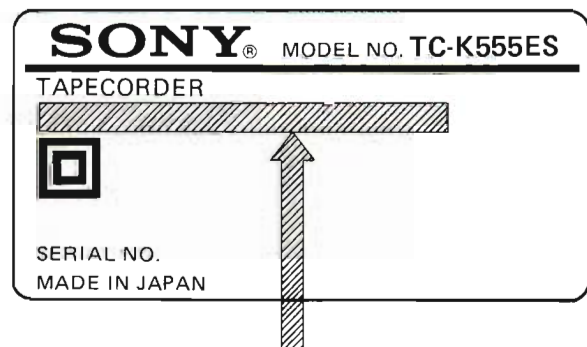

AEP model: AC 220 V ~ 50/60 Hz 26 W

UK model: AC 240 V ~ 50/60 Hz 26 W


E model: AC 110, 120, 220, 240 V ~ 50/60 Hz 26 W

**Caution on DOLBY IC (CX174) Replacement**

This set uses eight Dolby ICs (CX174). (IC101, 102, 201, 202, 301, 302, 401, 402)

These ICs are either CX174-1 or CX-174-3.

When replacing these ICs, be sure to use the same ICs as the original one.

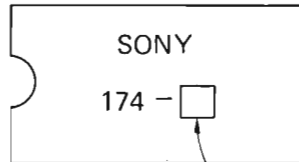

1 : CX174-1  
3 : CX174-3




SECTION 1  
OUTLINE

1-1. BLOCK DIAGRAMS

— Amp Section —


— L-CH —

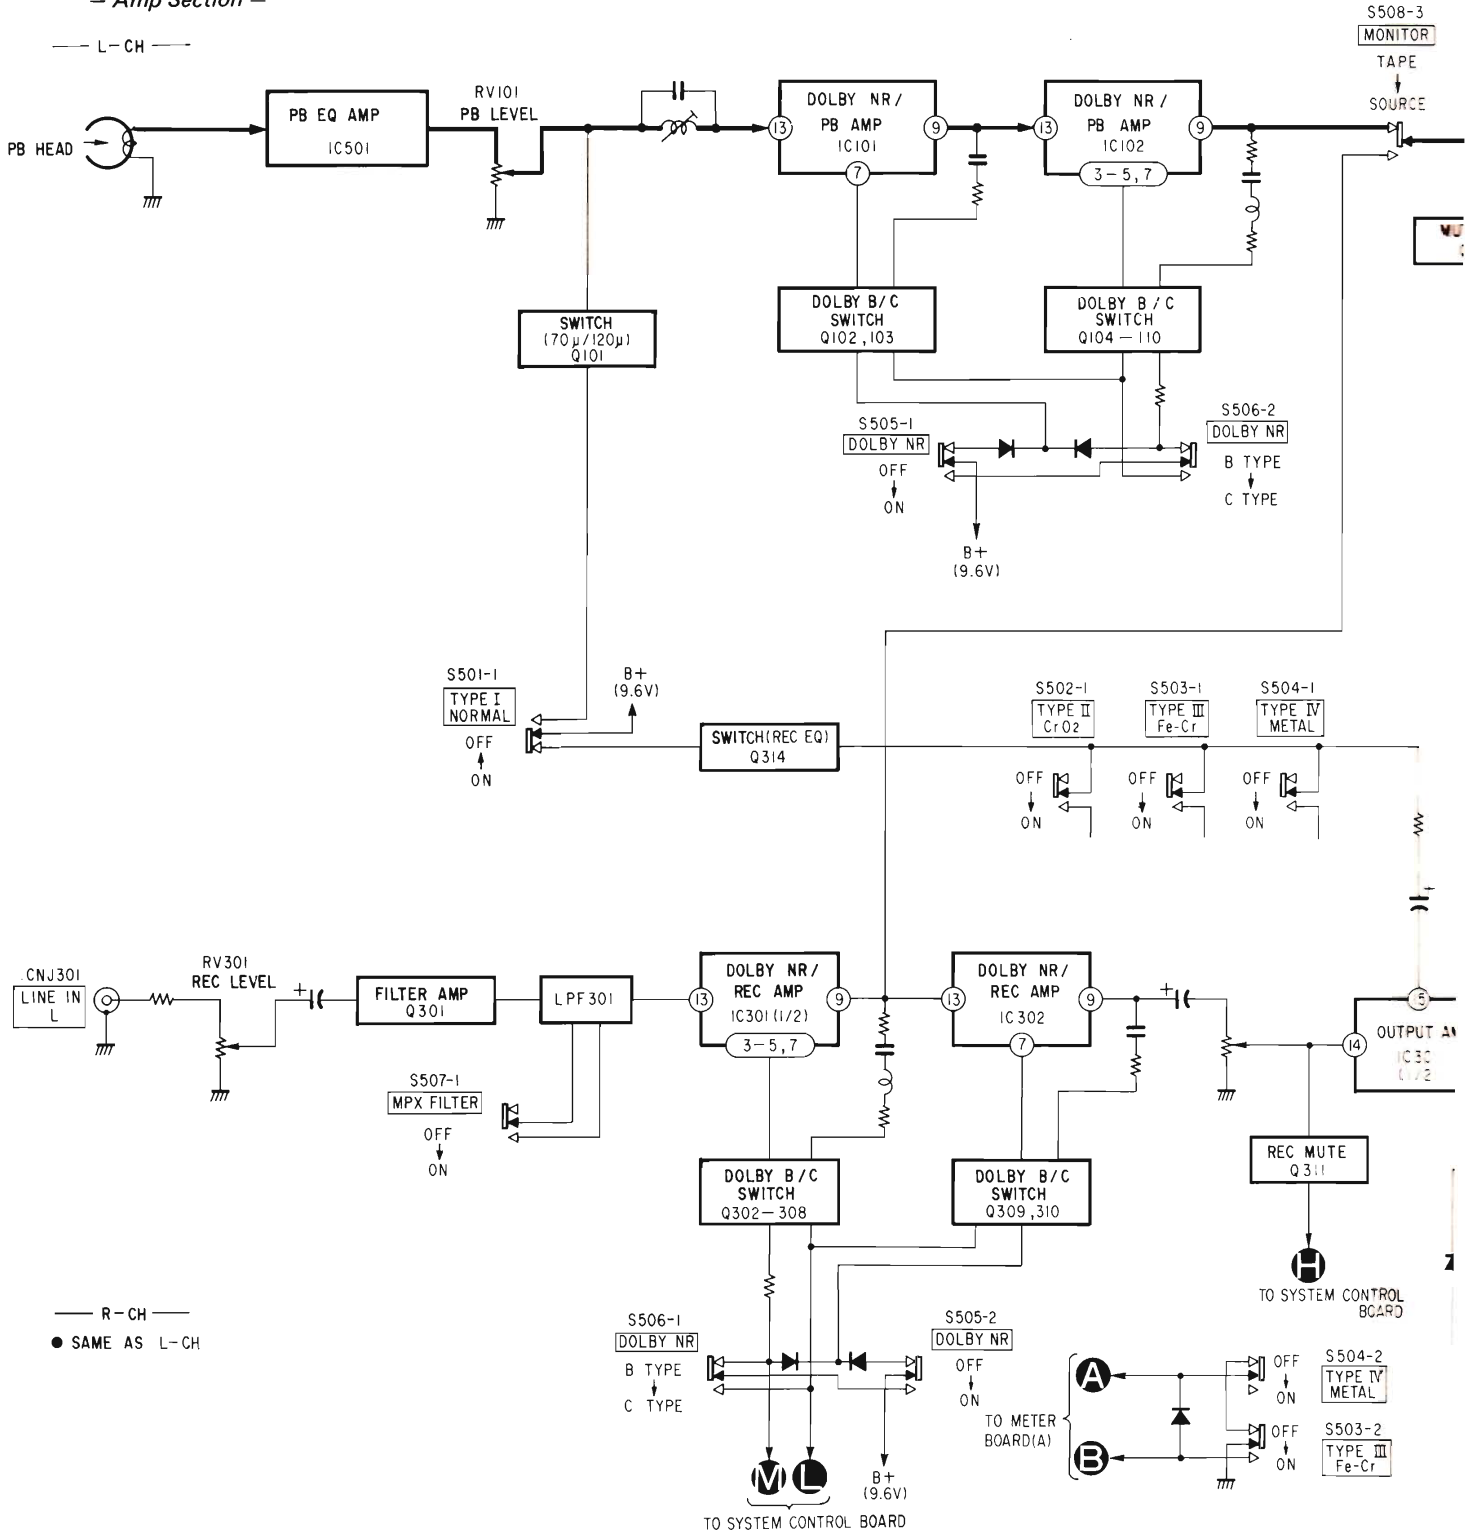


— R-CH —

● SAME AS L-CH


# TC-K555ES

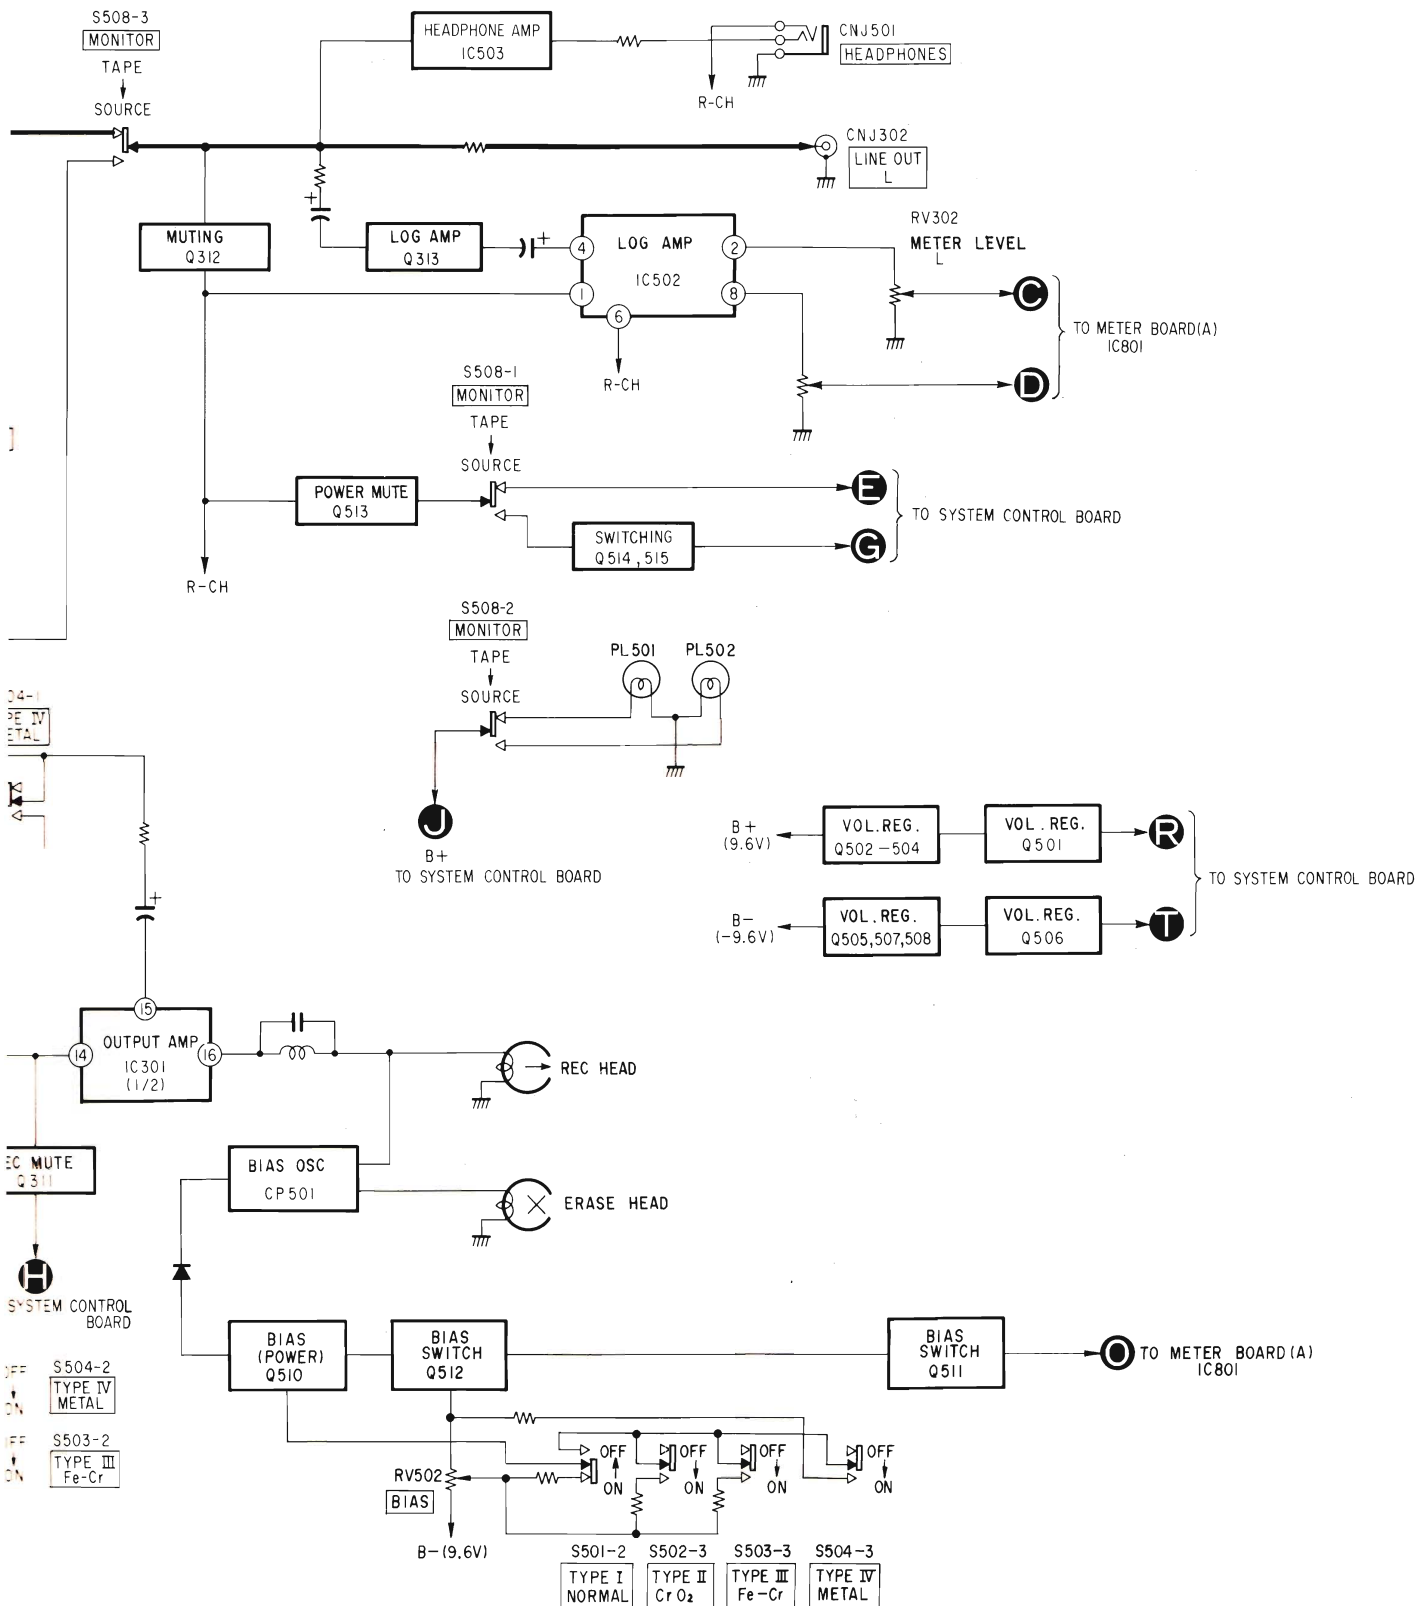

- System Control Section -

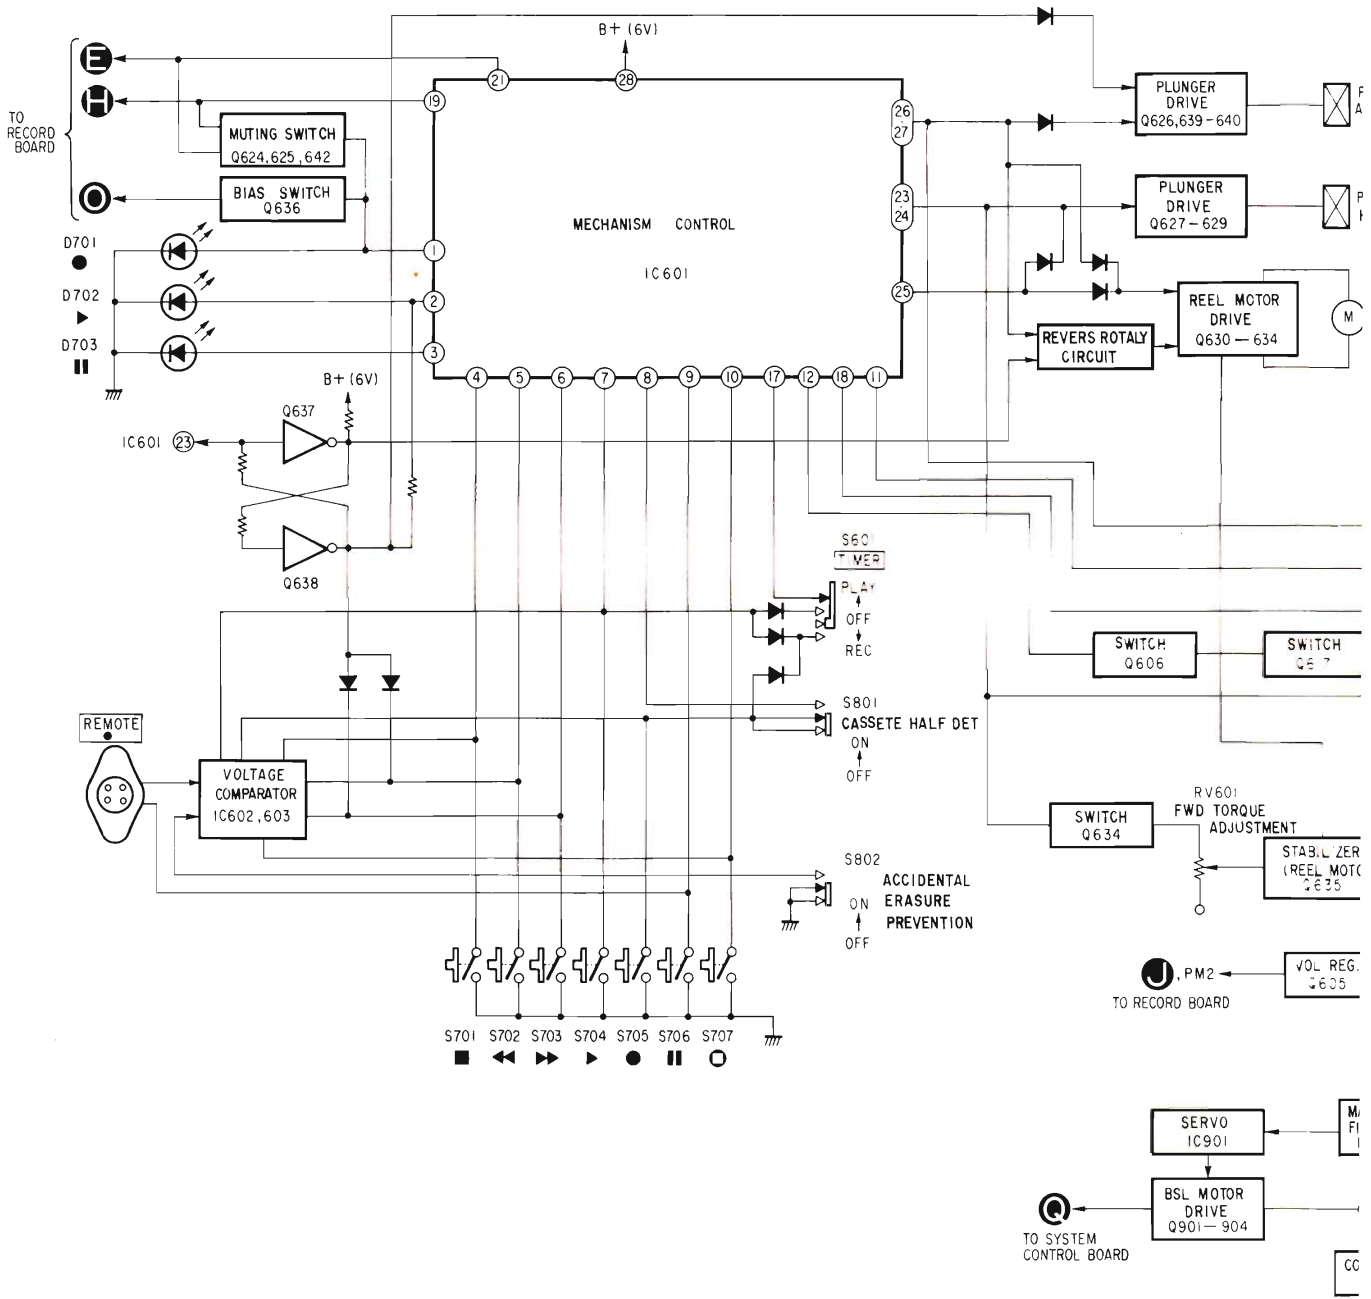


# 555ES TC-K555ES

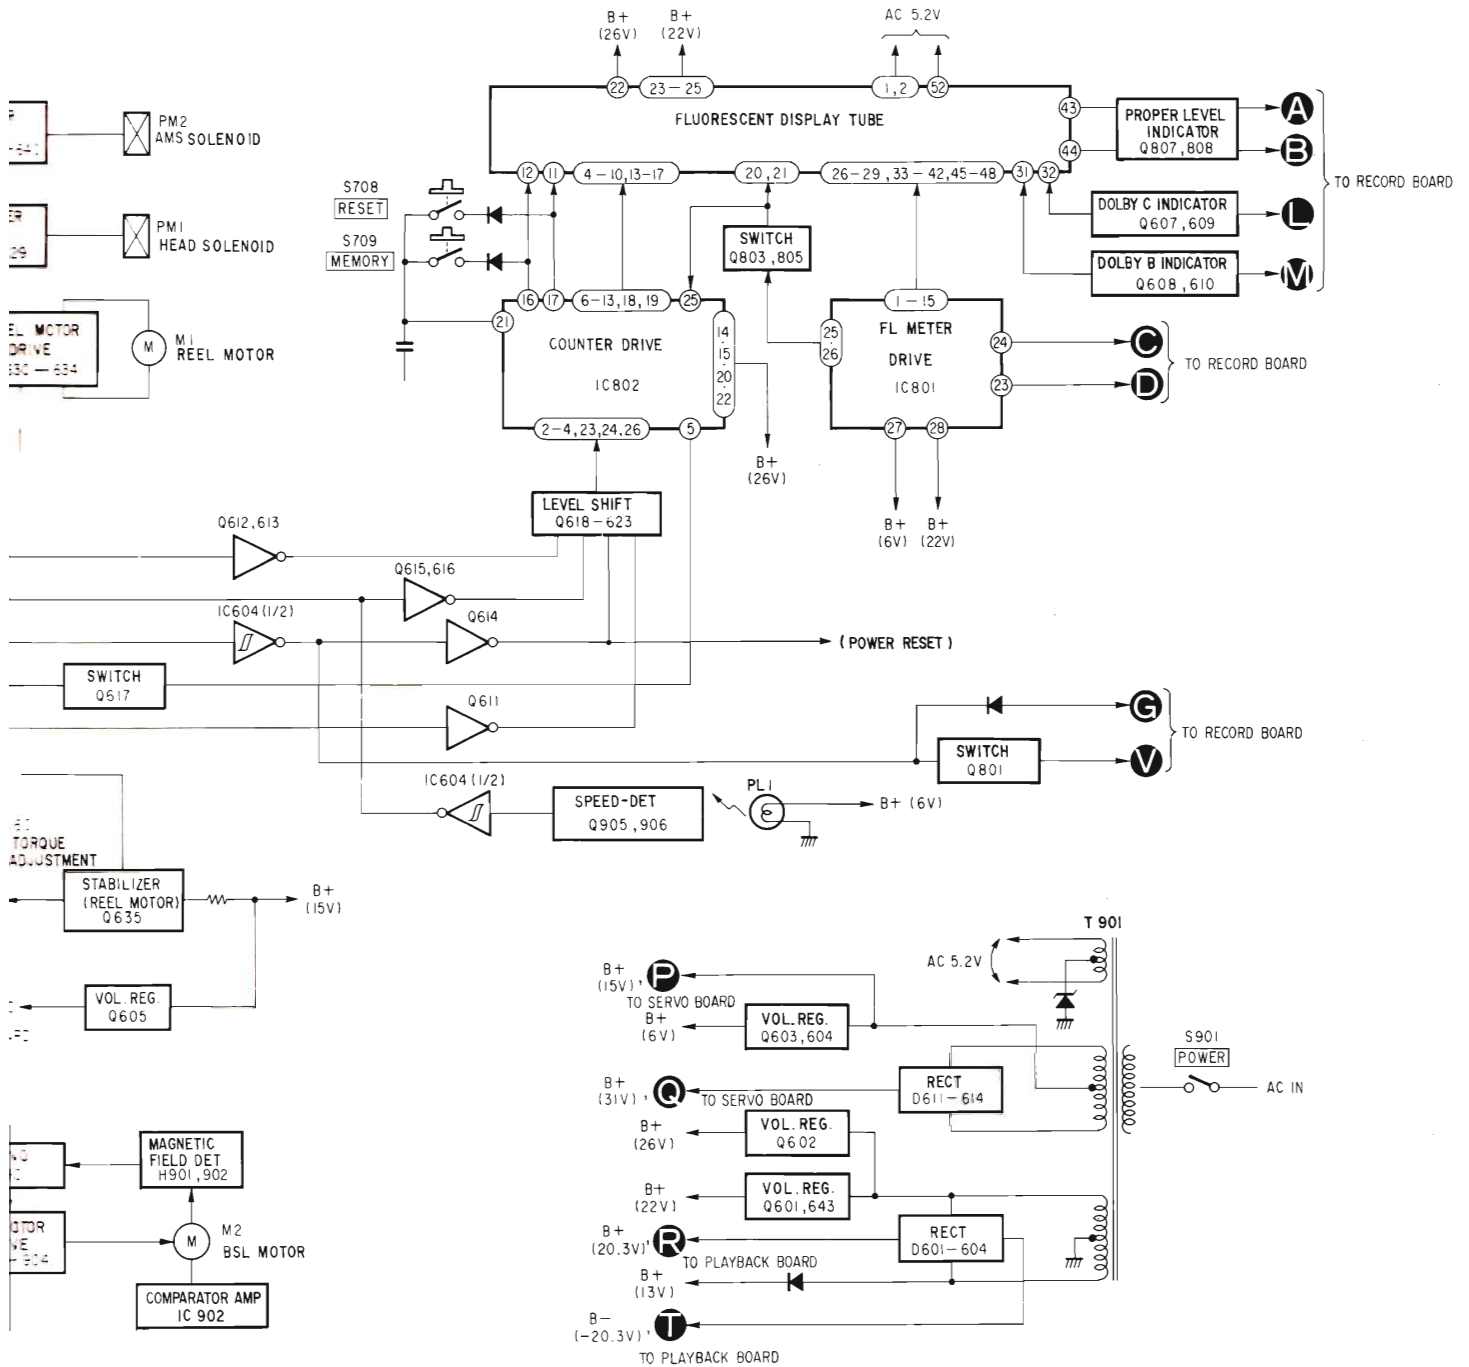



## 1-2. FUNCTION OF CONTROLS

The numbers in the photo are keyed to the following explanations.

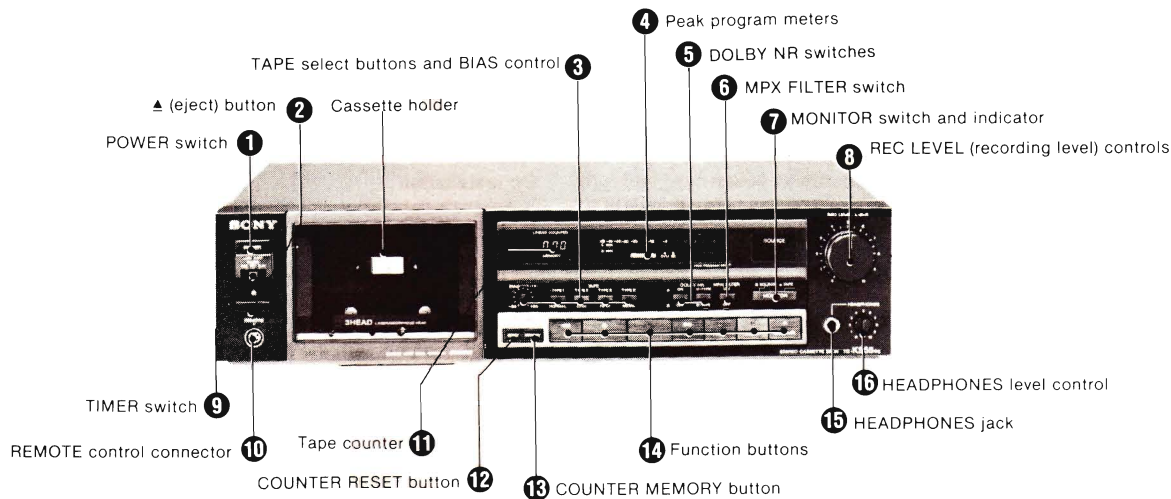

### ① POWER switch

Depress this switch to turn on the power. The lamp in the cassette holder, the display of the peak program meter and the tape counter will light up. The indicator lamp of the pause button will blink for about 4 seconds, indicating that the function buttons are inoperative during this period.

Press this switch again to turn the power off.

### ② ▲ (eject) button

Press this button to open the cassette holder.

### ③ TAPE select buttons and BIAS control

Depress one of the TAPE select buttons according to the type of tape to be used. When the appropriate button is depressed, the optimum equalization and bias current settings are obtained for recording, and the optimum equalization setting is obtained for playback. When recording using a TYPE I (NORM), TYPE II (CrO<sub>2</sub>) or TYPE III (Fe-Cr) tape, adjust the BIAS control. See "Recommended settings for the TAPE select buttons and the BIAS control", on page 11.

### ④ Peak program meters

With the MONITOR switch set to SOURCE, the meters show the peak input level of each channel, and to TAPE, the meters show recorded levels. They follow the transient peaks of high-level inputs that are too brief to be followed by conventional VU meters so that the optimum recording level can be accurately set. The highest input of each channel is held about 4 seconds on the scale, except when a higher peak occurs before 4 seconds have passed, in which case that peak is immediately indicated.

### ⑤ DOLBY NR switches

The left switch turns the Dolby NR\* (Noise Reduction) system on and off and the right switch selects either the B-type or C-type Dolby NR system.

To record with the Dolby NR process, depress the ON/OFF switch to the ON position and choose B-TYPE (□) or C-TYPE (△).

To record without the Dolby NR process, press the ON/OFF switch again to release.

When playing back, set these switches to the same position used in recording.

\*"Dolby" and the double-D symbol are trade marks of the Dolby Laboratories Licensing Corporation. Noise reduction system manufactured under license from Dolby Laboratories Licensing Corporation.

### ⑥ MPX FILTER switch

Normally set this switch to OFF.

When recording FM stereo broadcasts with the Dolby NR system, set it to ON if the 19 kHz pilot signal and the 38 kHz subcarrier have not been adequately suppressed by the FM tuner or receiver.

If the tuner or the receiver suppresses such signals adequately (most high-quality tuners and receivers will), you do not have to set this switch to ON.

### ⑦ MONITOR switch and indicator

When adjusting the recording level, set this switch to the released position (SOURCE □) to allow monitoring of the sound to be recorded. During playback, depress this switch (TAPE △) to allow monitoring of the recorded sound. According to the MONITOR switch setting, "SOURCE" or "TAPE" will appear in the indicator window.

During recording, use this switch to monitor either the source or the recorded sound.

## ④ REC LEVEL (recording level) controls

These controls adjust the recording level. The knob nearest the panel is for the left channel and the other knob for the right channel. To adjust the level of the left or right channel only, turn the appropriate knob while holding the other knob.

## ⑤ TIMER switch

You can set the unit to record or play back at a predetermined time by connecting any commercially available timer. To record, set this timer switch to REC. To play back, set it to PLAY.

## ⑩ REMOTE control connector

Connect the optional RM-50 (wired) or RM-80 (wireless) remote control unit to operate the tape transport functions from a distance. Synchronized operation is also possible with selected Sony turntables, using the optional RM-65 synchro remote control unit. Read the instruction manual of your remote control unit before operating it.

## ⑪ Tape counter

This counter indicates the tape running time.

## ⑫ COUNTER RESET button

Press this button to reset the tape counter to "0.00."

## ⑬ COUNTER MEMORY button

Press to rewind the tape to the "0.00" point on the tape counter. The word "MEMORY" is displayed below the tape counter. Pressing the ► button together with the ◀◀ button automatically starts playback from "0.00."

When you do not use the memory function, press this button again. The word "MEMORY" will disappear.

## ⑭ Function buttons

It is possible to switch directly from one mode to another. The indicator lamps light when the tape deck is in the forward, record or pause mode.

◀◀ (rewind) button : Press this button to rewind the tape. This button is also used, with the ► button, to initiate auto play.

■ (stop) button : To stop the tape, press this button. The tape will stop automatically when it is completely wound in either direction.

► (forward) button : Press this button to play the tape back. To record, press this button while holding the ● button down.

▶▶ (fast-forward) button : Press this button to advance the tape rapidly.

● (record) button : Press this button together with the ► button to start recording.

⏸ (pause) button : To pause for a moment during recording or playback, press this button. This button is also used to control more precisely the start of recording and to release the record muting mode.

○ (record muting) button : Press this button to eliminate unwanted material and to insert a blank space during recording.

## ⑮ HEADPHONES jack

Headphones may be inserted either to monitor the input signals to be recorded or to listen to a recording in the playback mode. Headphone volume is adjustable with the HEADPHONES control.

## ⑯ HEADPHONES level control

This control adjusts the headphone level. This setting does not affect the peak program meters or the output level of the LINE OUT jacks at the rear.

1-3. RECORDING

**RECOMMENDED SETTINGS FOR THE TAPE SELECT BUTTONS AND BIAS CONTROL**

Press the appropriate TAPE select button referring to the recommended settings listed below. When recording using a TYPE I (normal), TYPE II (CrO<sub>2</sub>) or TYPE III (Fe-Cr) tape, adjust the BIAS control also.

While the settings are optimum for Sony cassettes, you may want to change them when using cassettes produced by other manufacturers.

**Tape list (for Canada)**

Tapes (C-60 and C-90)		Type of tape
SONY : LNX, SHF MAXELL : UD, UD-XL I, XL I-S SCOTCH : MASTER I	AMPEX : GRAND MASTER I FUJI : FX-I MEMOREX : MRX-1 TDK : AD, AD-X	TYPE I (NORMAL)
SONY : UCX-S, EHF MAXELL : UD-XL II, XLII-S SCOTCH : MASTER II	AMPEX : GRAND MASTER II FUJI : FX-II MEMOREX : HIGH BIAS II TDK : SA, SA-X	TYPE II (CrO <sub>2</sub> )
SONY : FeCr SCOTCH : MASTER III	BASF : PROFESSIONAL III	TYPE III (Fe-Cr)
SONY : METALLIC	Other metal tapes	TYPE IV (METAL)


**Tape list (for other countries)**

Tapes (C-60 and C-90)		Type of tape
SONY : AHF, BHF BASF : LH-X, Professional I MAXELL : UD, UD-XL I, XL I-S SCOTCH : MASTER I	AGFA : SUPER FERRO DYNAMIC FUJI : FX-I PHILIPS : SUPER FERRO-I TDK : AD	TYPE I (NORMAL)
SONY : UCX-S, UCX BASF : Professional II MAXELL : UD-XLII, XLII-S SCOTCH : MASTER II	AGFA : STEREO CHROM FUJI : FX-II PHILIPS : CHROMIUM TDK : SA, SA-X	TYPE II (CrO <sub>2</sub> )
SONY : FeCr BASF : Professional III SCOTCH : MASTER III	AGFA : CARAT PHILIPS : FERRO CHROMIUM	TYPE III (Fe-Cr)
SONY : METALLIC	Other metal tapes	TYPE IV (METAL)

The three-head system permits you to monitor the recorded sound while in the record mode, so that you can easily check the effects of various settings of the TAPE select buttons and the BIAS control.

**BIAS control**

This control regulates bias current for TYPE I (NORM), TYPE II (CrO<sub>2</sub>) and TYPE III (Fe-Cr) cassettes. The full counterclockwise position decreases bias by about 20% from the center position and the full clockwise position increases it by about 20%. Generally, as bias is increased, extreme high frequencies will be suppressed. As bias is reduced, extreme high frequencies will be boosted. You can then find the appropriate bias setting for each brand of TYPE I, TYPE II and TYPE III cassettes.

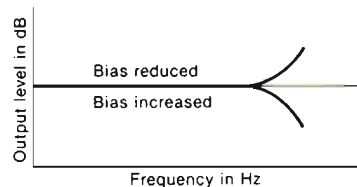


**RECORD MONITORING**

As this tape deck has separate record and playback heads, you can easily compare the source and the recorded sounds in the recording mode by using the MONITOR switch. You can check the recording level and whether there is any contamination on the heads that is affecting the recording.

● If the connected amplifier has a tape monitor selector, source/tape comparison is possible with the amplifier monitor selector. In this case, set the tape deck MONITOR switch to TAPE.

**MONITOR switch setting and signal flow**

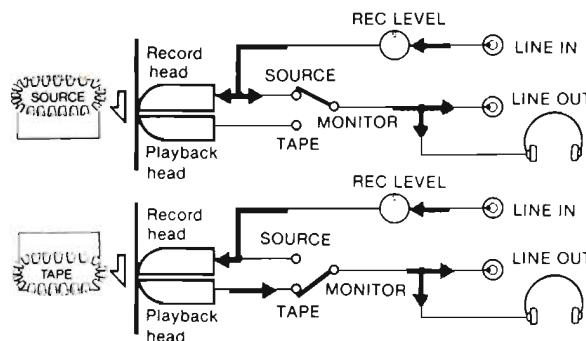

**TO RECORD MATERIAL ONTO A SPECIFIC PORTION OF TAPE**


When you want to re-record a specific portion of tape or to insert new material between two points on a tape you will find it handy to be able to change directly from the playback to the record mode by pressing the ● REC button while holding the ► button down.

## 1-4. TO ADJUST THE RECORDING LEVEL

Adjust the recording level while monitoring on the peak program meters the input level of the program source to be recorded. If the recording level setting is too high, the recording will be distorted, and if the setting is too low, the recording will be noisy. The recording level should be set as high as possible while still avoiding distortion. This level will depend on the type of tape being used.

When the TAPE button is pressed, the range above the saturation level of the selected type of tape is indicated by the red line. Generally speaking, adjust the recording level by making sure that the meters deflect only to the left end of the red line at the highest signal level.

Example: Type I cassette

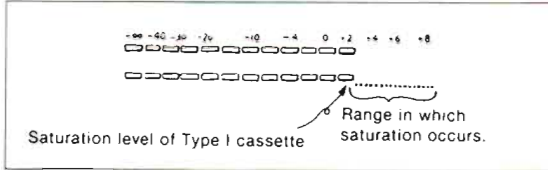




Since the saturation level of any tape is lower in the higher frequencies than in the lower frequencies, the recording level may still be too high if adjusted in this way if the program to be recorded contains many high frequency signals. Consideration has to be given to the program source to be recorded as well as to the characteristics of the cassette to be used, since each cassette, even cassettes using the same type of tape, may have different characteristics. The following table will provide you with a starting point in setting the recording level of various kinds of programs when using Sony cassettes.

Type of tape	Sony cassettes	Low and mid freq. range programs (vocal, etc.)	Mid and high freq. range programs (piano, guitar, etc.)
I	BHF	+ 3 dB	+ 1 dB
	AHF	+ 4 dB	+ 2 dB
II	UCX	+ 3 dB	+ 2 dB
III	FeCr	+ 5 dB	+ 1 dB
IV	METALLIC	+ 6 dB	+ 6 dB





# SECTION 2 DISASSEMBLY


Note: Follow the disassembly procedure in the numerical order given.

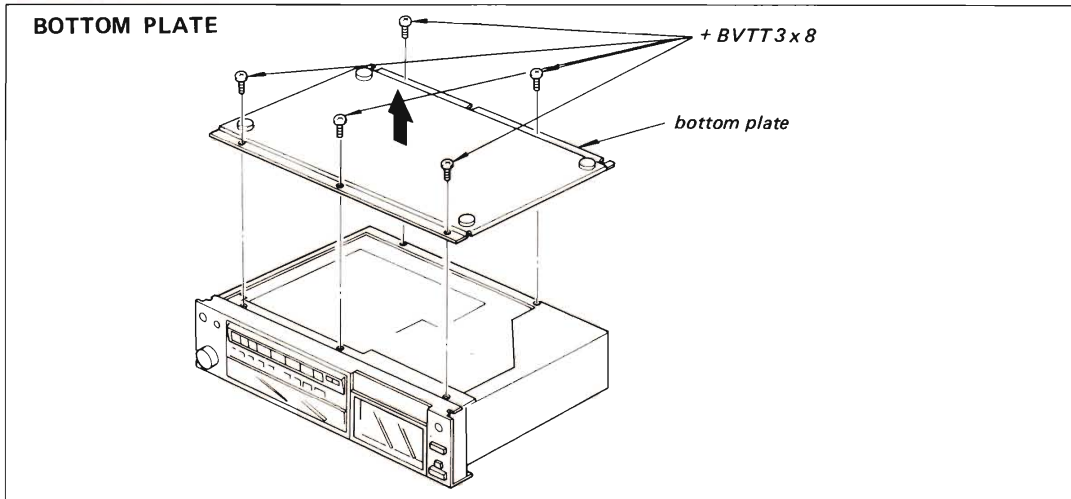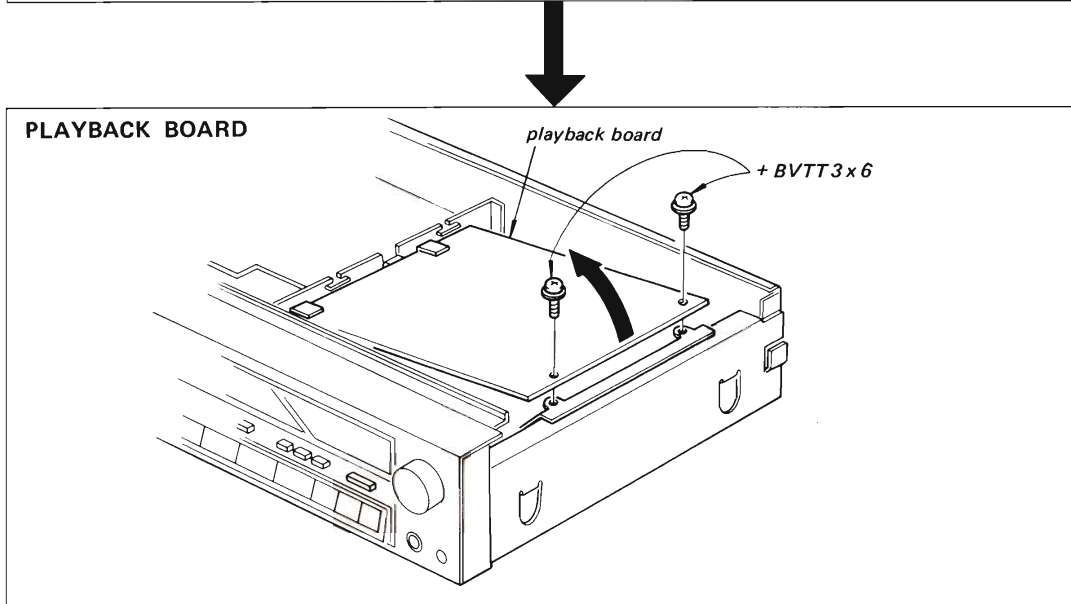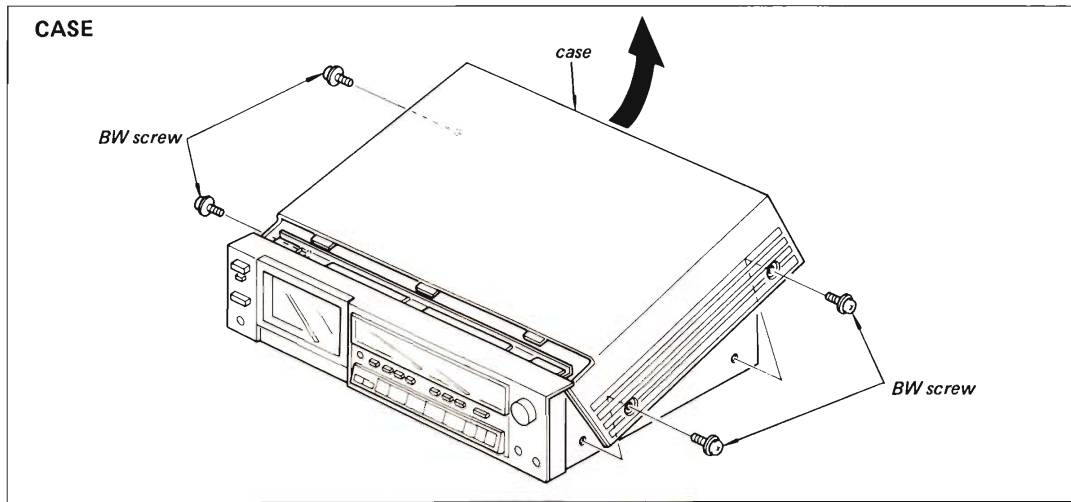


**CASSETTE LID/PANEL**


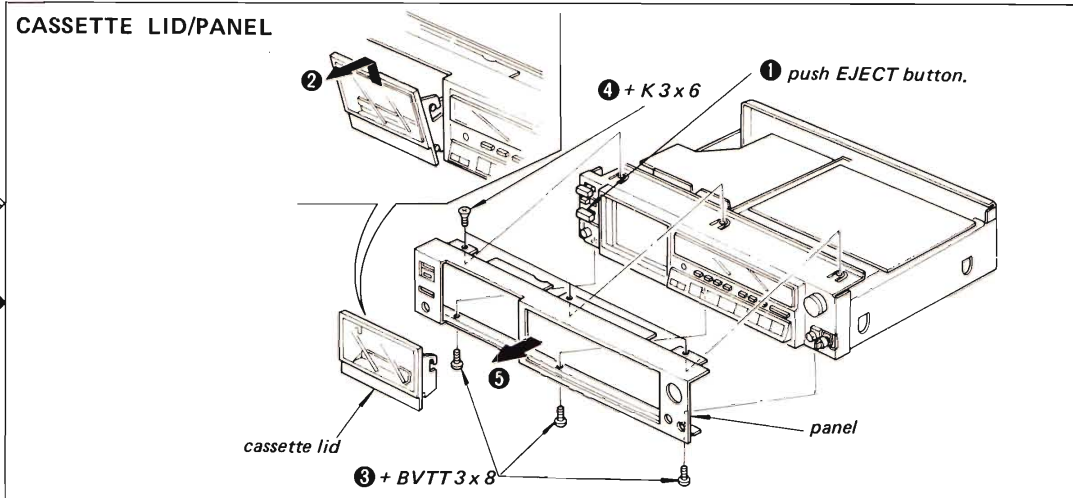
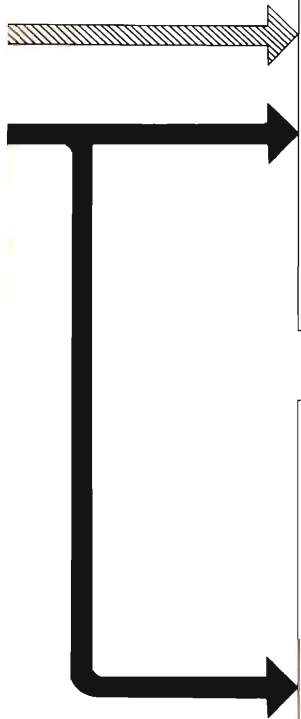


**SYSTEM CONTROL BOARD**

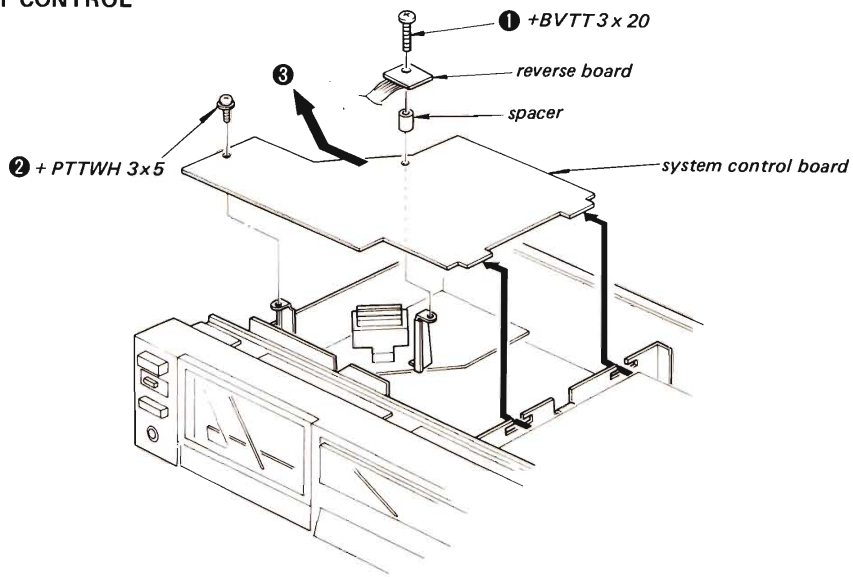


**RECORD BOARD**

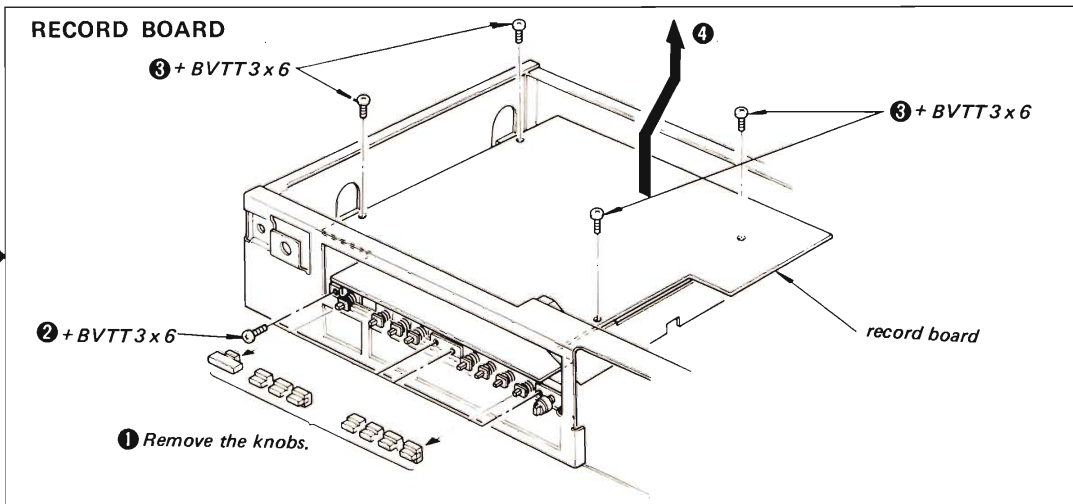


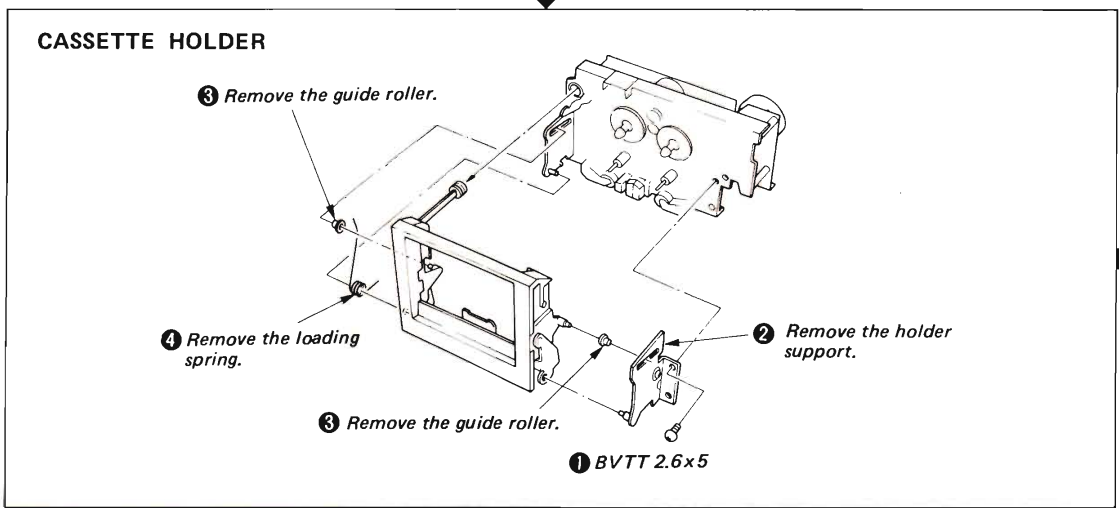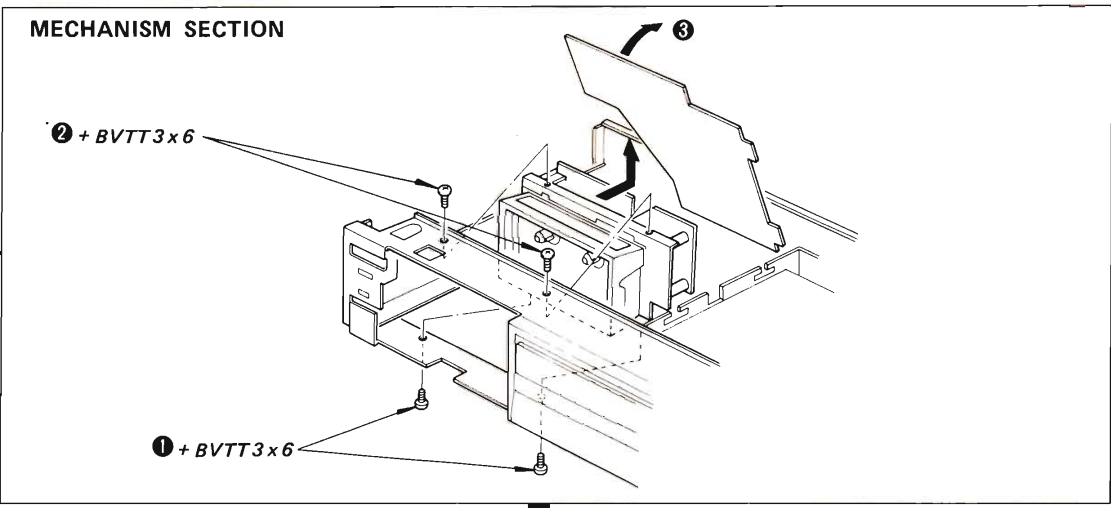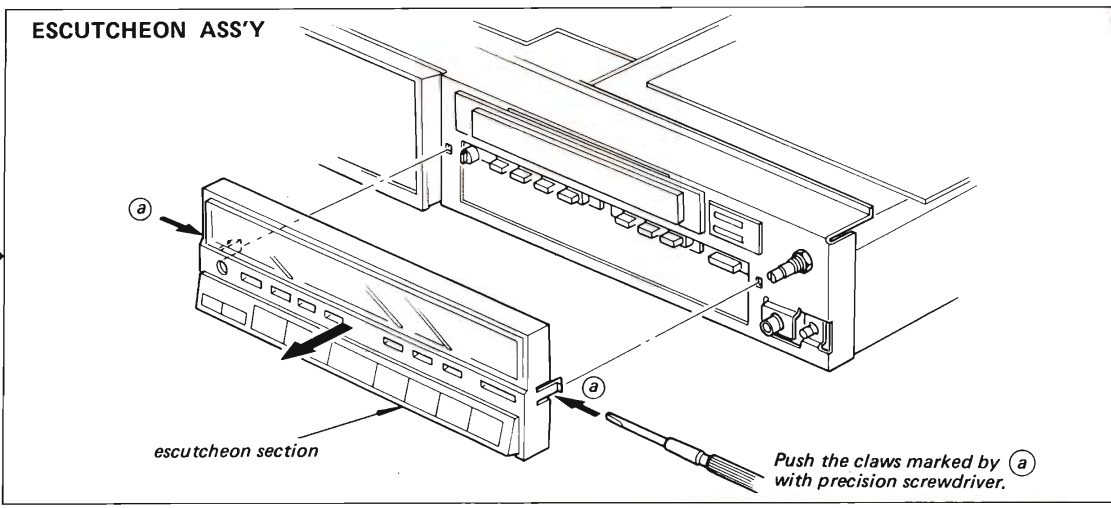


METER

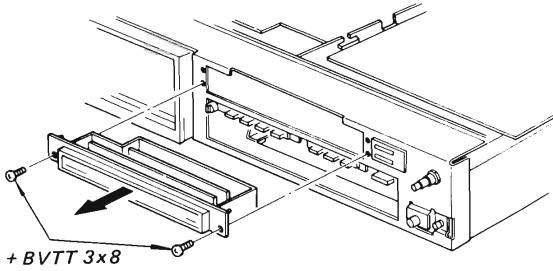


AMS SOLENOID

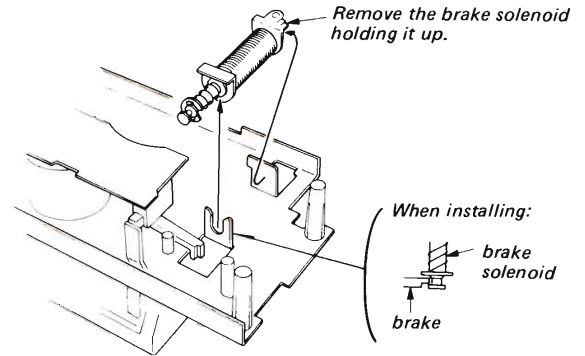


CAPSTAN MOTOR

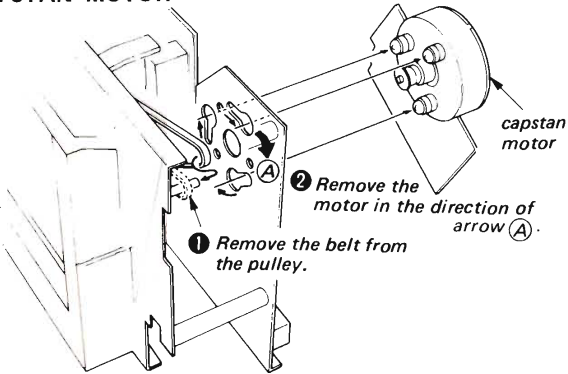


FLYWHEEL

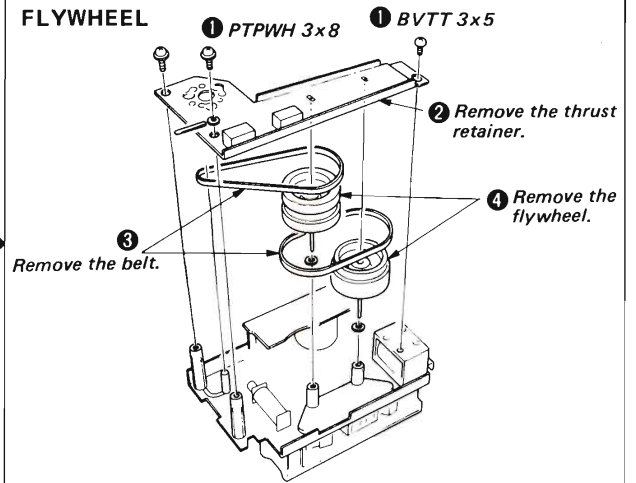

RECORD/PLAYBACK HEAD..... 1 ~ 2  
ERASE HEAD..... Δ ~ Δ

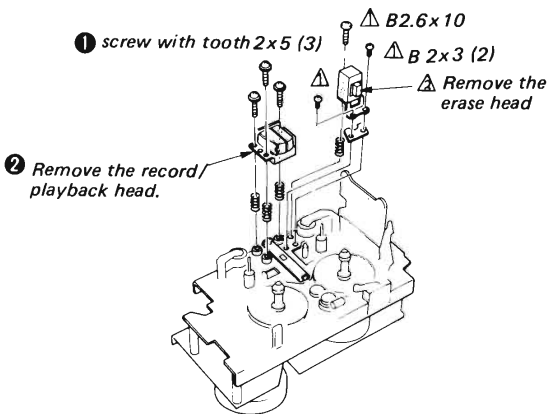

REEL TABLE

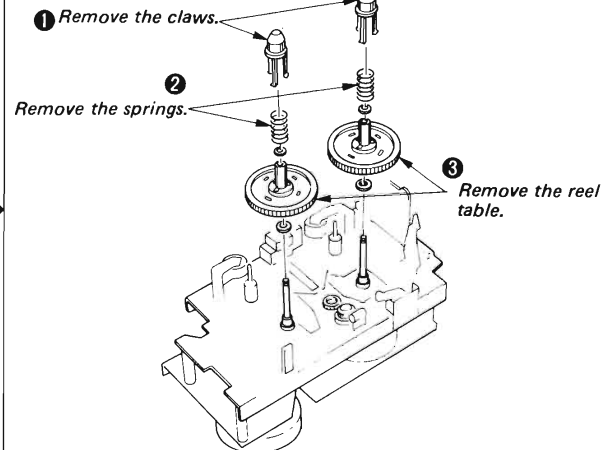




## CASSETTE-ORNAMENT PLATE


**Note:** This plate does not need screws to be installed.

1. Press the ejection button and open the cassette lid.
2. Release the two claws from the cassette-ornament plate at both the top corners.
3. Depress the REC detecting lever and the half detecting levers at the inside of the set and remove the cassette-ornament plate.
4. When reinstalling the cassette-ornament plate, perform the steps in a reverse manner.

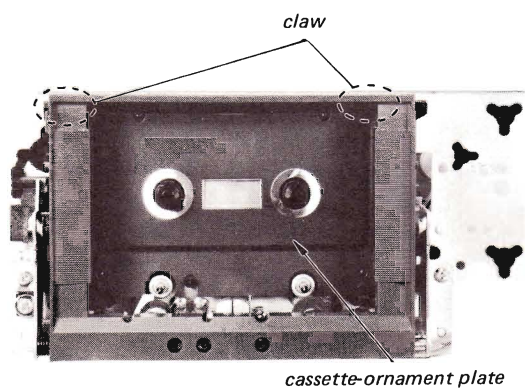


## MECHANISM SECTION PHOTOGRAPHS


1. Top View with Cassete Holder Shut:

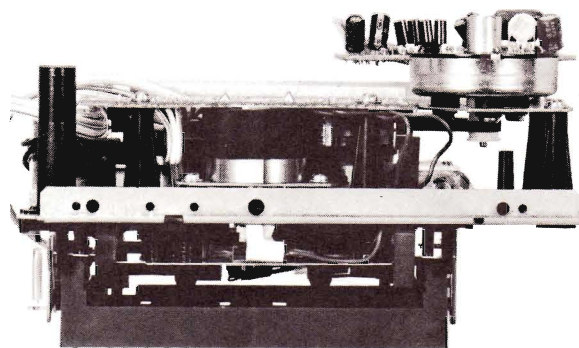


2. Bottom View with Cassete Holder Shut:

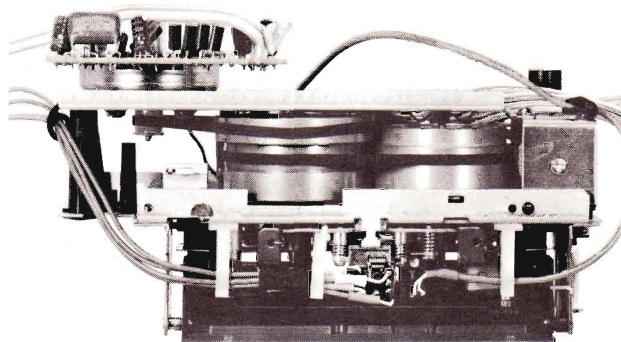


3. Left Side View with Cassete Holder Shut:

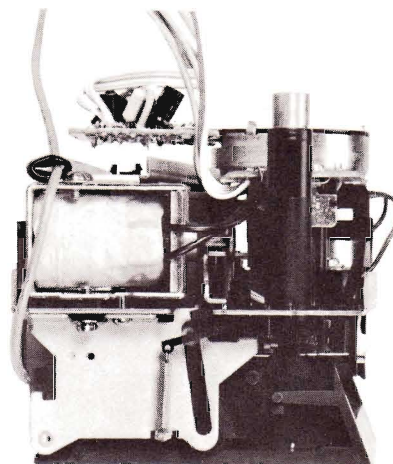


4. Right Side View with Cassete Holder Shut:

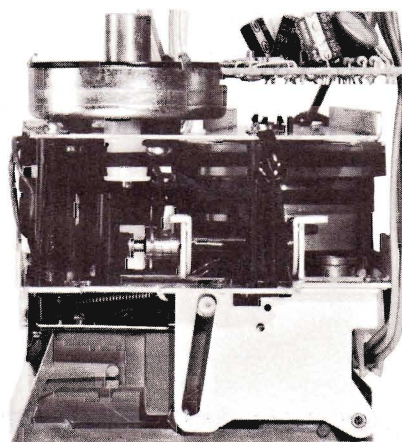


5. Front View with Cassete Holder Removed:

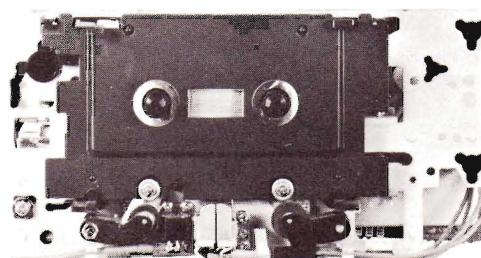


6. Front View with Cassette Holder and Cassette-Ornament Plate Removed:

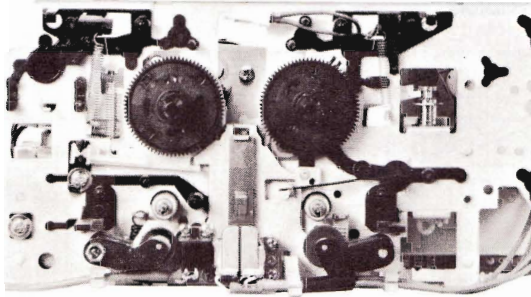


8. Bottom View with Thrust Retainer and DC Motor Removed:

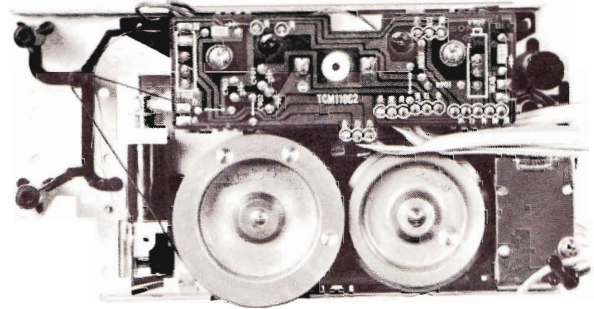

7. Rear View:

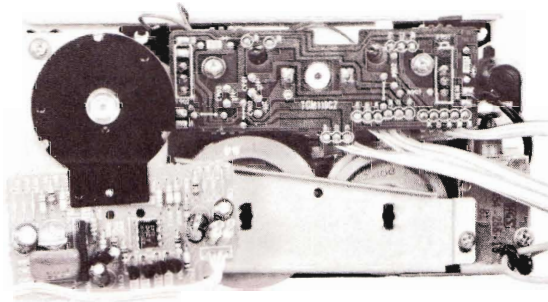

9. Bottom View with Switch Board and Flywheel (T) Removed:

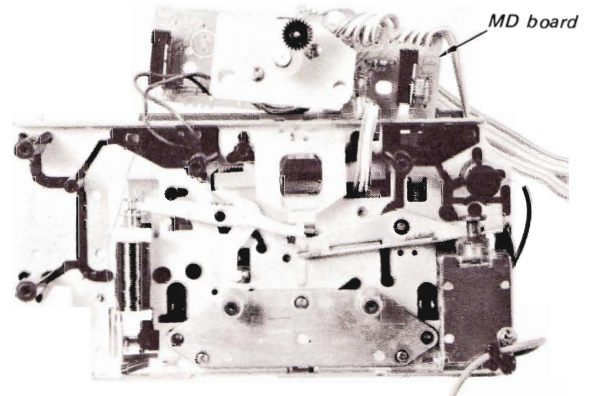


**SELECT TUNE LEVER/BRAKE PLATE ASS'Y/  
SWITCH BOARD**

Select tune lever: ①, ②

Brake plate ass'y: ① ~ ④

Switch board: ① ~ ⑨

**Note:** Be sure to tighten the screws ⑥ ~ ⑨ in numerical order given. Otherwise motor position may be displaced and decrease the performance.

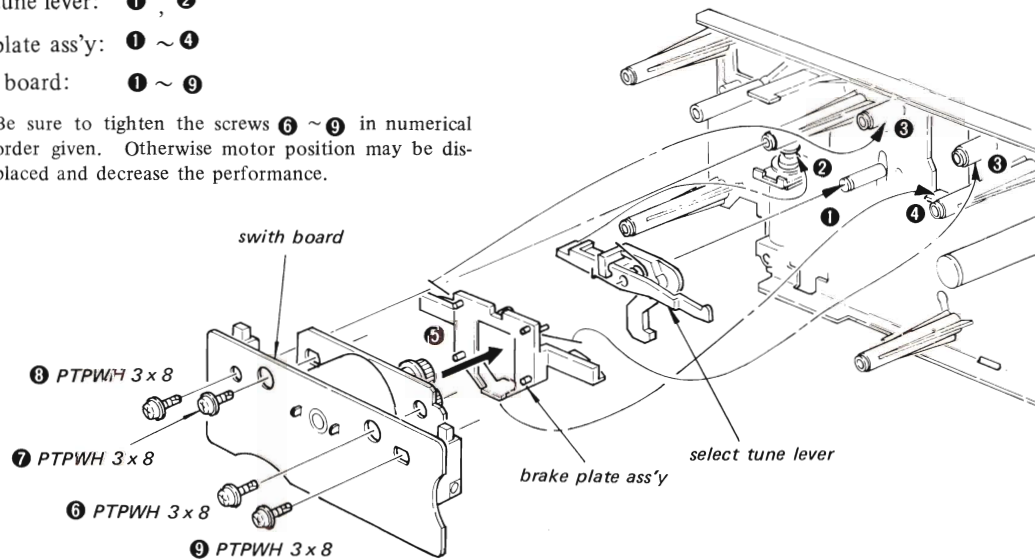



## SECTION 3 ADJUSTMENTS

### 3-1. MECHANICAL ADJUSTMENTS

#### PRECAUTION

1. Clean the following parts with a denatured-alcohol-moistened swab:
 


record/playback head	pinch roller
erase head	rubber belts
capstan	idlers
2. Demagnetize the record/playback head with a head demagnetizer.
3. Do not use a magnetized screwdriver for the adjustments.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

#### FF/REW Torque Measurement


Torque	Torque meter	Meter reading
FF REW	CQ-201B	65 - 85 g•cm

#### Tape Path Adjustment


1. Insert a mirror cassette (CQ-009C).
2. Set for forward mode and confirm that there is no tape curl at the tape guides and recording head.
3. If there is curl, turn the adjust nut and raise and lower the supply side pinch roller (with tape guide attached) to adjust.
4. If step 3 does not get rid of the curl, adjust further by turning adjustment screws A, B, C less than 1/2 turn in the same direction at the same angle.
5. Confirm that the erase head height is as shown in Figure 2.
6. Check tape wrinkling (zigzag).  
Tighten adjust screw D if the tape is wrinkling up. (clockwise)  
Loosen screw D if the tape is wrinkling downward. (counterclockwise)  
Repeat step 5 after adjusting screw D as necessary, within 1/2 turn.
7. Lock the screw with locking compound.

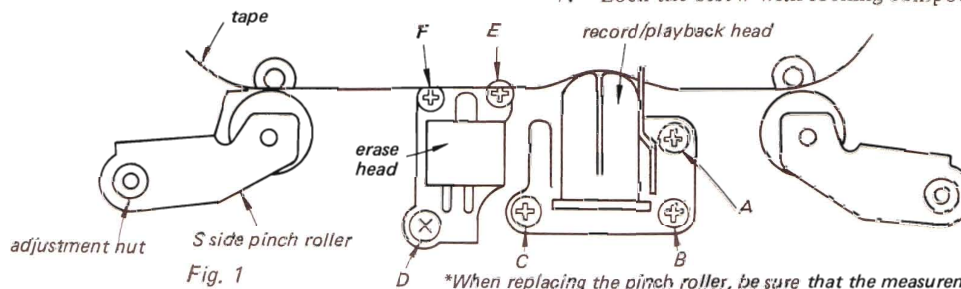


*\*When replacing the pinch roller, be sure that the measurements are as shown below when attaching it. (After installation, perform the above adjustment.)*

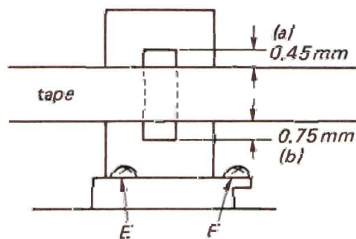

1. Loosen screws E, F so that the ratio between a and b is 3 : 5 and adjust with the adjustment shim.
2. When changing erase head height, check for tape wrinkling.

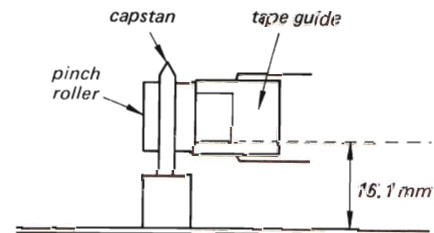

tape path adjustment

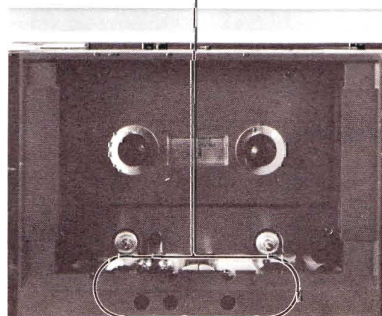

**Head Base Position Adjustment**

Perform the following adjustment when replacing the head base solenoid.

Perform with the old head base solenoid still in place.

1. Press the head base solenoid core with the finger until the head base stops moving.
2. Draw a line as shown in Figure 2. Replace with the new head base solenoid.
3. Loosen the mounting screw, match with the line drawn in step 2, and tighten the screw.
4. Lock the screw after adjustment.

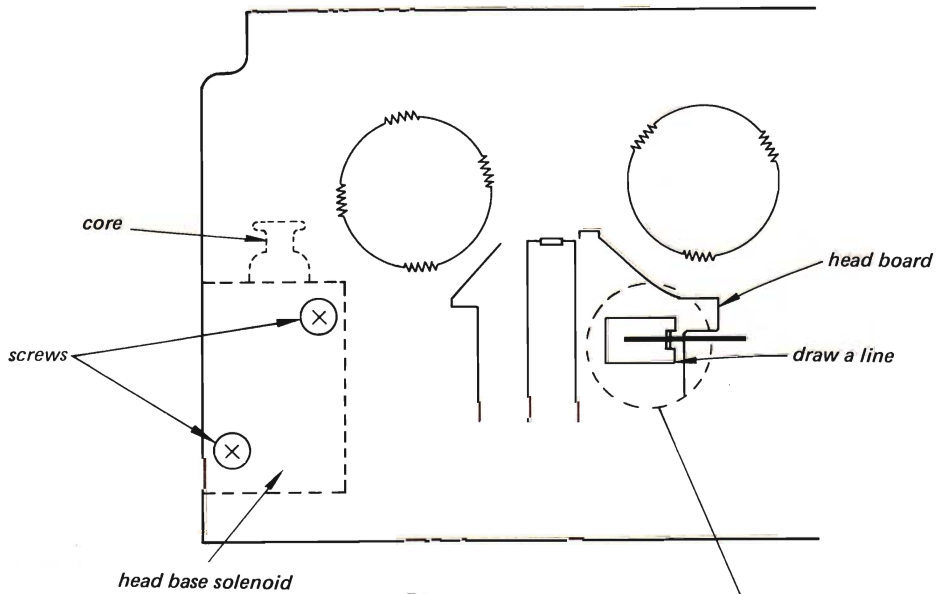


Fig. 1


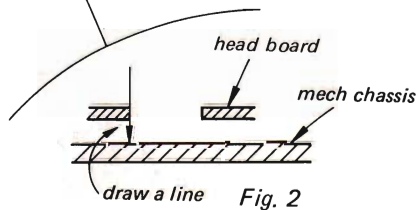


Fig. 2


head base position adjustment



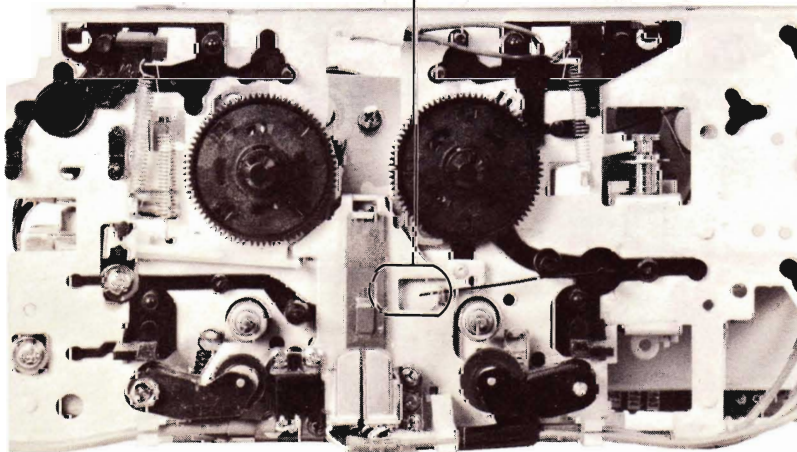

### Pinch Roller Clearance Adjustment

1. Confirm that the clearance between the pinch roller and capstan is more than 0.3 mm in pause mode.
2. If it is less than 0.3 mm, bend (A) in the direction of the arrow.

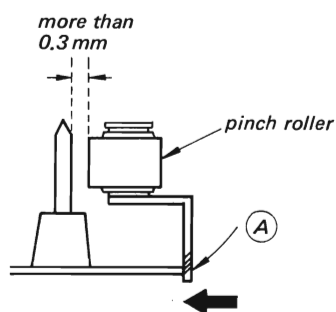


### Pinch Roller Pressure Measurement


1. Confirm that the pinch roller is parallel to the capstan.
2. Set in forward, move the pinch roller away from the capstan, then back toward it, and measure the value at the point where the pinch roller begins to rotate.

T side 270 – 330 g

S side 180 – 280 g

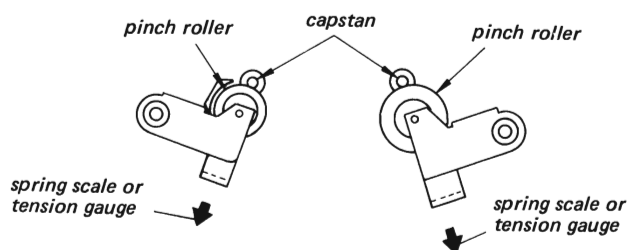

pinch roller clearance adjustment



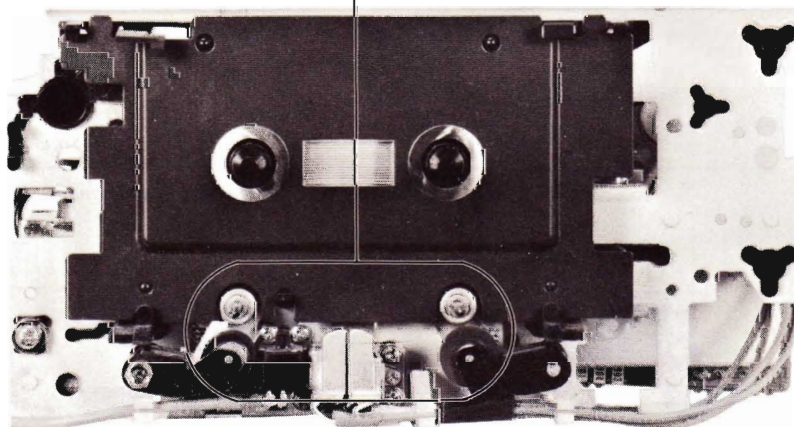


### Forward Torque Adjustment

1. Remove the ornamental plate.
2. Press the cassette detection switch and T side reel table simultaneously by hand and then press the forward button. In this state, hold the T reel table so that it does not rotate.
3. Now adjust RV701 to the position where (A) begins to rotate.  
(It will shut off immediately, so press the forward button to repeat.)
4. Next insert CQ-102C, and measure forward torque and back tension torque. If back tension torque is not within the specifications, change the location where the spring is hooked.

#### Specifications:

forward torque: 30 – 60 g·cm  
back tension torque: 7 – 10.5 g·cm

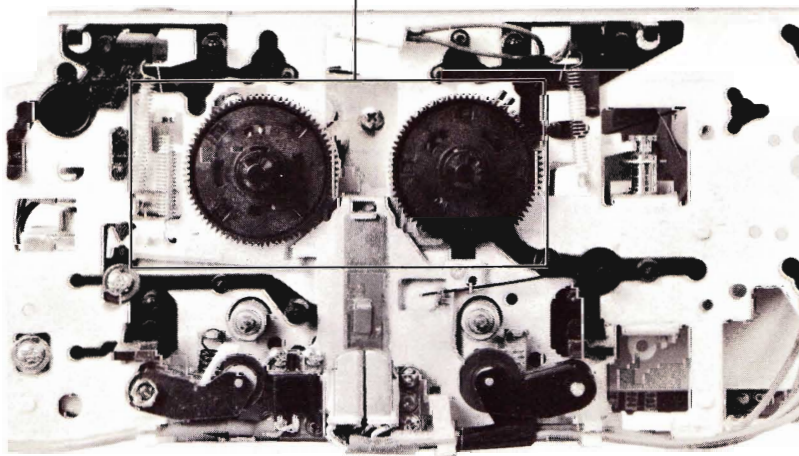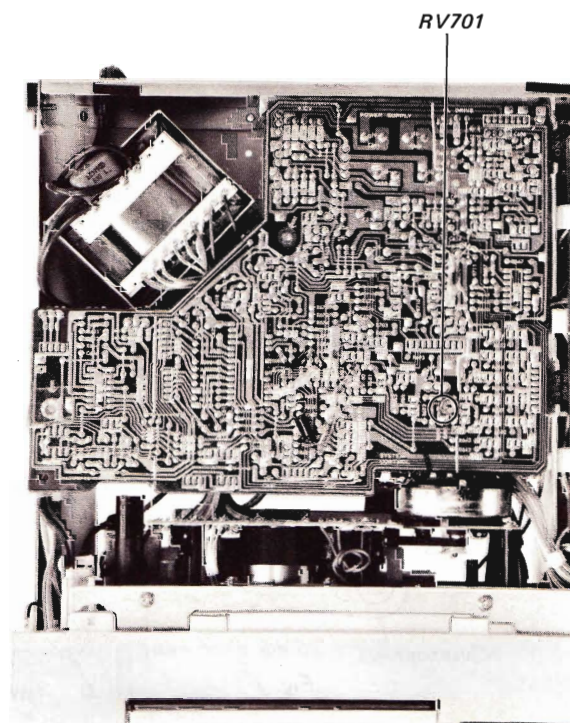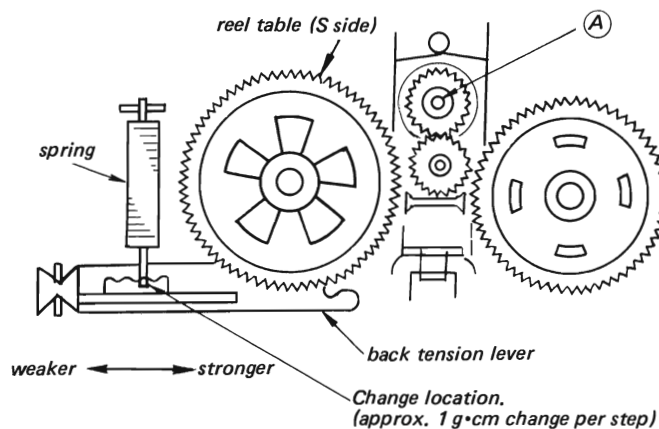

3-2. ELECTRICAL ADJUSTMENTS

**Note:** The adjustment should be performed in the order given in this service manual.  
The adjustments should be performed for both L-CH and R-CH.

- Set the TAPE switches according to the tape as follows.

Tape	TAPE switch
CS-15	TYPE I
CS-25	TYPE II
CS-30	TYPE III
CS-40	TYPE IV

- Switches and controls should be set as follows unless otherwise specified.

DOLBY NR switch: OFF  
 TAPE switch: TYPE I  
 TIMER switch: OFF  
 LINE OUT/HEADPHONES: MAX

- Standard Record:  
Deliver the standard input signal level to the input jack and set the REC LEVEL control to obtain the standard output signal level.

Standard Input Level

	LINE IN
source impedance	10 kΩ
input level	0.25 V (-10 dB)

Standard Output Level

	HEADPHONES	LINE OUT
load impedance	8 Ω	47 kΩ
output level	77 mV (-20 dB)	0.44 V (-5 dB)


Tape Speed adjustment

Procedure:

Mode: playback

test tape  
WS-48A  
(3 kHz, 0 dB)

speed checker  
LFM-30  
or  
digital frequency  
counter

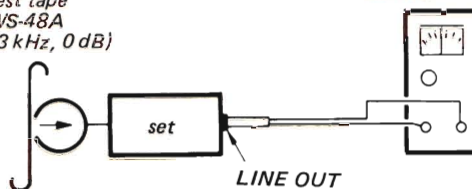


Specification:

Speed checker	Digital frequency counter
-0.17 to +0.17%	2,995 - 3,005 Hz

Frequency difference between the beginning and the end of the tape should be within 0.34% (10 Hz).

Adjustment Location:

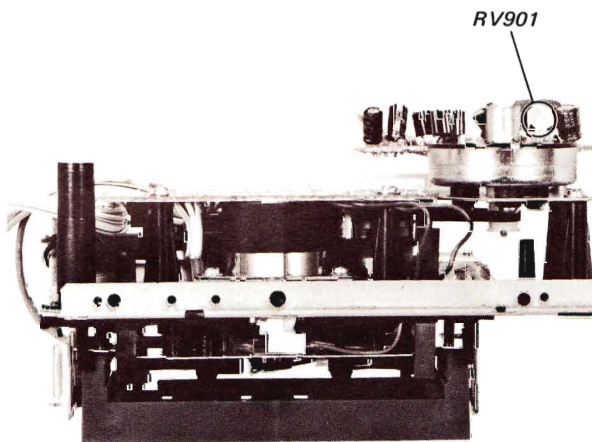




## Playback Head Azimuth Adjustment


### Procedure:

1. Mode: playback

test tape  
P-4-A82S  
(10 kHz, -10 dB)


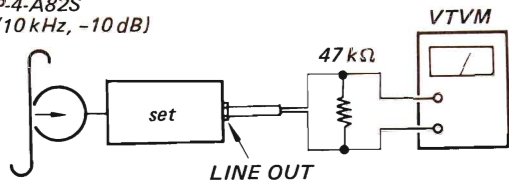


2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 0.5 dB.

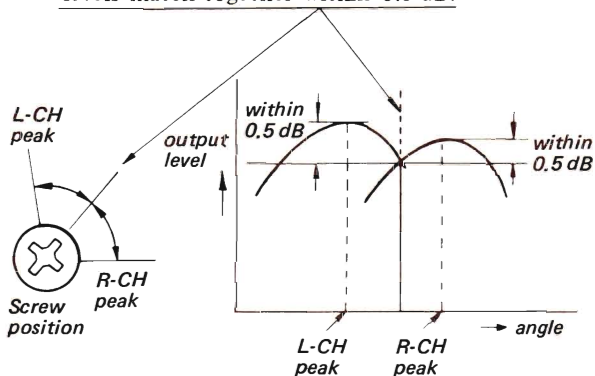


3. Phase Check  
Mode: playback

test tape  
P-4-A82S  
(10 kHz, -10 dB)

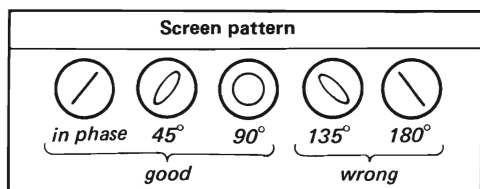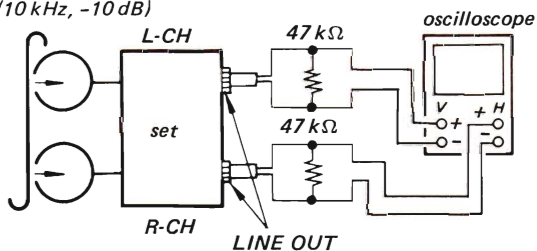

### Adjustment Location:

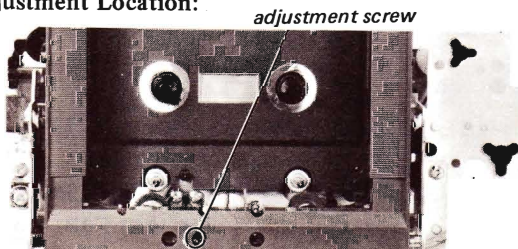


## Playback Level Adjustment

### Procedure:

- Mode: playback

test tape  
P-4-L300  
(333 Hz, 0 dB)

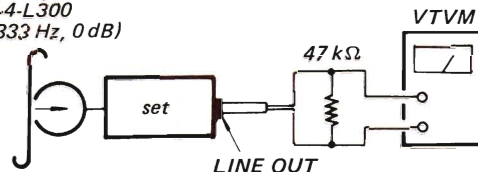

### Specification:


LINE OUT level: 0.52 ~ 0.59 V  
(-3.5 ~ -2.5 dB)

Level difference between channels:  
less than 0.5 dB

Check that the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.

### Adjustment Location:

- playback board -

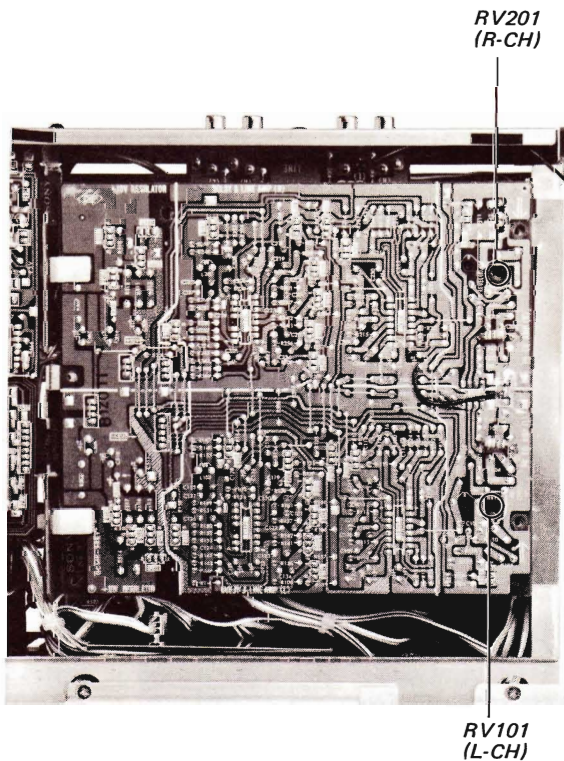

**Record Head Azimuth Adjustment (Record head azimuth adjustment should be made later than playback head azimuth adjustment.)**



**Setting:**

MONITOR: TAPE  
 REC LEVEL control: standard record (See page 23)  
 TAPE: TYPE I

**Procedure:**


record and playback mode

**Adjustment Location:**

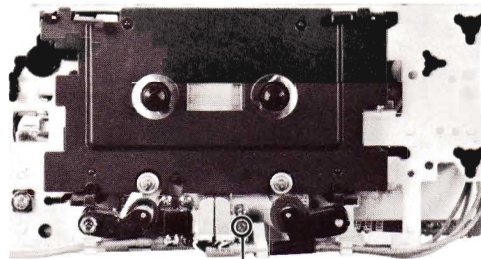
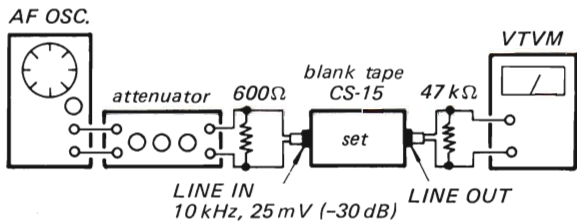


adjustment screw

1. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 0.5 dB.

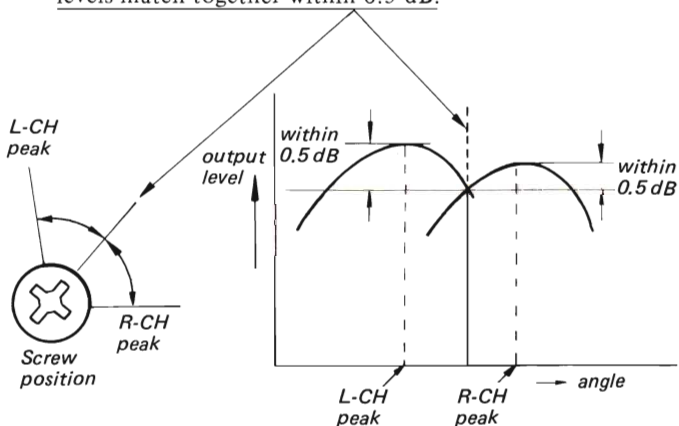

2. Phase Check

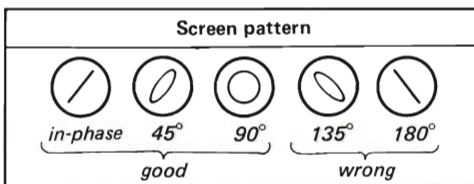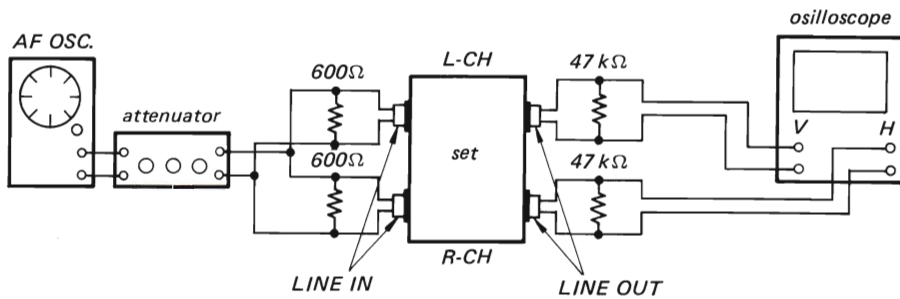

Adjust the screw so that L-CH and R-CH are in phase.

**Specification:**

Phase difference between L-CH and R-CH:  
 less than 90°  
 Level difference between L-CH and R-CH:  
 less than 1 dB




**Record Bias Adjustment**

**Setting:**


REC LEVEL control: standard record  
(See page 23)

**Procedure:**

1. Mode: record

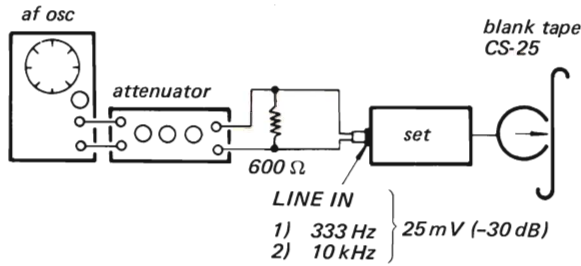


2. Mode: playback

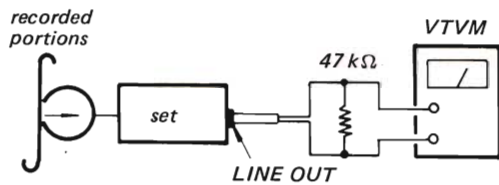

Adjust C513 (L-CH), (R-CH) so that the LINE OUT level of 333Hz signal is 0dB relative to that of 10kHz.

**Adjustment Location:**

– record board –

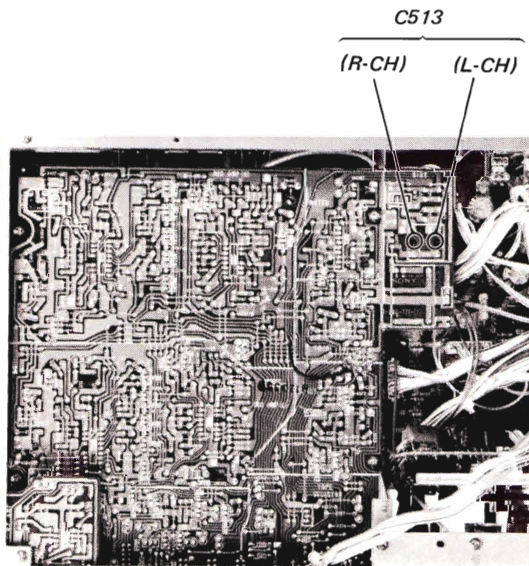


**Record Level Adjustment**

**Setting:**


standard record  
(See page 23)

**Procedure:**

1. Mode: record

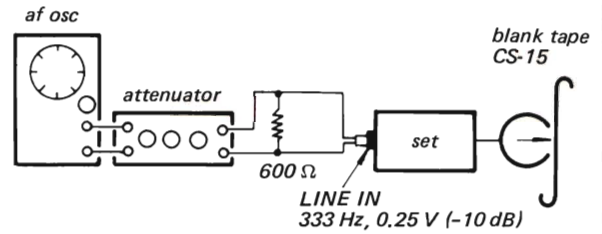

2. Mode: playback

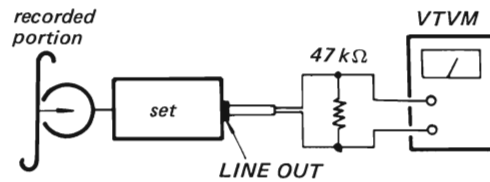


**Specification:**

LINE OUT level: 0.41 ~ 0.46 V  
(-5.5 ~ -4.5 dB)

**Adjustment Location:**

– record board –

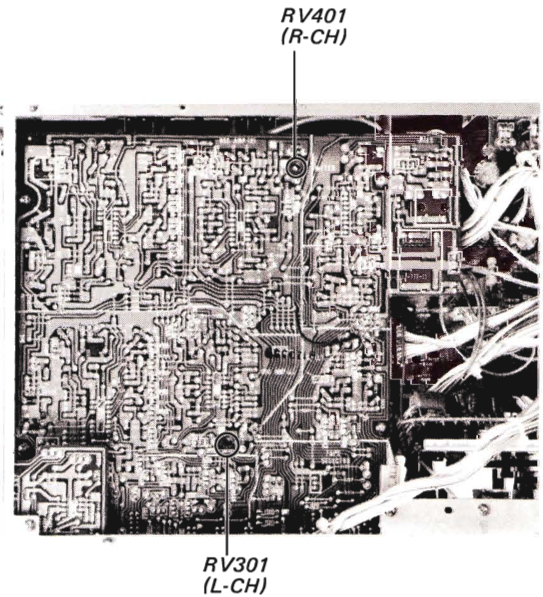


**Bias Trap Adjustment**

**Setting:**

MONITOR: TAPE  
TAPE: TYPE IV

**Procedure:**

1. record and playback mode

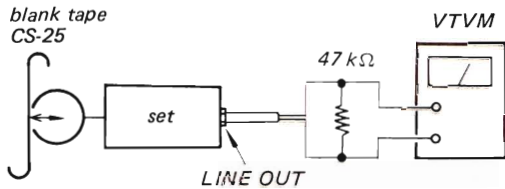


In record and forward mode, adjust L101 (L-CH), L201 (R-CH) so that the LINE OUT level is minimum on the VTVM.

**Specification:**

LINE OUT level: less than 4.4 mV (-45 dB)

**Adjustment Location:**

- playback board -

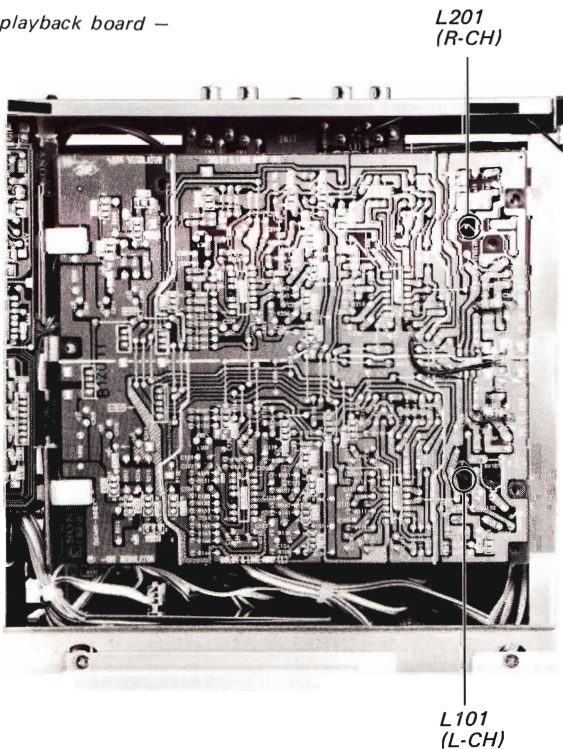


**Level Meter Calibration**

**Setting:**

MONITOR: SOURCE

**Procedure:**

1. Mode: record

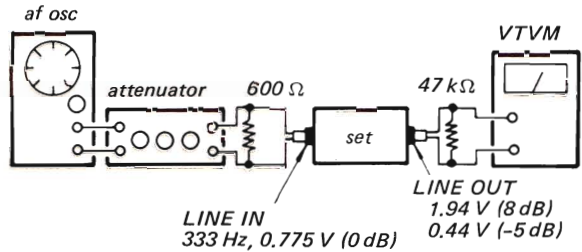


1. Set the REC LEVEL control so that the LINE OUT level is -5 dB.
2. Adjust RV302 (L-CH) and RV402 (R-CH) so that the LEDs including -4 dB (right-most element) light up.
3. Set the REC LEVEL control so that the LINE OUT level is +8 dB. Make sure the LED meter indicates -4 dB (0 VU) in this time.

**Note:** Slide the REC LEVEL control rightward slowly. (Be careful to peakhold indication.)

**Adjustment Location:**

- record board -

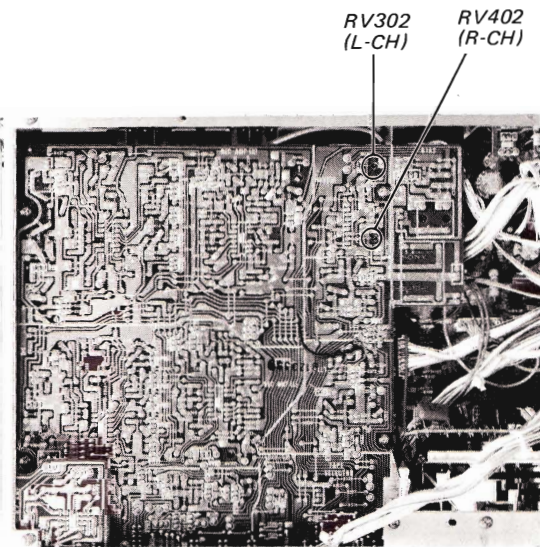

**DOLBY C Level Adjustment**

**Setting:**

MONITOR: TAPE  
TAPE: TYPE I

1. Set DOLBY switch to DOLBY C.  
Adjust for the specification.

**Specification:**

- LINE OUT level: 55 mV ~ 35 mV  
(-23 dB ~ -27 dB)
- Level difference between  
L-CH and R-CH: less than 2 dB


**Adjustment Location:**

- playback board -

If LINE OUT level is higher than the specification, unsolder the portion marked by ① (L-CH), ② (R-CH).







**Procedure:**

record and playback mode

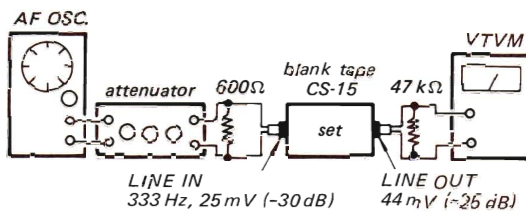

- record board -

If LINE OUT level is lower than the specification, unsolder the portion marked by ③ (L-CH), ④ (R-CH).

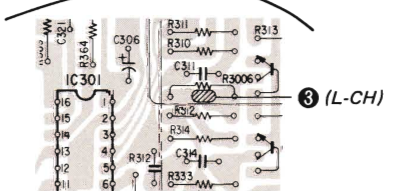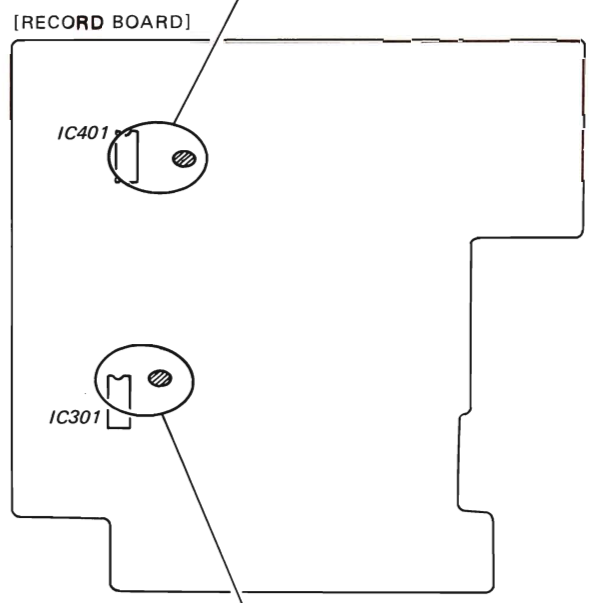
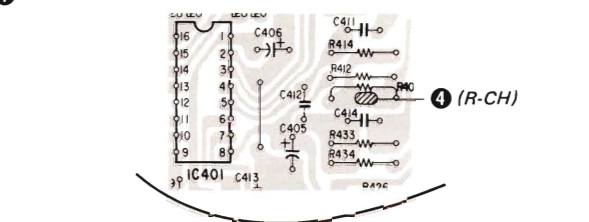
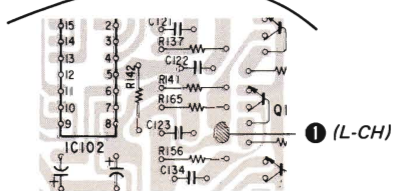
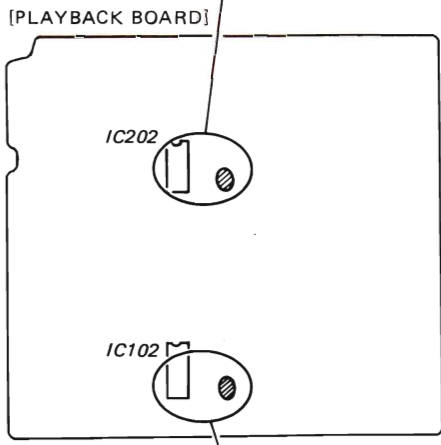
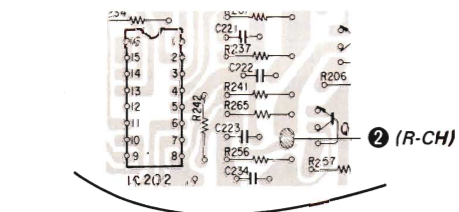

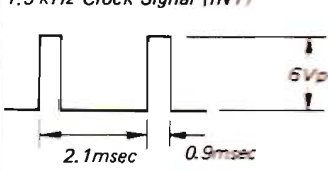
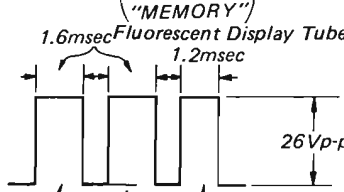
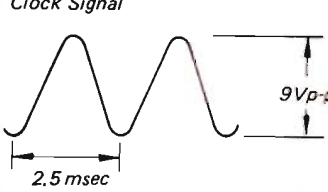




IC601's Terminal Name, Waveform and/or Voltages					
Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages
①	<p>REC Lamp Drive Signal REC mode</p>	⑩	<p>REC MUTE Switch Input</p>	⑲	<p>Line-Muting Signal FWD mode or REC mode (only record switch ON DC 5.1 V)</p>
②	<p>FWD Lamp Drive Signal FWD mode</p>	⑪	<p>Auto Shut-Off Signal</p>	⑳	(not used in this set)
③	<p>PAUSE Lamp Drive Signal PAUSE mode</p>	⑫	Tape Counter Input DC 5.2V	㉓	<p>Head-Solenoid Drive Signal FWD mode</p>
④	<p>STOP Input</p>	⑬	<p>Clock Signal</p>	㉔	<p>AMS Solenoid Drive Signal</p>
⑤	<p>REW Switch Input</p>	⑭	GND 0V	㉕	<p>Reel-Motor Drive Signal in Forward Mode FWD mode</p>
		⑮	(not used in this set)		
		⑯	(not used in this set)		
⑥	<p>FF Switch Input</p>	⑰	<p>Timer Signal (TIMER)</p>	㉖	<p>Reel-Motor Drive Signal in Fast-Forward Mode FF mode</p>
⑦	<p>FWD Switch Input</p>	⑱	<p>Reset Signal (RESET) DC 4.4V</p>	㉗	<p>Reel-Motor Drive Signal in Rewind Mode REW mode</p>
⑧	<p>REC Switch Input</p>	⑲	<p>Record-Muting Signal</p>		
⑨	<p>PAUSE Switch Input</p>	⑳	(not used in this set)	㉘	B + Supply Voltage DC 6V

Note: Voltages are measured with an oscilloscope (10 MΩ probe). So readings are different from the mounting diagram and schematic diagram measured with a VOM.





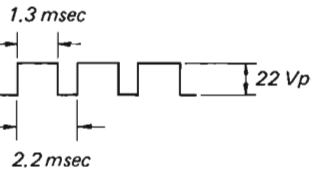
IC802's Terminal Name, Waveform and/or Voltages

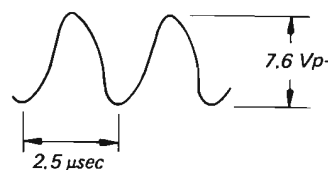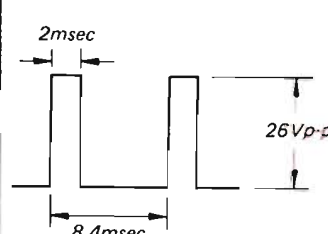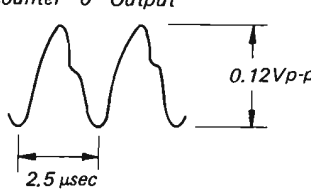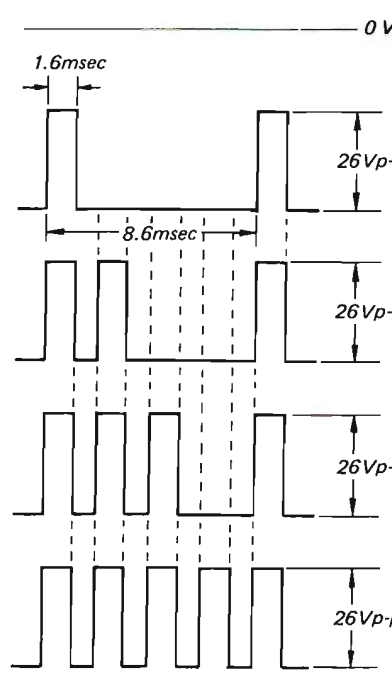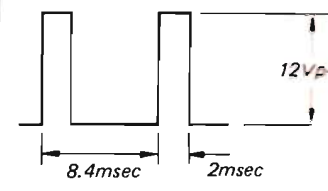Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages
①	<p>Clock Signal</p> 	③, ④	<p>FF Mode</p> <p>Capstan Motor Drive Signal                      STOP mode: DC 24.5V                      FWD mode: DC 13.5V                      FF Mode: DC 0V</p>	①⑥, ①⑦, ①⑧, ①⑨	<p>Drive Signal for Grids G1 through G4 of Fluorescent Display Tube</p> 
②	<p>Reel Motor Drive Signal in Rewind Mode                      STOP mode: DC 24.5V                      REW mode: DC 13.5V</p>	⑤	<p>Counter "0" Output</p> 	②⑩	<p>B + Supply Voltage                      DC 26V</p>
⑥	<p>Drive Signal for "a" Segment of Fluorescent Display Tube.</p> <p>1) In case of all "a" segments are not lit, i.e., all of the four digits are "1" or "4".</p> <p>2) In case of only one out of four "a" segments lit, i.e., one of the four digits is "0", "2", "3", "5", "6", "7", "8", or "9" and all others are "1" or "4".</p> <p>3) In case of only two out of four "a" segments lit as in the case of 2) above.</p> <p>4) In case of only three out of four "a" segments lit as in the case of 2) above.</p> <p>5) In case of all of the four "a" segments lit likewise.</p>			②①	<p>Drive Signal for "MEMORY" of Fluorescent Display Tube</p> 
⑦	<p>Drive Signal for "b" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>			②②	<p>B + Supply Voltage                      DC 26V</p>
⑧	<p>Drive Signal for "c" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>			②③ (φ2)	<p>φ1 or φ2 - Signal Input from Photo Transistors fast forward and rewind modes:</p> 
⑨	<p>Drive Signal for "d" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>			②④ (φ1)	<p>Pulse width varies according to tape take-up. (Stop mode: 10.5 V DC or 0 V according to the position of photo transistors)</p>
⑩	<p>Drive Signal for "e" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>			②⑤	<p>1.5 kHz Clock Signal (INT)</p> 
⑪	<p>Drive Signal for "f" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>	⑬	<p>Drive Signal ("DP" (dot) "-" (minus)) of "MEMORY" of Fluorescent Display Tube</p> 	②⑥	<p>RESET Signal                      13.5V</p>
⑫	<p>Drive Signal for "g" Segments of Fluorescent Display Tube same as pin ⑥ for Segment "a".</p>	⑭	<p>B + Supply voltage                      26V</p>	②⑦	<p>GND (Ground)                      12.5V</p>
		⑮	<p>TEST Terminal                      26V</p>	②⑧	<p>Clock Signal</p> 



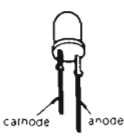


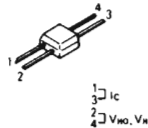









Pin No.
①
②
③
④
⑤
⑥
⑦
⑧
⑨
⑩
⑪
⑫
⑬
⑭
⑮

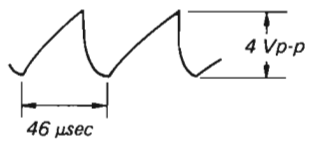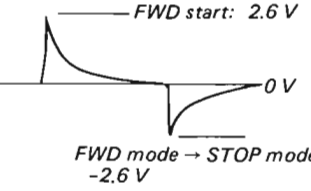

IC801's Terminal Name, Waveform and/or Voltages

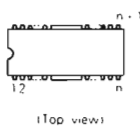Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages	Pin No.	Waveform and/or Voltages
①	"B2" (dot) Drive signal R and L channel signal: 20.5 V R or L channel signal: 10.5 V	⑬	(not used in this set)	⑳	R-CH Grid Control Output Signal Same as ㉕
②	"B3" (dot) Drive Signal Same as ①	⑭	GND 0 V		
③	"B4" (dot) Drive Signal Same as ①	⑮	(not used in this set)	㉑	B+ Supply Voltage: 6 V
④	"B5" (dot) Drive Signal Same as ①	⑯	Clock Signal 	㉒	B+ Supply Voltage: 22 V
⑤	"B6" (dot) Drive Signal Same as ①				
⑥	"B7" (dot) Drive Signal Same as ①	⑰	Mute Signal 		
⑦	"B8" (dot) Drive Signal Same as ①				
⑧	"B9" (dot) Drive Signal Same as ①	⑱	(not used in this set)		
⑨	"B10" (dot) Drive Signal Same as ①	㉒	MEMORY RESET Input Signal 		
⑩	"B11" (dot) Drive Signal Same as ①				
⑪	"B12" (dot) Drive Signal Same as ①	㉓	R-CH Signal Input 		
⑫	"B13" (dot) Drive Signal Same as ①				
⑬	"B14" (dot) Drive Signal Same as ①	㉔	L-CH Signal Input Same as ㉓		
⑭	"B15" (dot) Drive Signal Same as ①	㉕	L-CH Grid Control Output Signal 		
⑮	"B16" (dot) Drive Signal Same as ①				

**Semiconductor Lead Layouts**



<p><b>CX-174</b>  <b>NJM2043D-D</b>  <b>μPC4557C</b>  <b>MSM58361RS</b>  <b>μPC339C</b>  <b>MB84069B</b>  <b>MSL9359RS</b>  <b>μPD554C089</b>  <b>NJM4558D-FA</b>  <b>NJM2903D</b></p>  <p>(Top view)</p>	<p><b>2SA1027R</b>  <b>2SA1026-7</b></p> 	<p><b>SLR-34UR5</b>  <b>SLR-34PG5</b>  <b>SLR-34DU5</b></p> 
<p><b>BA6138</b></p> 	<p><b>2SD880</b></p> 	<p><b>THS102</b></p> 
<p><b>CX-069A</b></p> 	<p><b>2SD774</b>  <b>2SB734</b></p> 	<p><b>PH102</b></p> 
<p><b>2SC1364</b>  <b>2SC1364-8</b>  <b>2SC1345</b>  <b>2SC2001</b>  <b>2SD1152</b>  <b>2SA844</b>  <b>2SC945-Q</b>  <b>2SC1815</b>  <b>2SB864</b></p> 	<p><b>2SB808</b></p> 	
<p><b>2SK30A-O</b></p> 	<p><b>2SD1020</b></p> <p>letter side</p> 	
<p><b>2SB731</b>  <b>2SD809</b></p> <p>letter side</p> 	<p><b>HZ6B1L</b>  <b>1S1555</b>  <b>10E-2</b>  <b>EQA01-08R1</b>  <b>HZ22-3L</b>  <b>HZ27-1L</b>  <b>RD7.5J-N1</b>  <b>HZ9A2L</b>  <b>HZ12C3L</b></p> <p>cathode</p>  <p>anode</p>	

4-1. MOUNTING DIAGRAM

— Amp Section —

Note: See page 32 for semiconductor lead layouts.

	501	504	207		
Q	502	503		210	IC202
IC	505	506	507	110	107
		508			IC102
D	501				
	502				

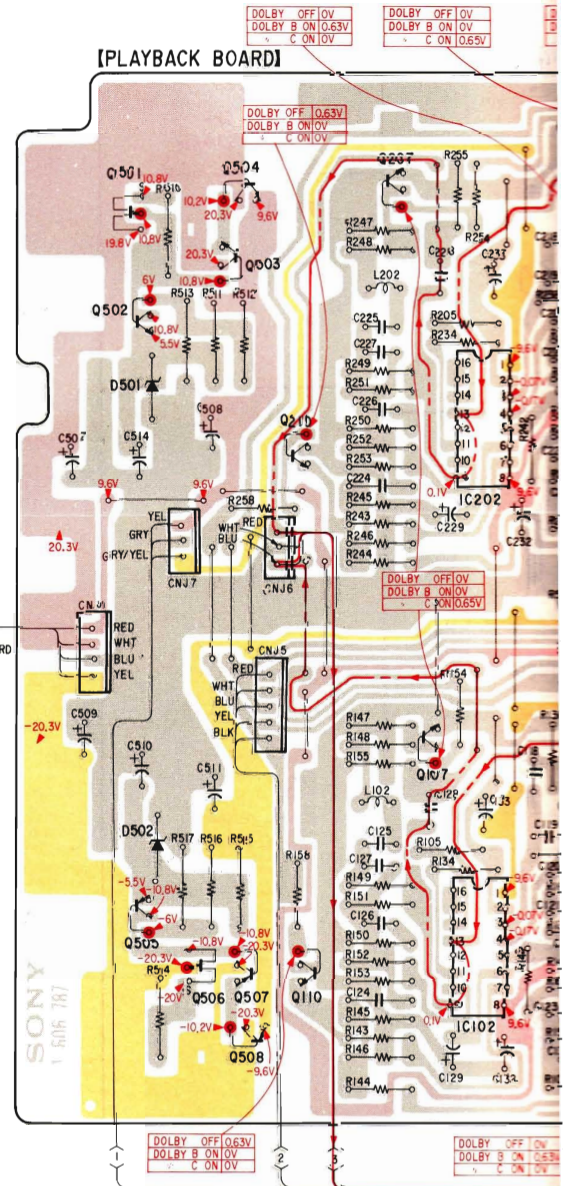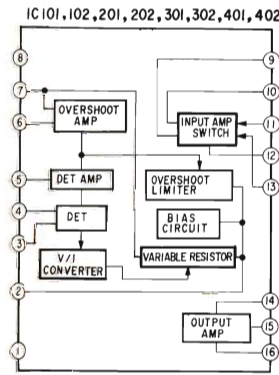


TO SYSTEM CONTROL BOARD



# SECTION 4 DIAGRAMS


D	E	F	G	I	J	K	L
Q	501 502	504 503	210	207 107	204 104	203 205 208 209 105 103 102	201 IC201
IC	505	506 507 508	110	IC102		109 106	IC101 IC501 101
D	501 502						

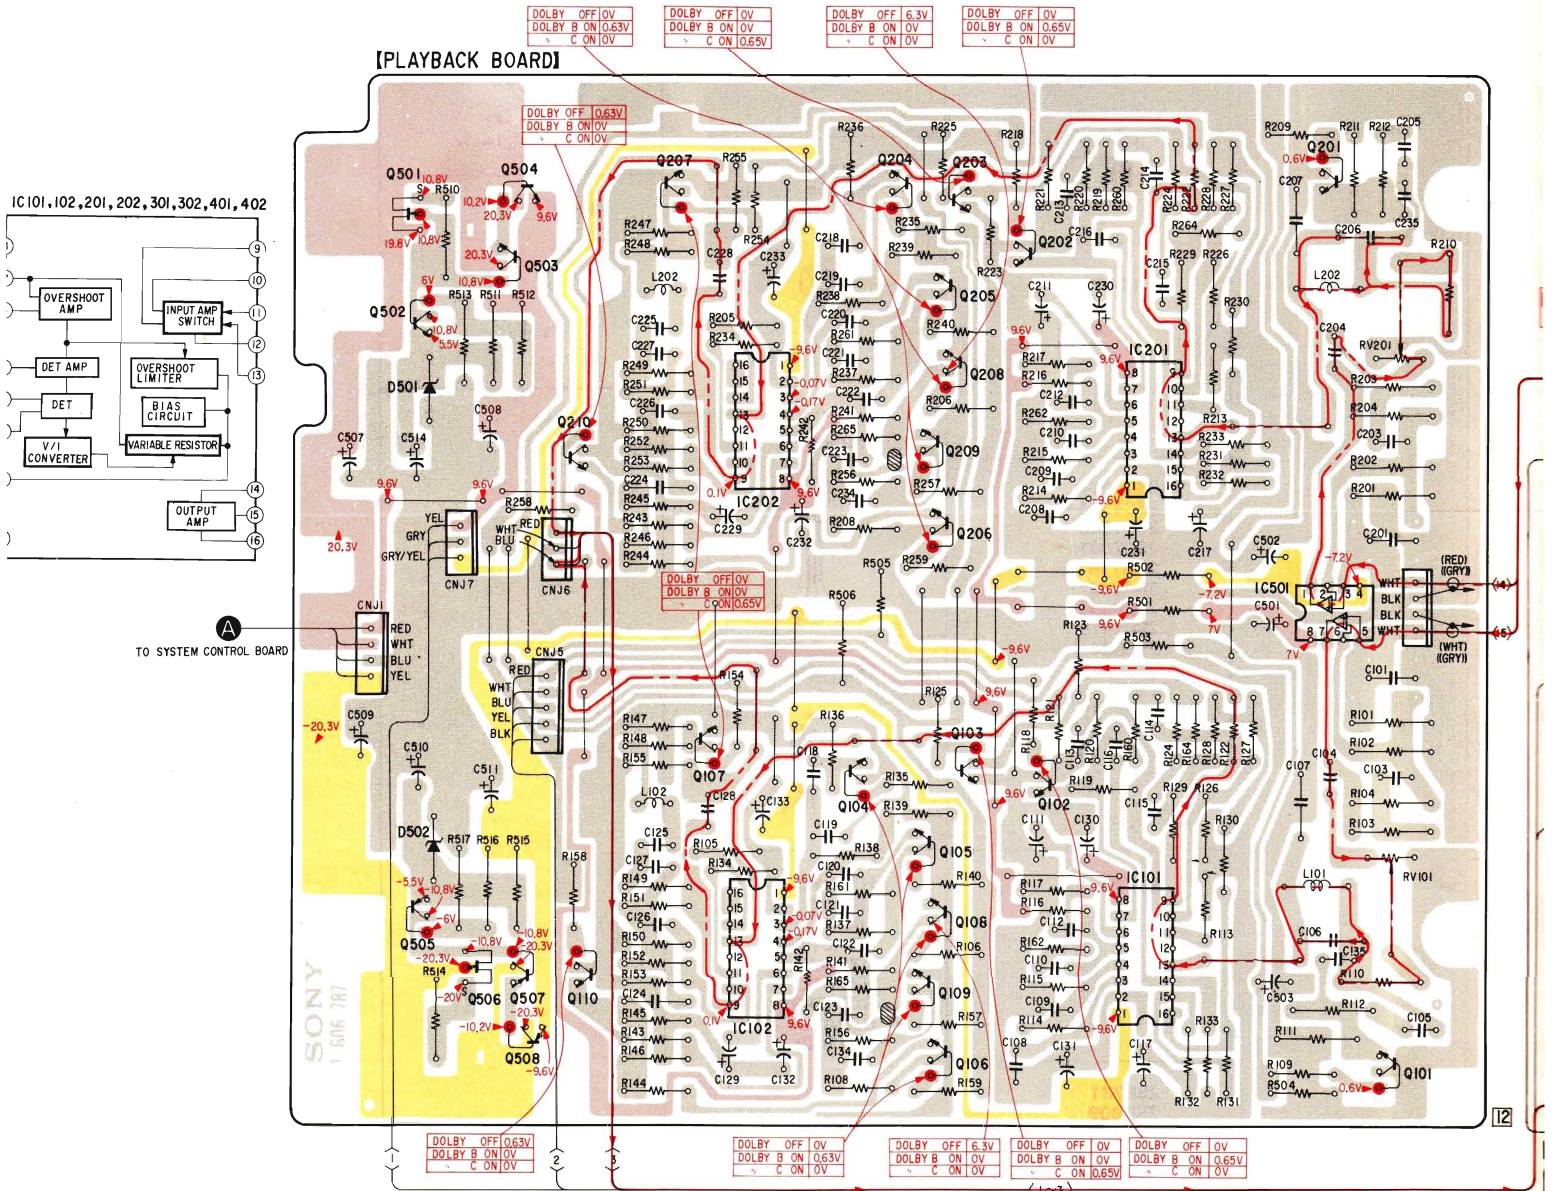



L M N O P Q R S T

			406						402	410	409				
								IC401				IC402			411
			401	404					302						
			306					IC301	407						
			301	304					310			IC302			
101									308						
									307						
									305	312	514	515	311	412	413

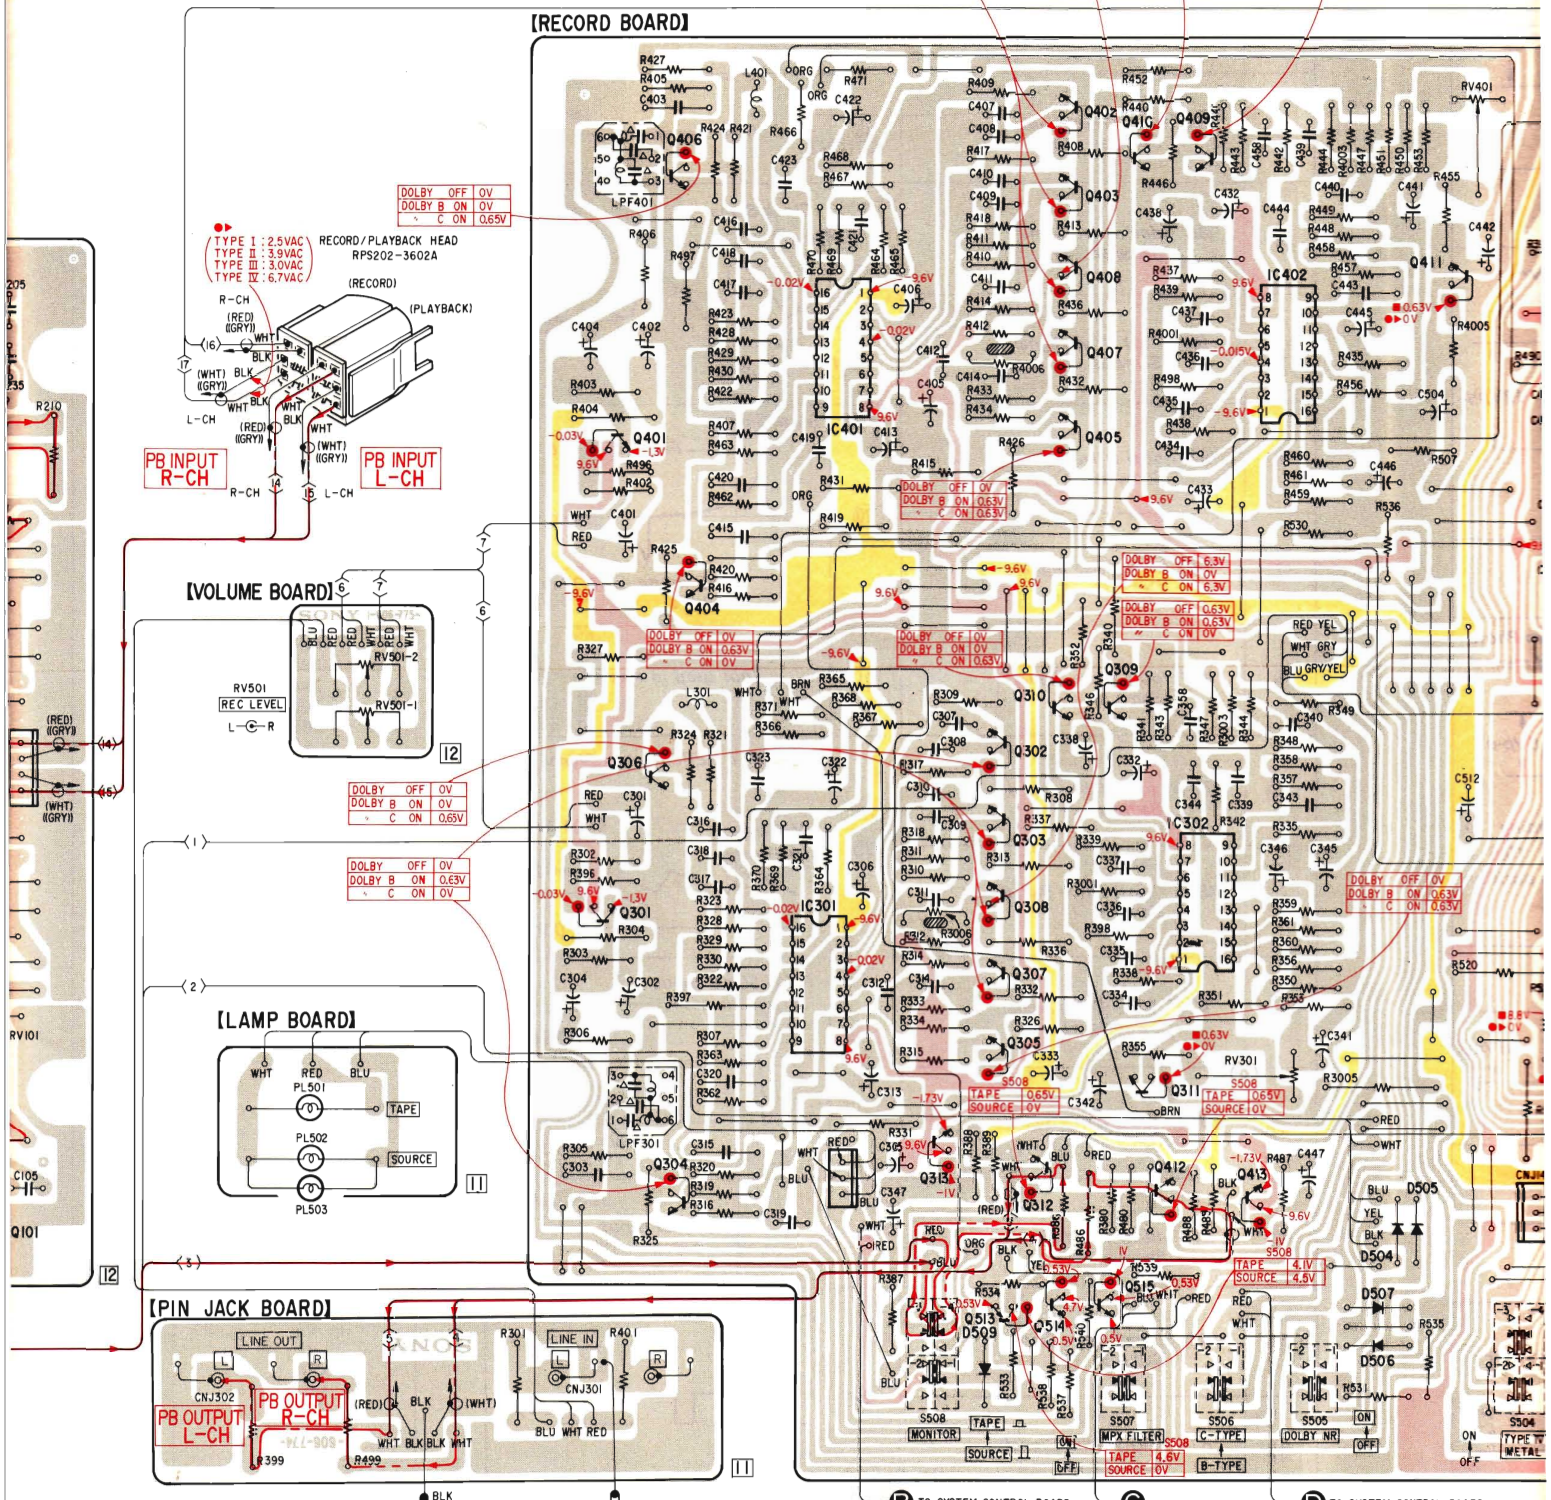


TO SYSTEM CONTROL BOARD (B) TO SYSTEM CONTROL BOARD (C) TO SYSTEM CONTROL BOARD (D)



T U V W X Y Z A1 B1

411 IC502 414 410 IC801  
 511 512 510 IC503 IC802 805 803

504 505 506 508 503 803 802 801

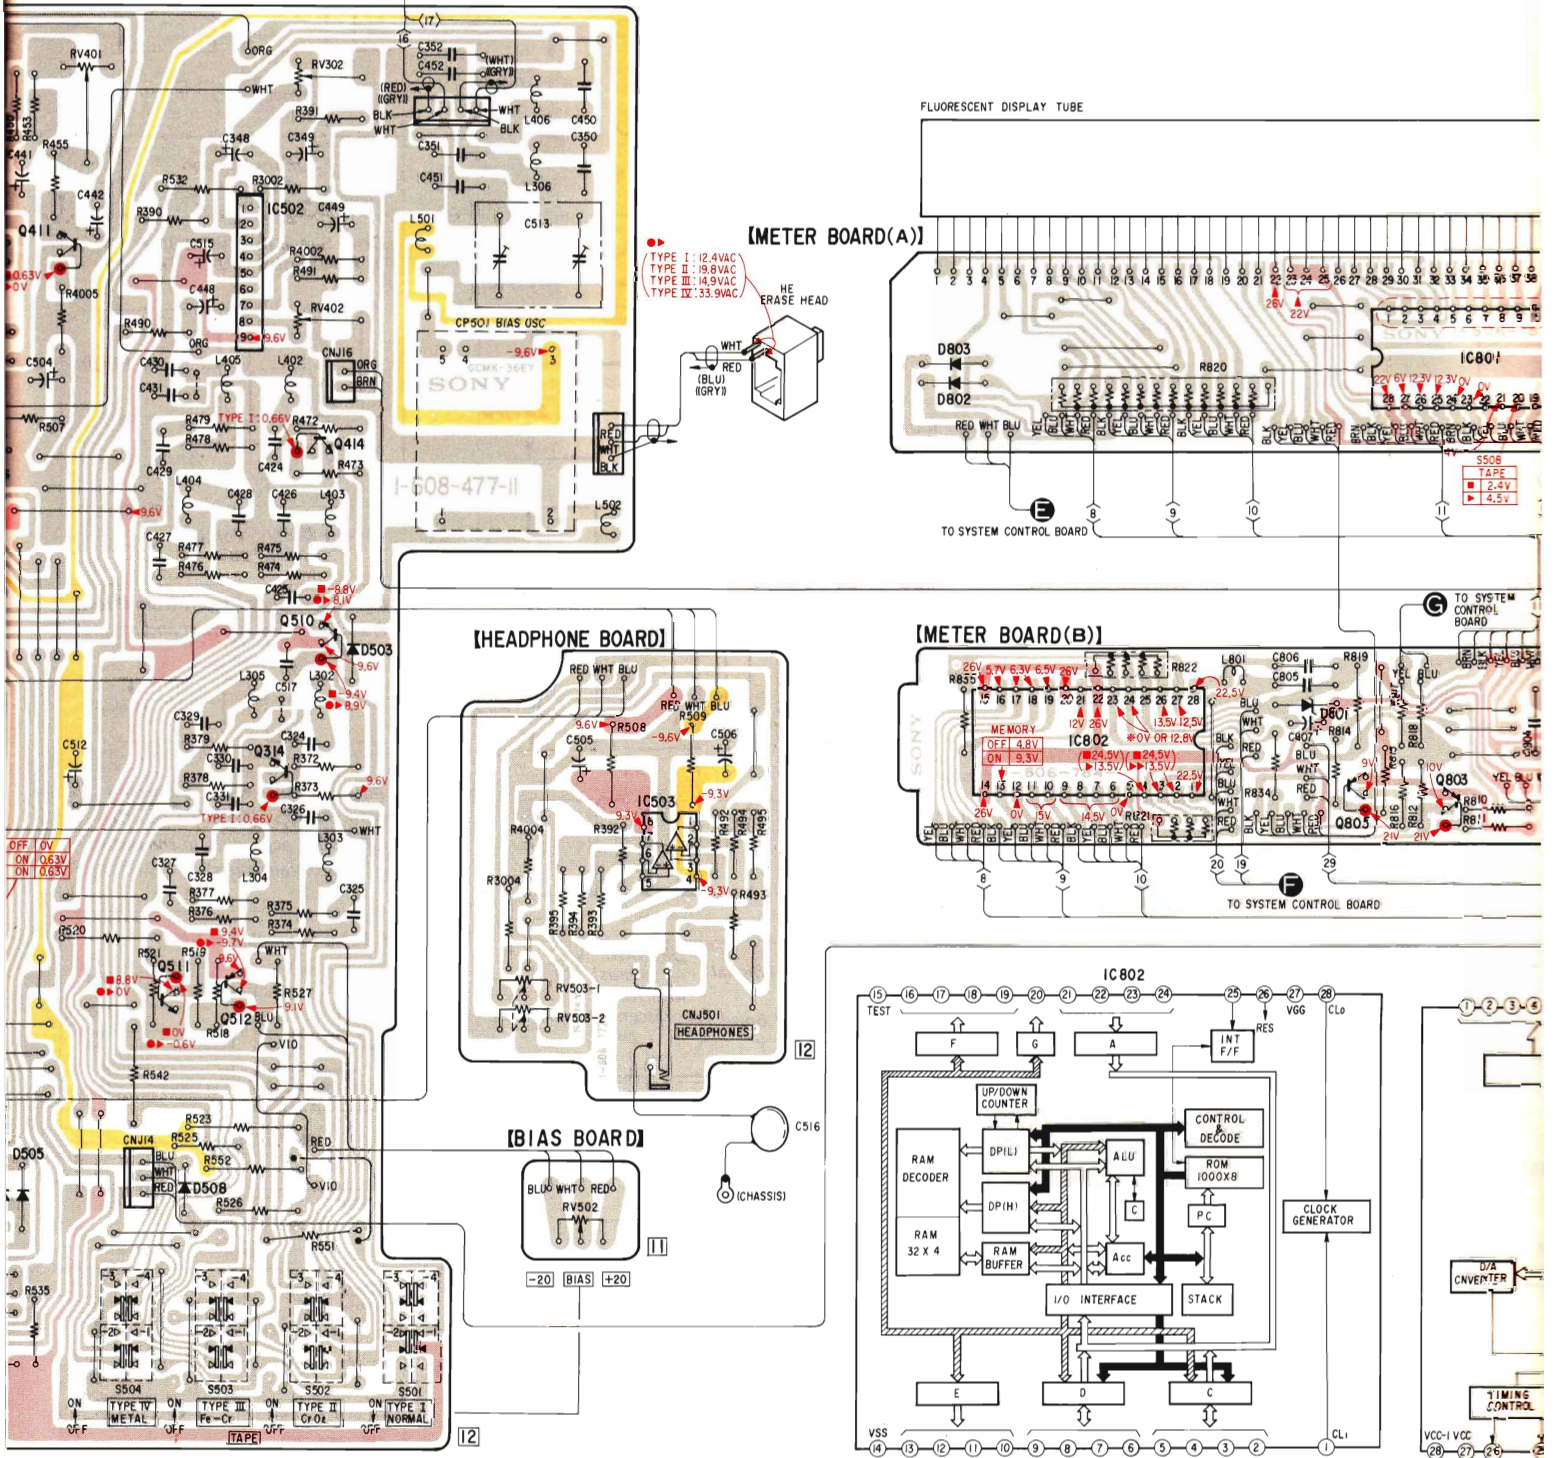


CONTROL BOARD






4-2. SCHEMATIC DIAGRAM  
- Amp Section -

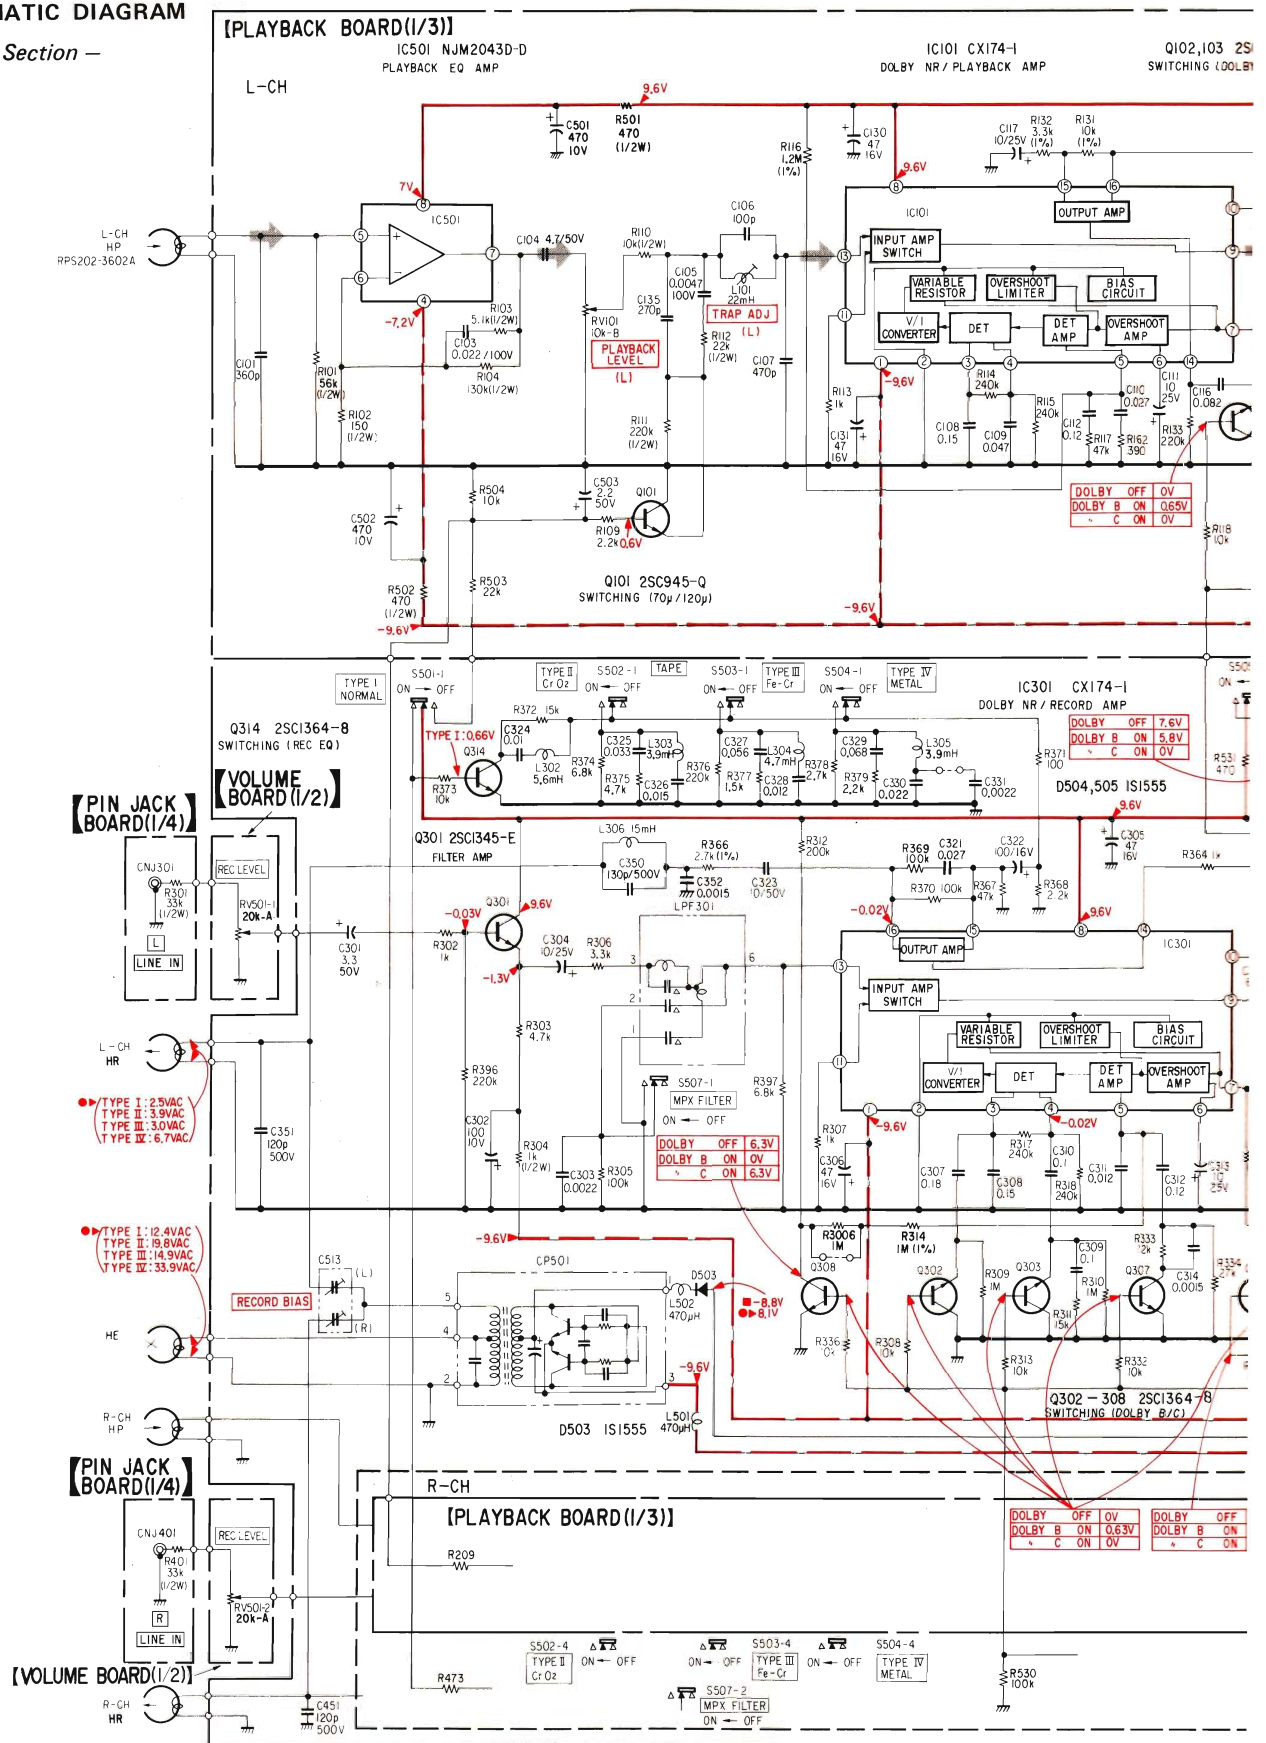





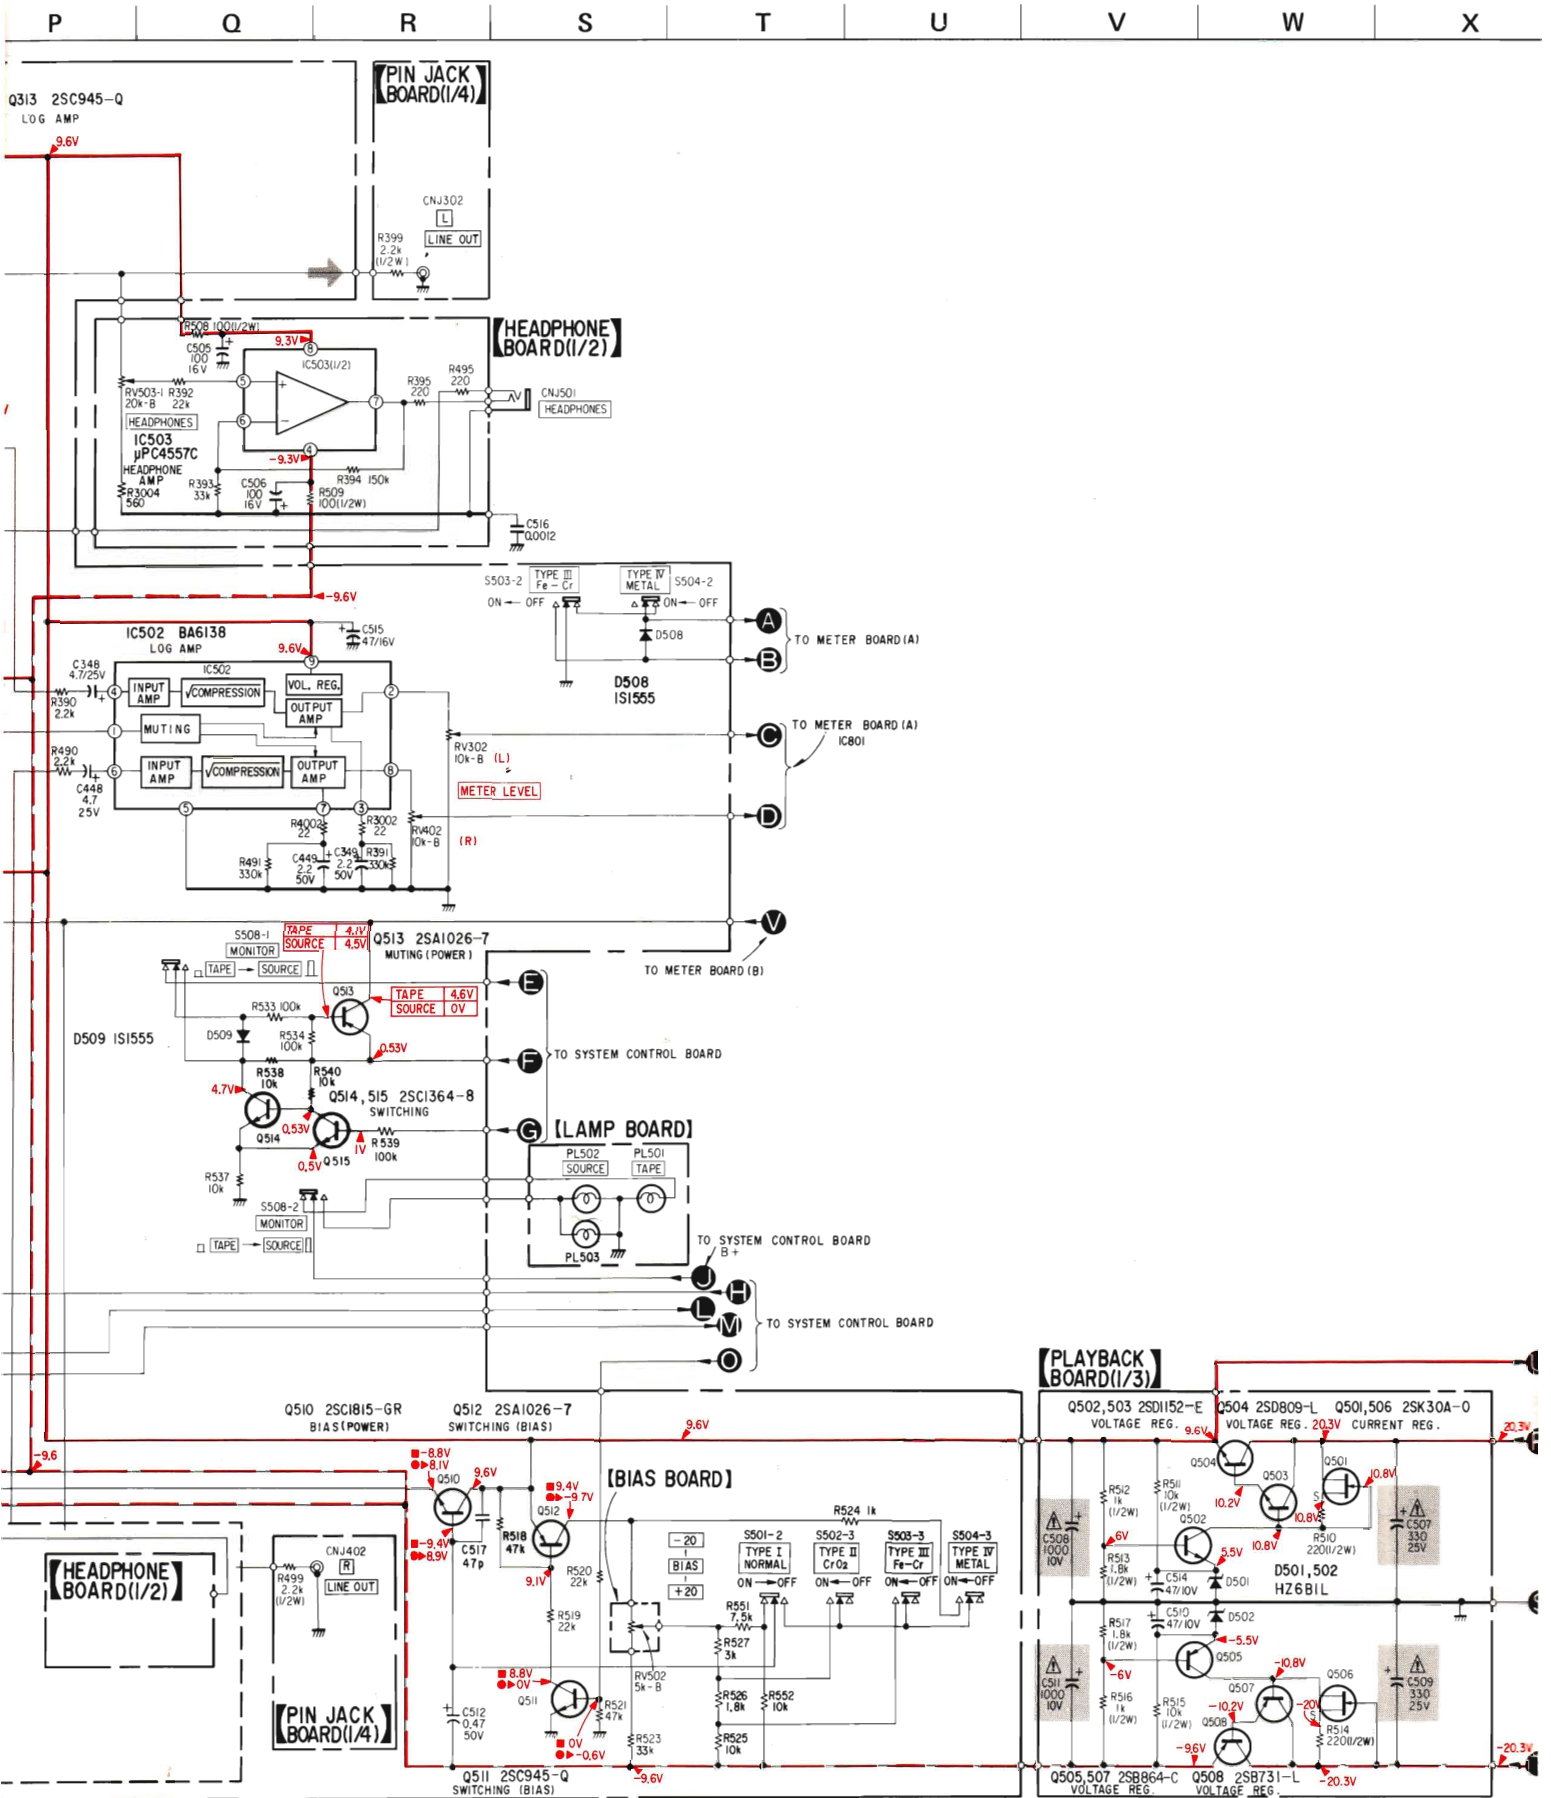







A B C D E F G H

4-3. MOUNTING DIAGRAM


— System Control Section —

Note: See page 32 for semiconductor lead layouts.

Q		IC902	
IC	IC901	903 904 901 902	
D	901		702

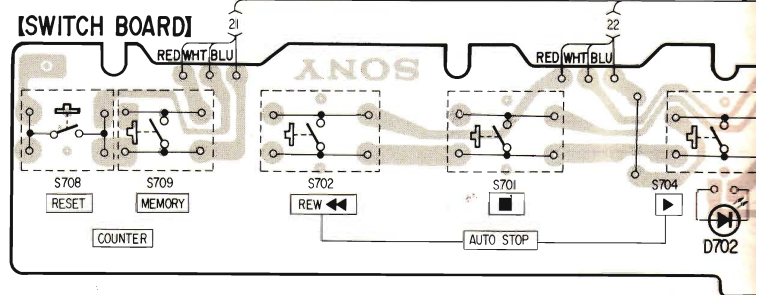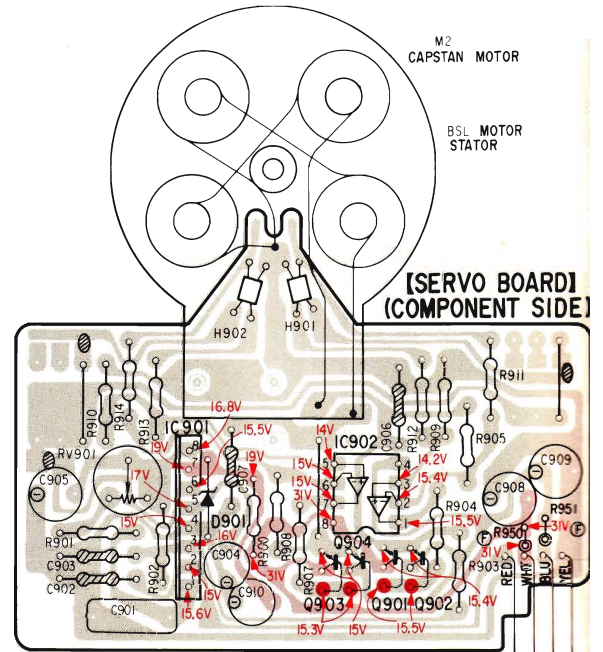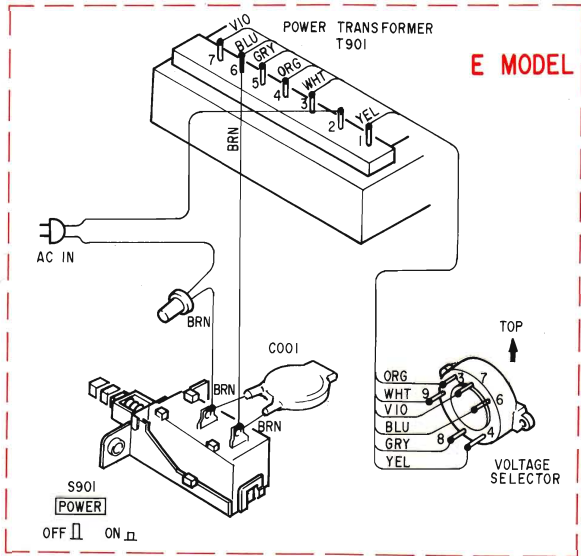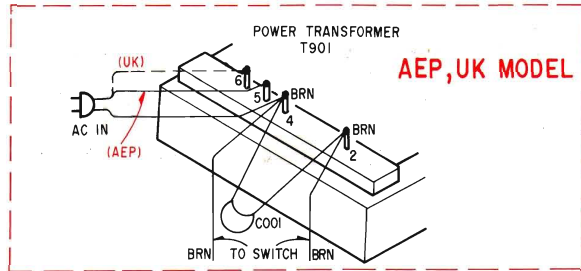




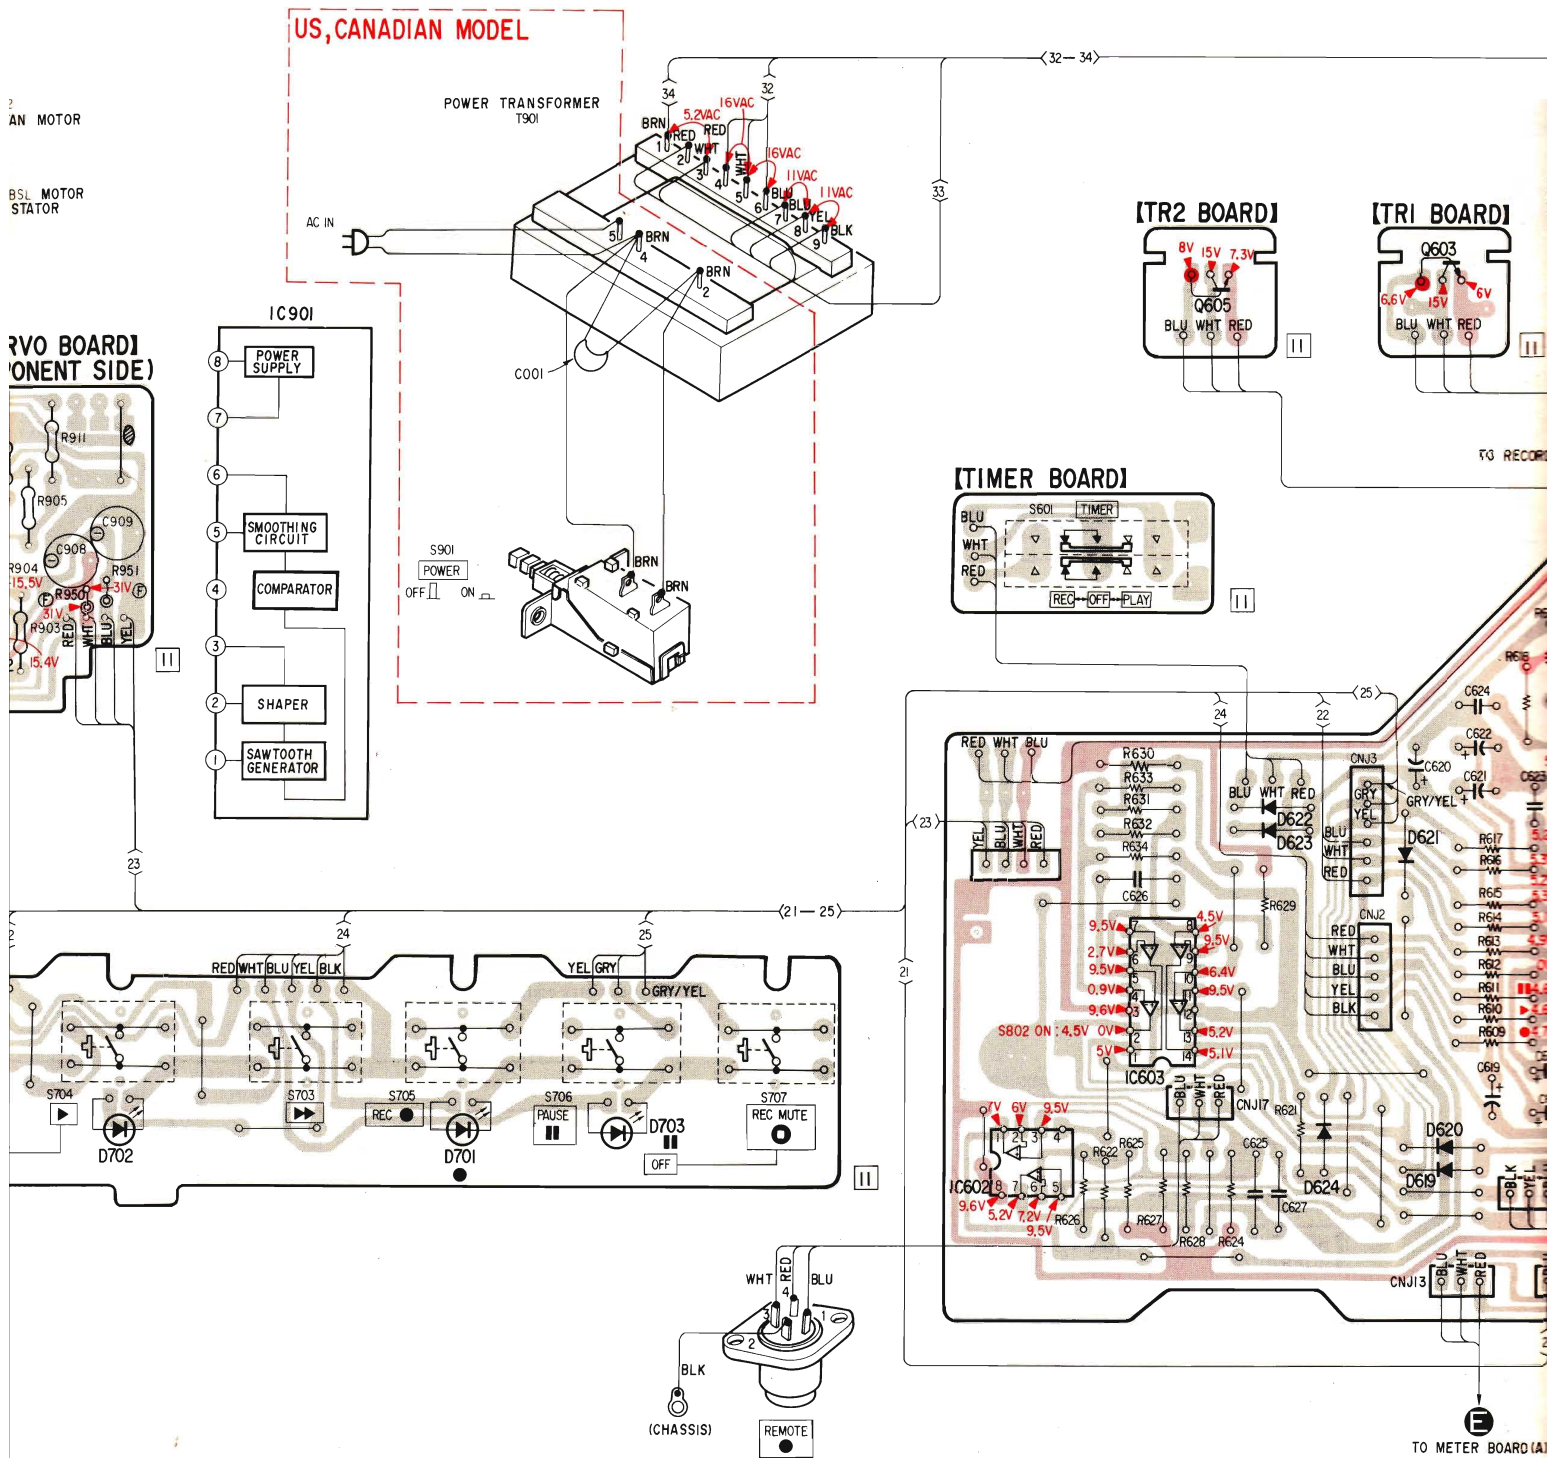




P	Q	R	S	T	U	V	W	X
603	617 641 IC601	627	626 633 640 632	604 639 629	628	602 601 643 610 608	609 621 622 IC604 607 611 613 612	635
	642	625	631 630	615	607 617	608 610 609	638	
621	620 619	625	627 630 629 628	631 636	634	640 632 626 639	637	

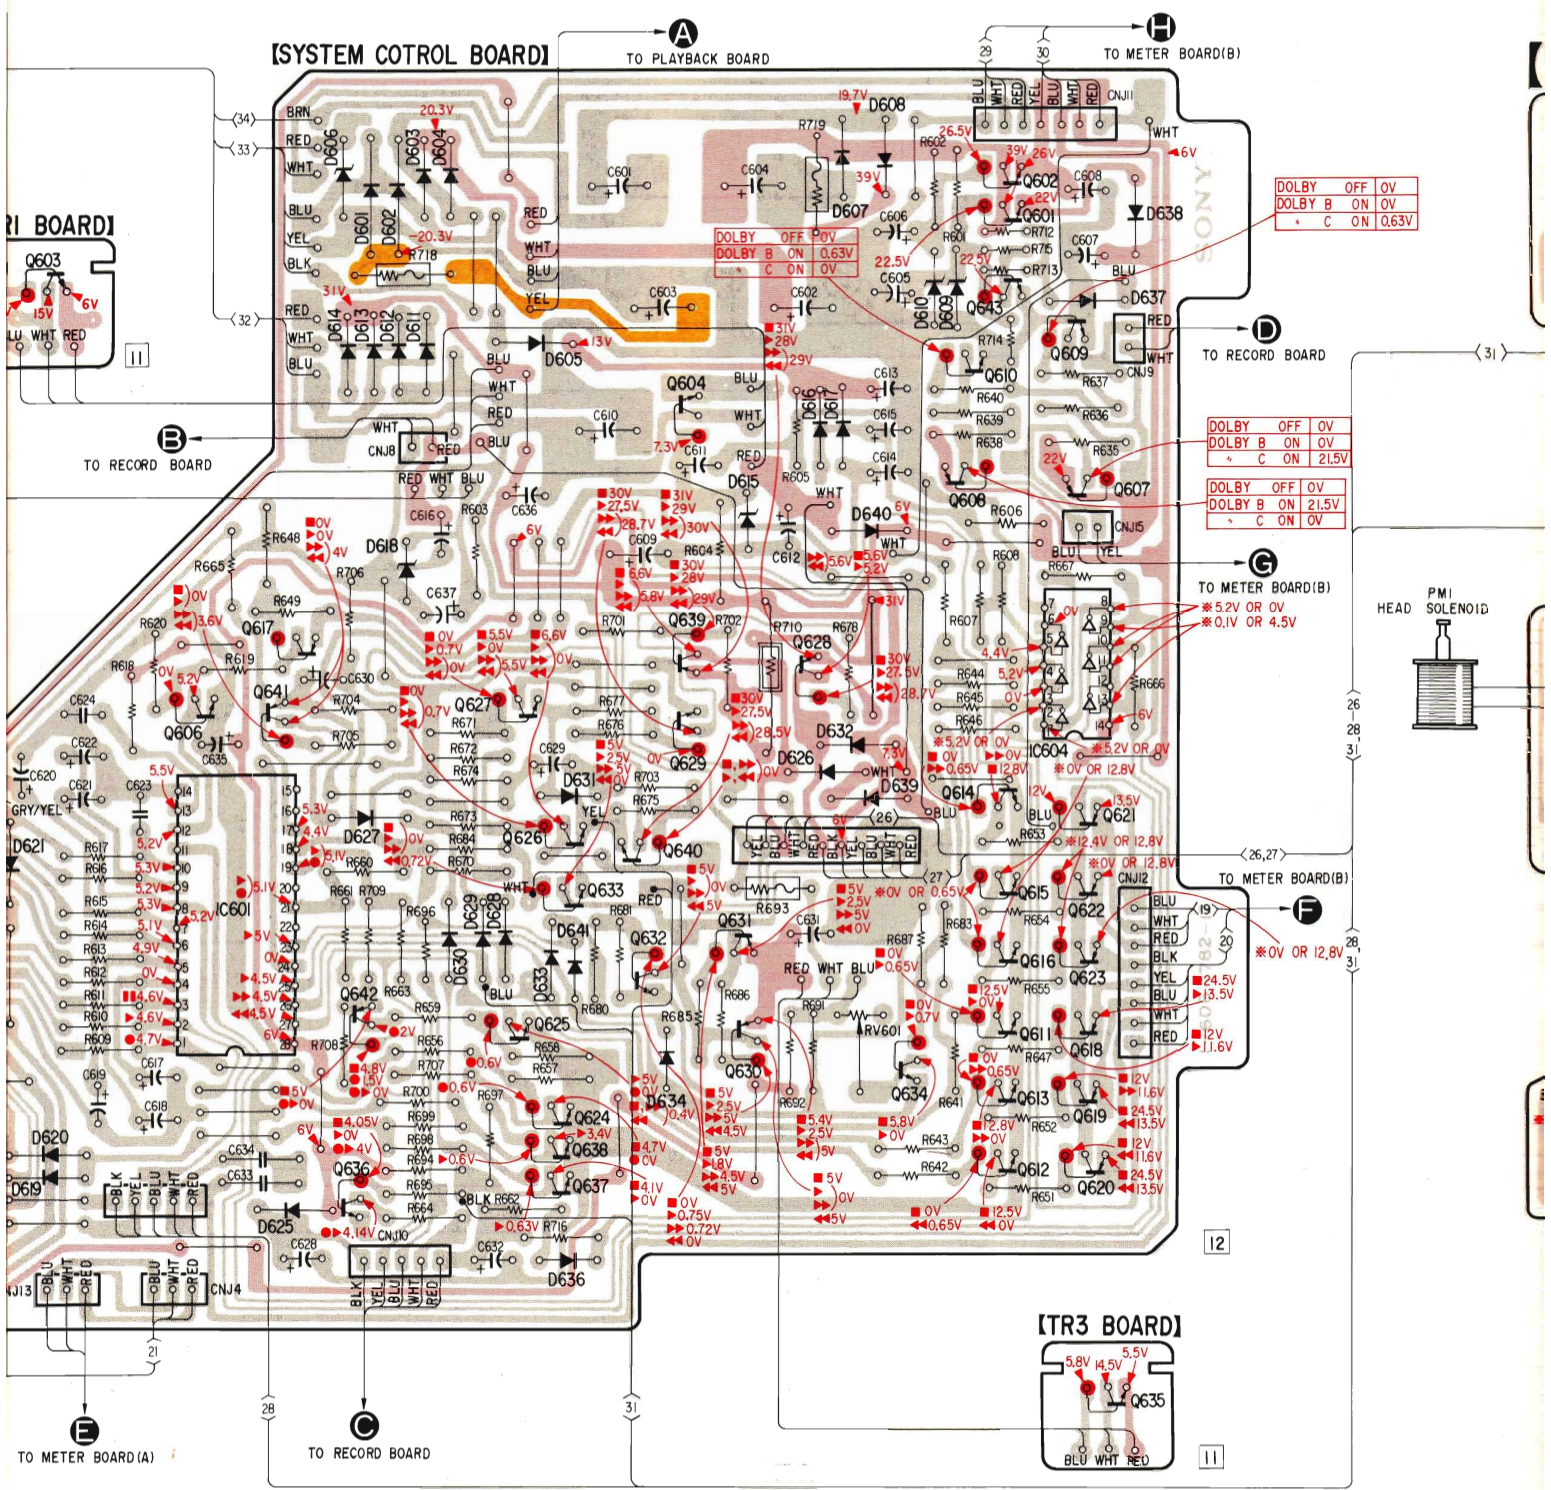



X	Y	Z	A1	B1	C1	D1
	906	905				Q
	645	644				IC
	903	643		902		D

## [REVERSE ROTARY BOARD]

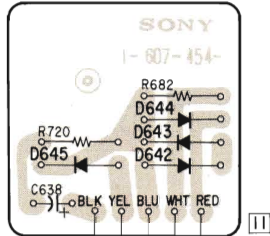

3V

(31)

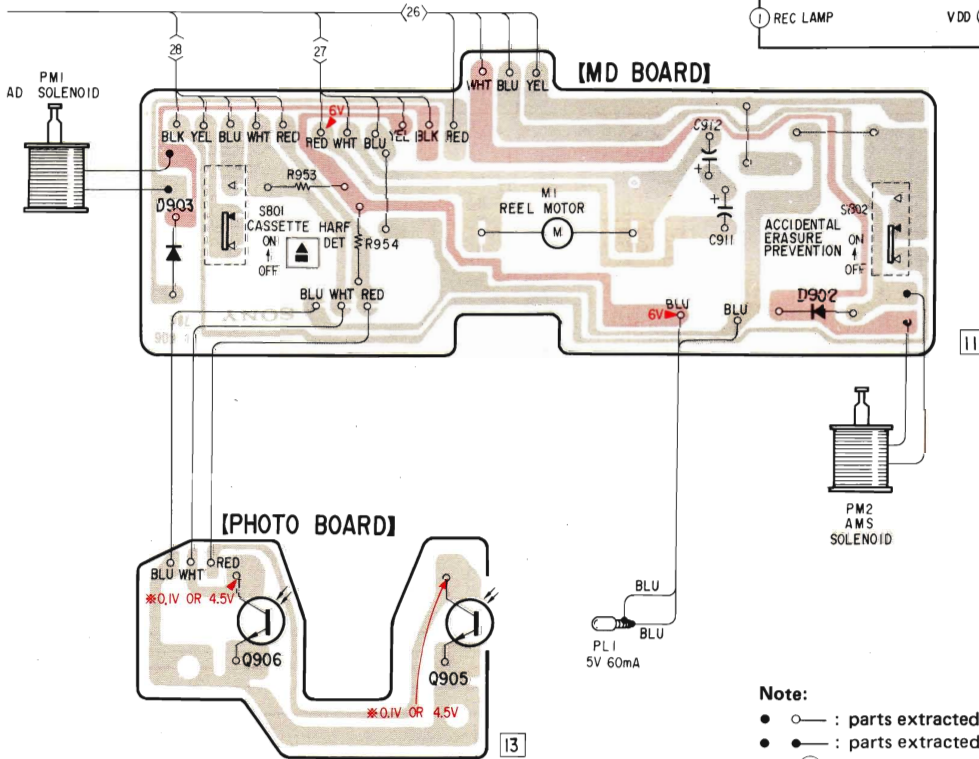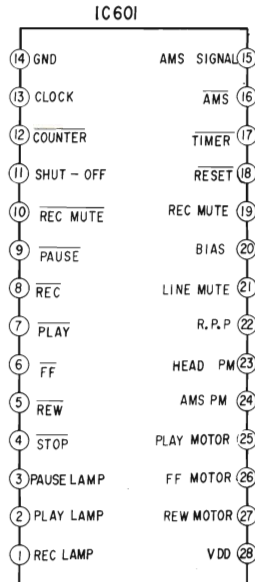

### Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- ⊕ : fusible resistor.
- : B + pattern
- : B - pattern

1

2

3

4

5

6

7

8

9

10




A B C D E F G H


4.4. SCHEMATIC DIAGRAM

— System Control Section —


1  
2  
3  
4  
5  
6  
7  
8  
9  
10

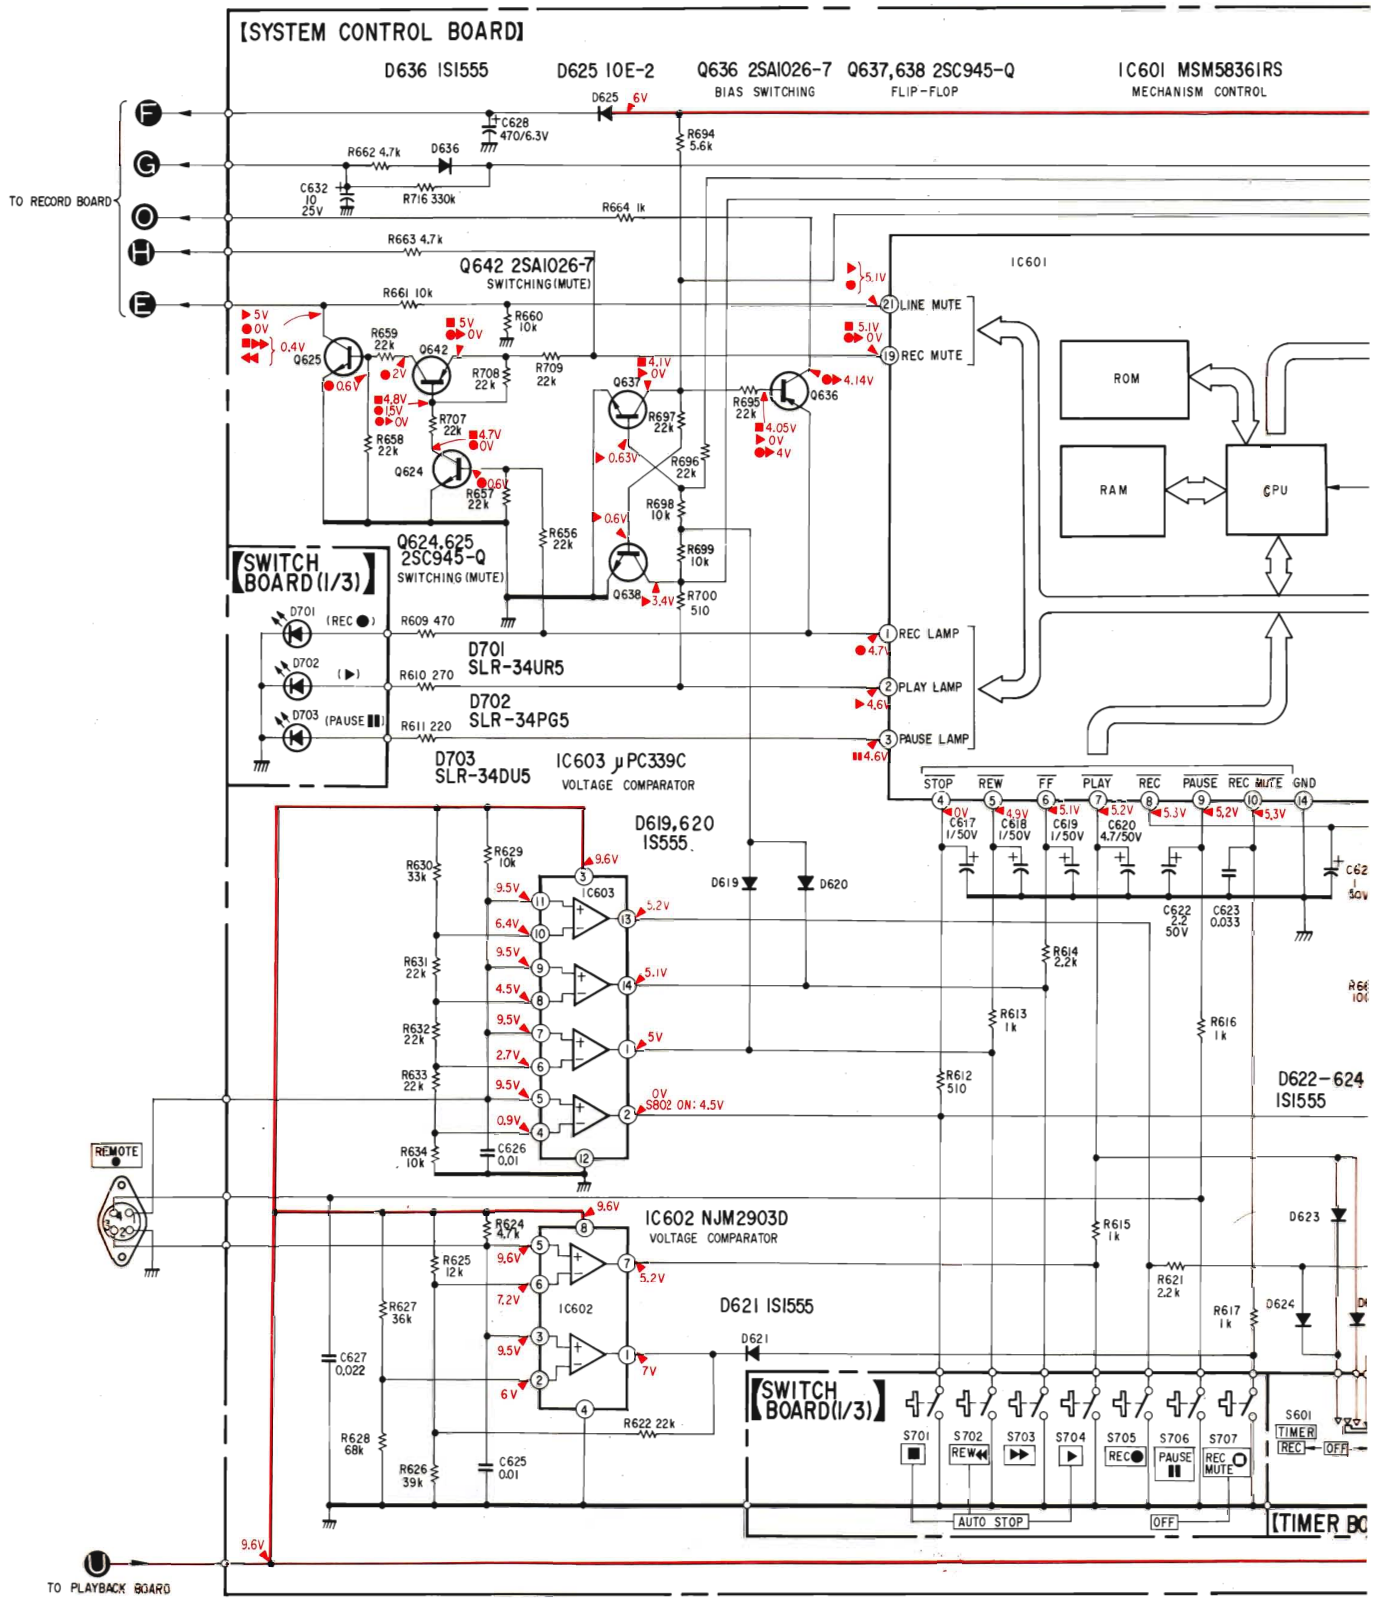

RS

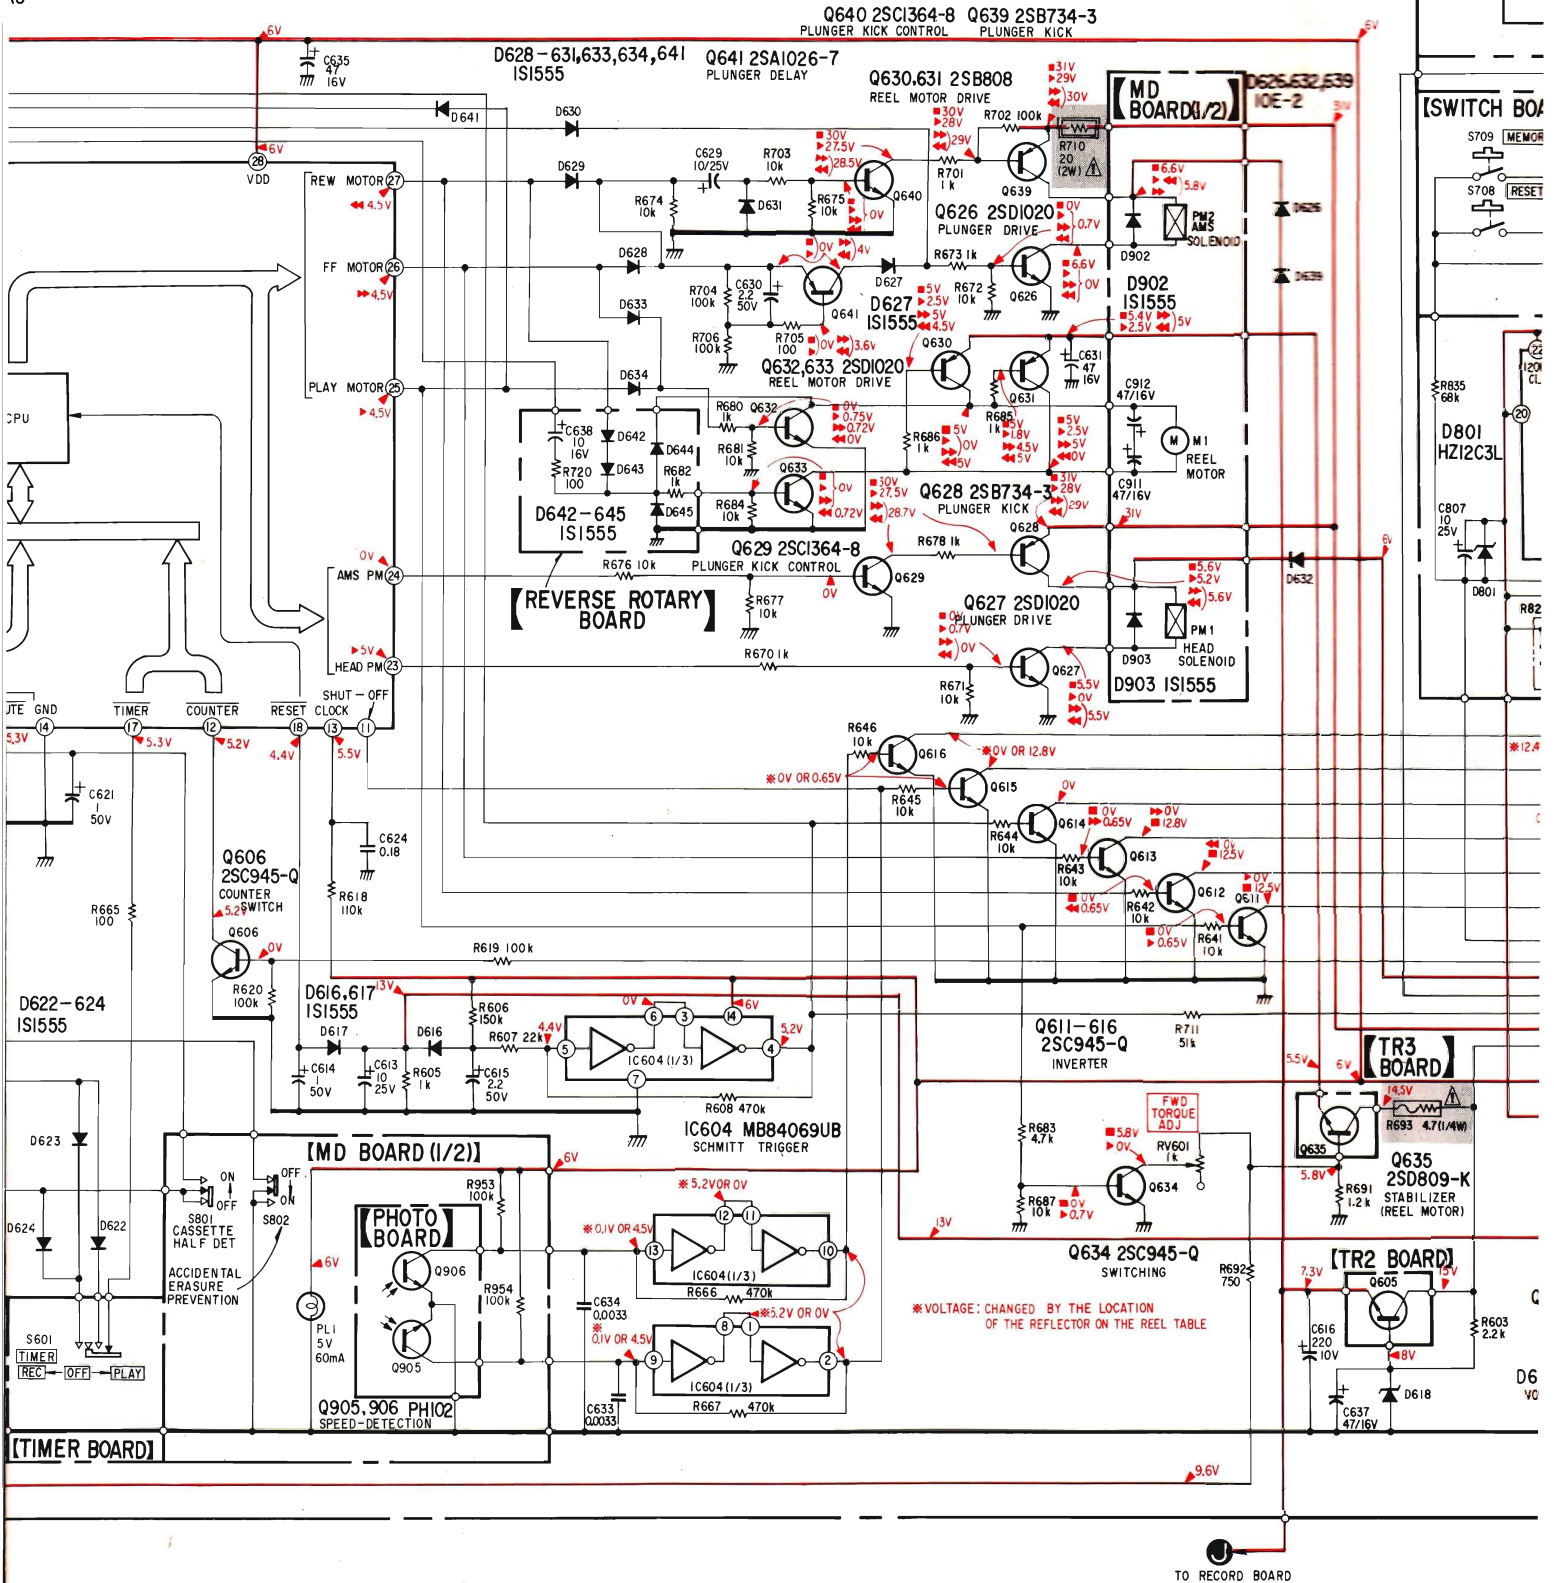


P Q R S T U V W X

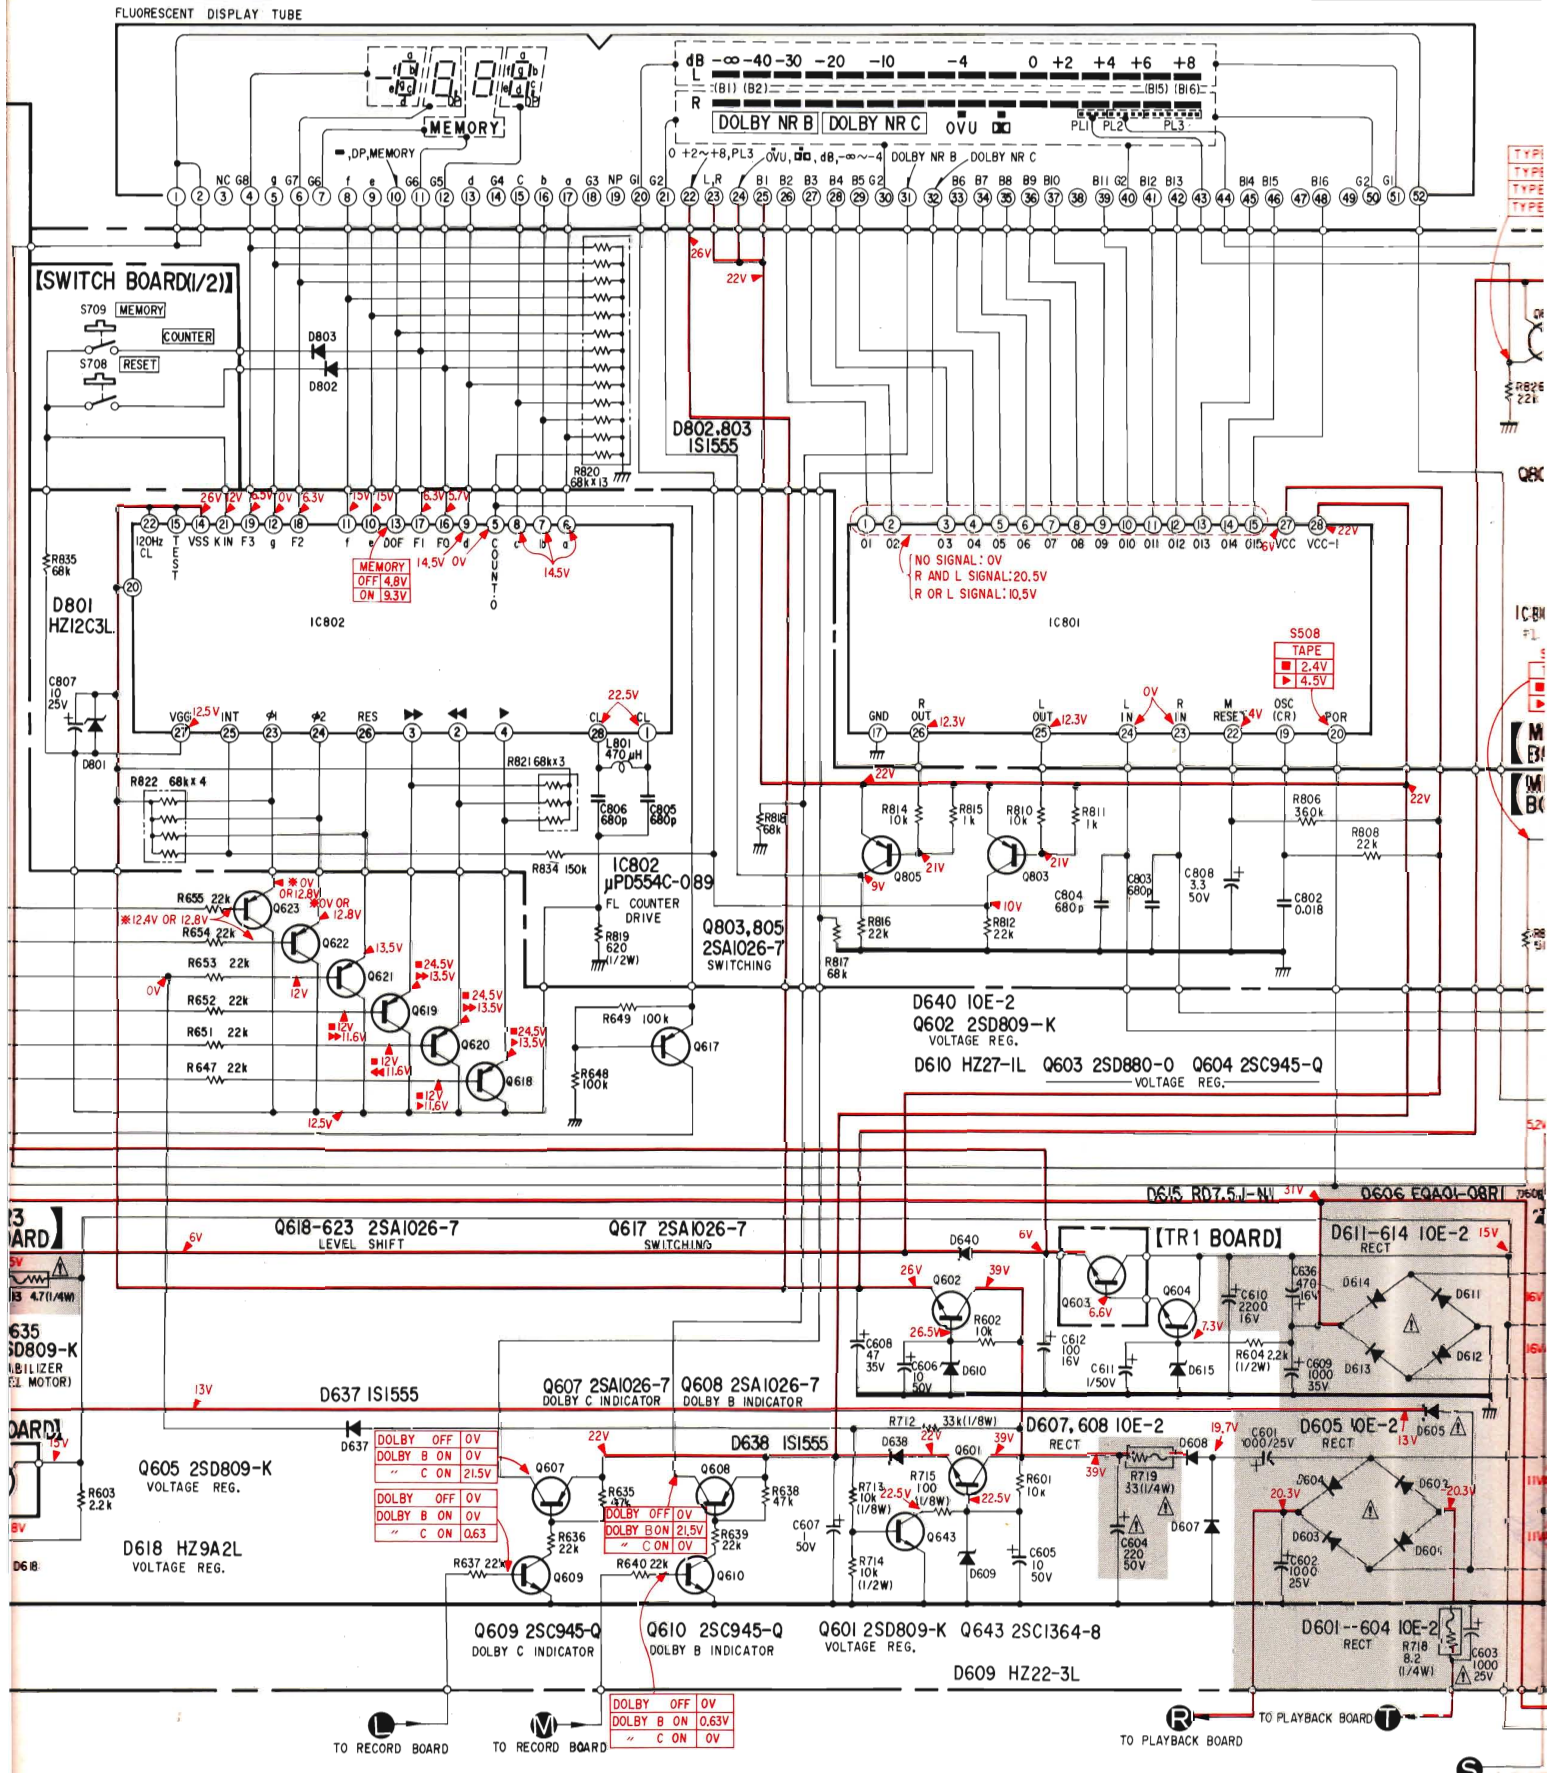



TYPE I	26V	TYPE I	26V
TYPE II	26V	TYPE II	26V
TYPE III	0V	TYPE III	26V
TYPE IV	0V	TYPE IV	0V



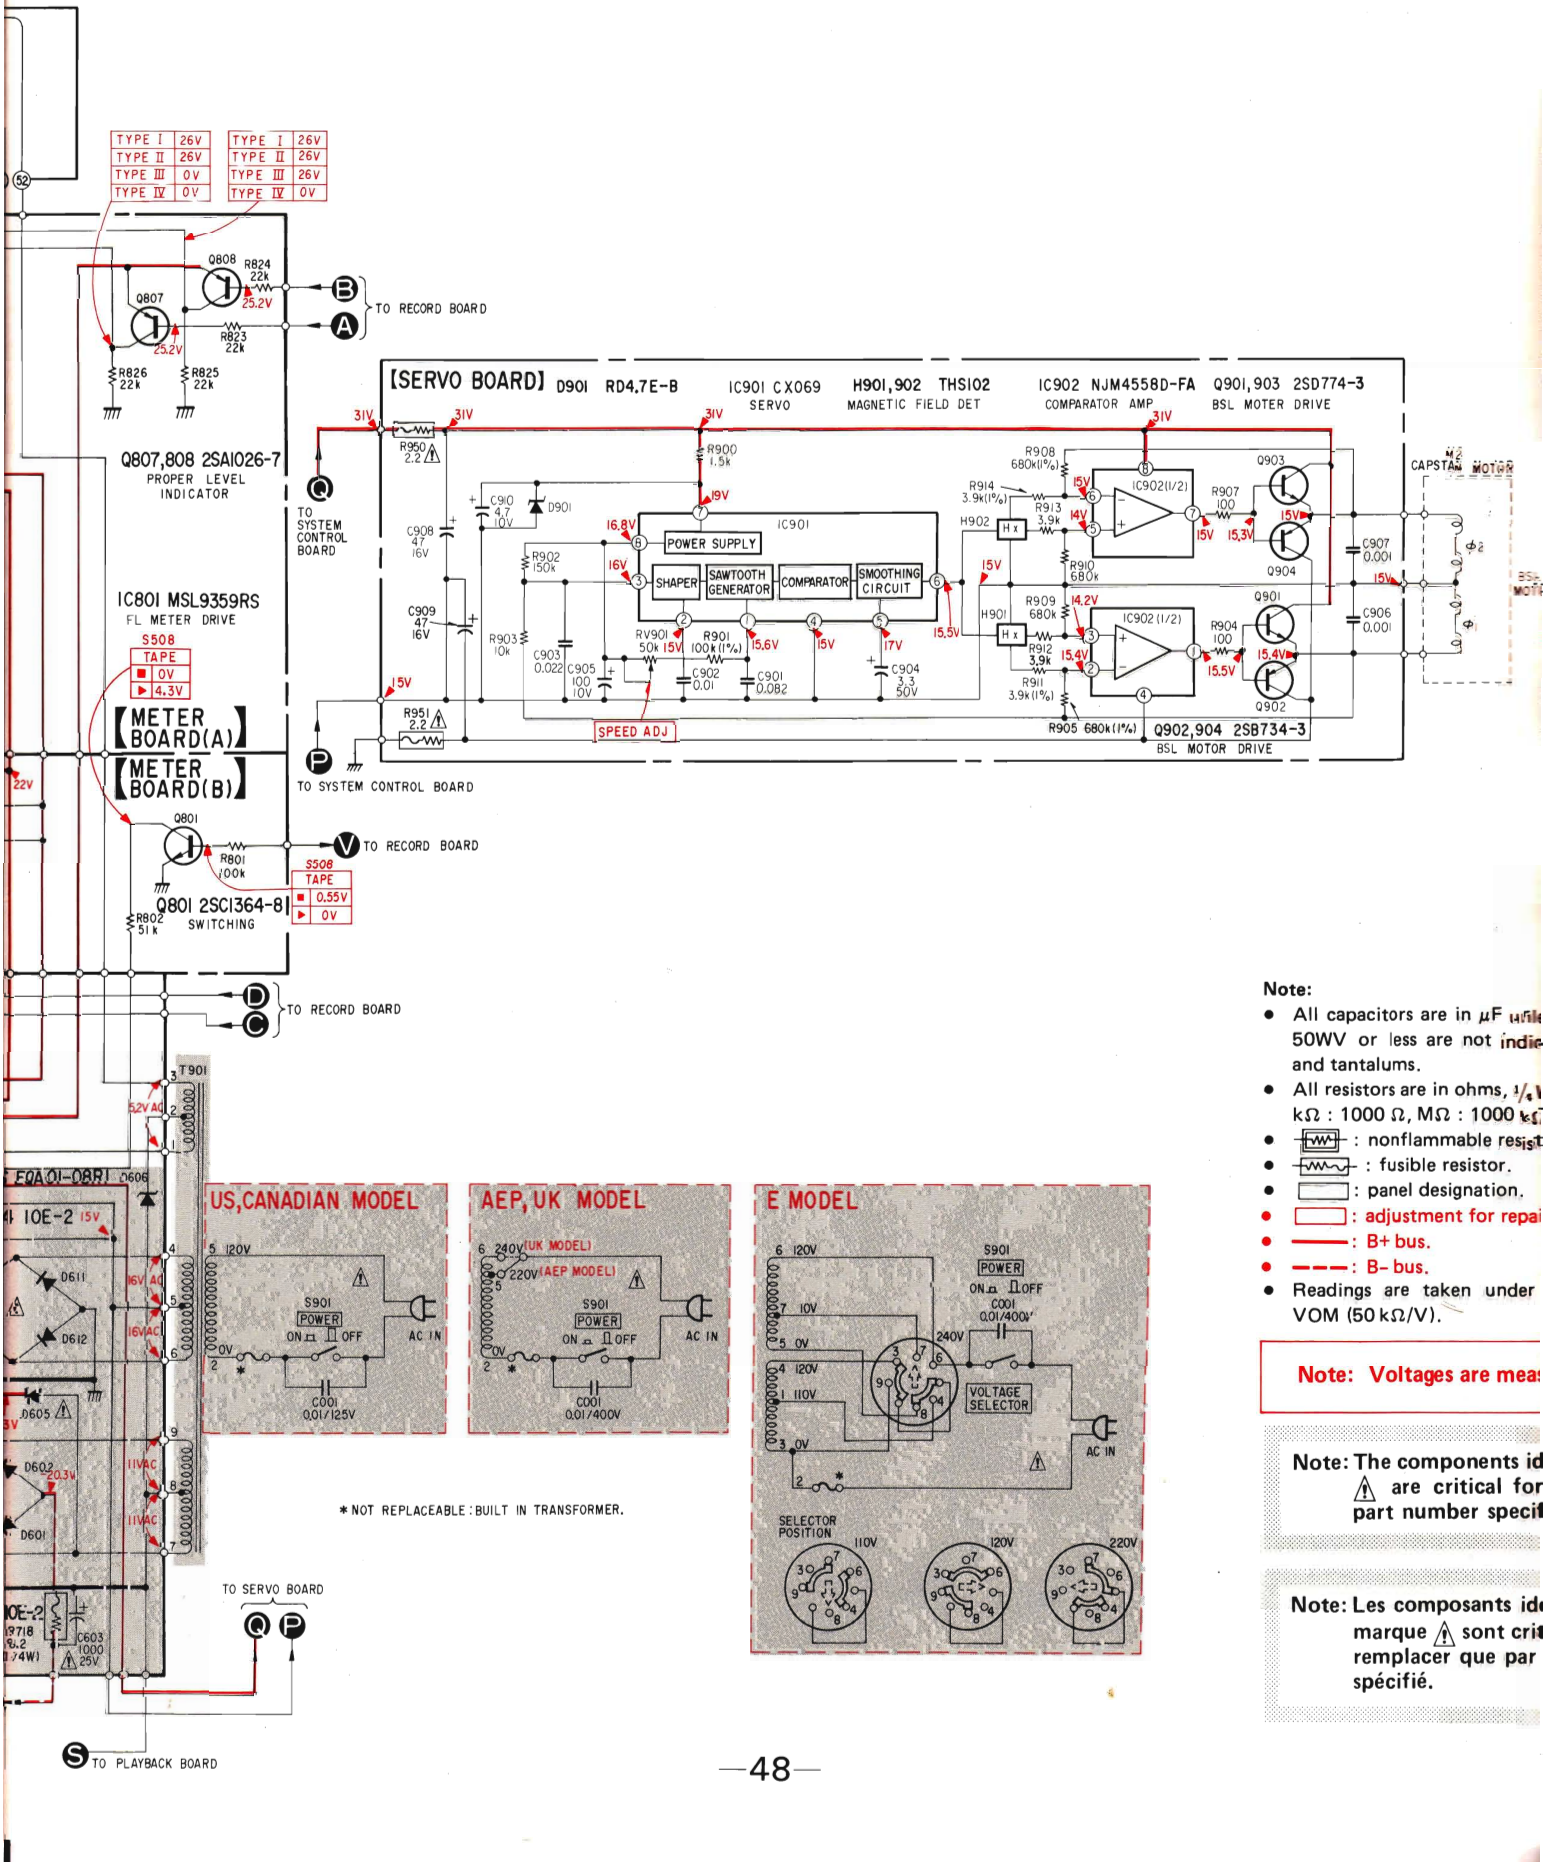


- Note:**
- All capacitors are in  $\mu\text{F}$  unless 50WV or less are not indie and tantalums.
  - All resistors are in ohms,  $\frac{1}{4}$  k $\Omega$  : 1000  $\Omega$ , M $\Omega$  : 1000 k $\Omega$ .
  - : nonflammable resist
  - : fusible resistor.
  - : panel designation.
  - : adjustment for repair
  - : B+ bus.
  - : B- bus.
  - Readings are taken under VOM (50 k $\Omega$ /V).

**Note: Voltages are mea**

**Note: The components id**  
 are critical for  
 part number specif

**Note: Les composants id**  
 marque sont crit  
 remplacer que par  
 spécifié.

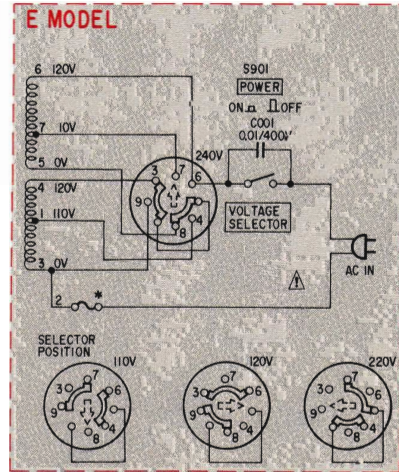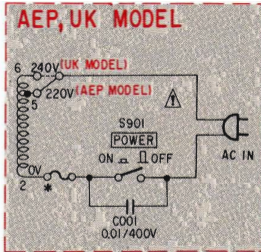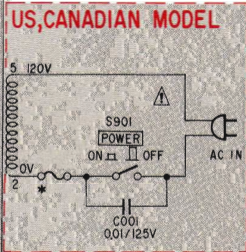

\* NOT REPLACEABLE: BUILT IN TRANSFORMER.

A1      B1      C1      D1      E1      F1      G1      H1

1

2

3

4

5




6

7

8

9

10

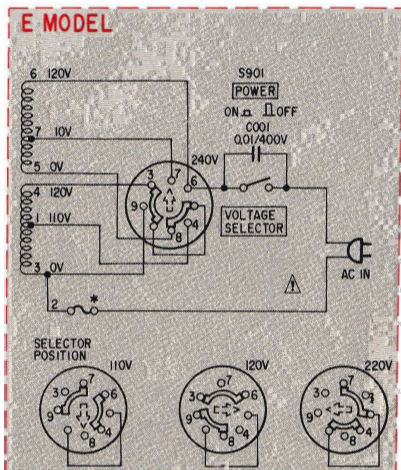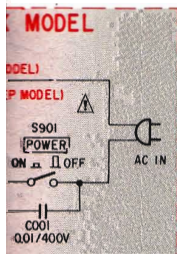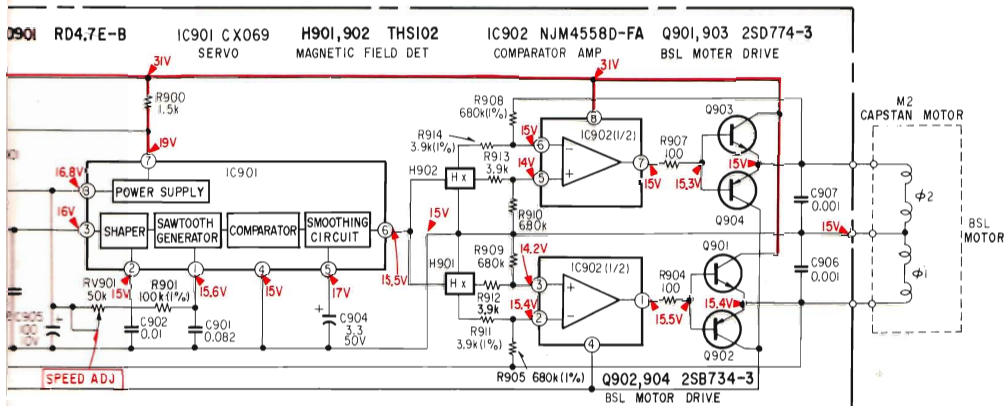

TRANSFORMER.

**Note:**


- All capacitors are in  $\mu\text{F}$  unless otherwise noted. pF:  $\mu\mu\text{F}$
- 50VV or less are not indicated except for electrolytics and tantalums.
- All resistors are in ohms,  $\frac{1}{4}\text{W}$  unless otherwise noted.
- $\text{k}\Omega$  : 1000  $\Omega$ ,  $\text{M}\Omega$  : 1000  $\text{k}\Omega$
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.
- : adjustment for repair.
- : B+ bus.
- : B- bus.
- Readings are taken under no-signal conditions with a VOM (50  $\text{k}\Omega/\text{V}$ ).

**Note: Voltages are measured with a VOM (50k $\Omega$ /V).**


**Note: The components identified by shading and mark are critical for safety. Replace only with part number specified.**

**Note: Les composants identifiés par une trame et une marque sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.**


SECTION 5  
EXPLODED VIEWS AND PARTS LIST

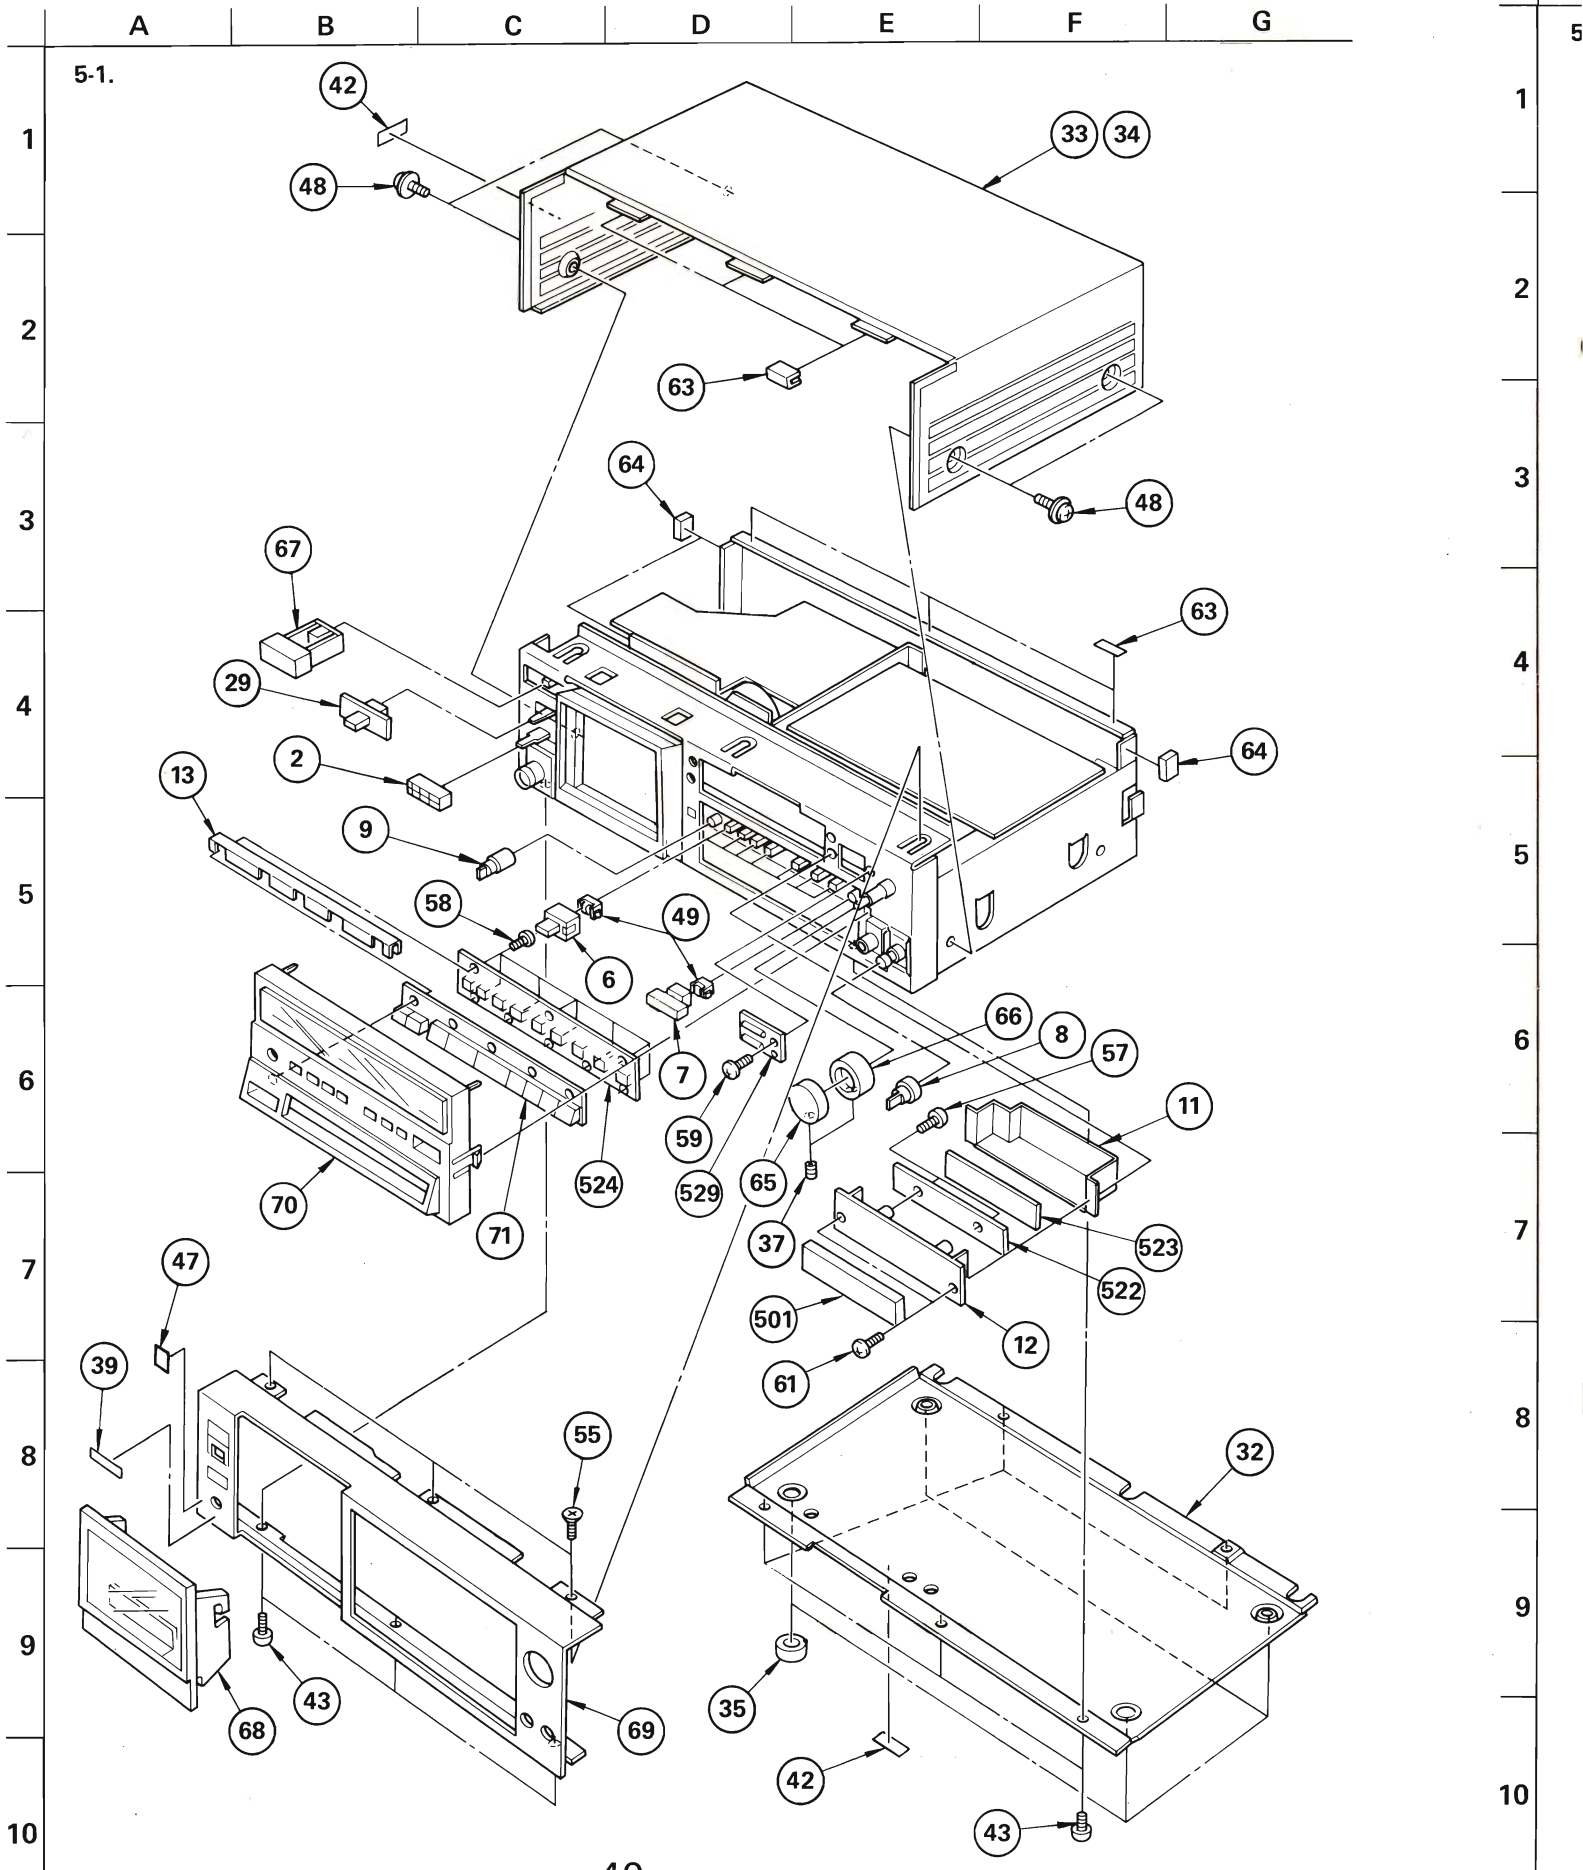




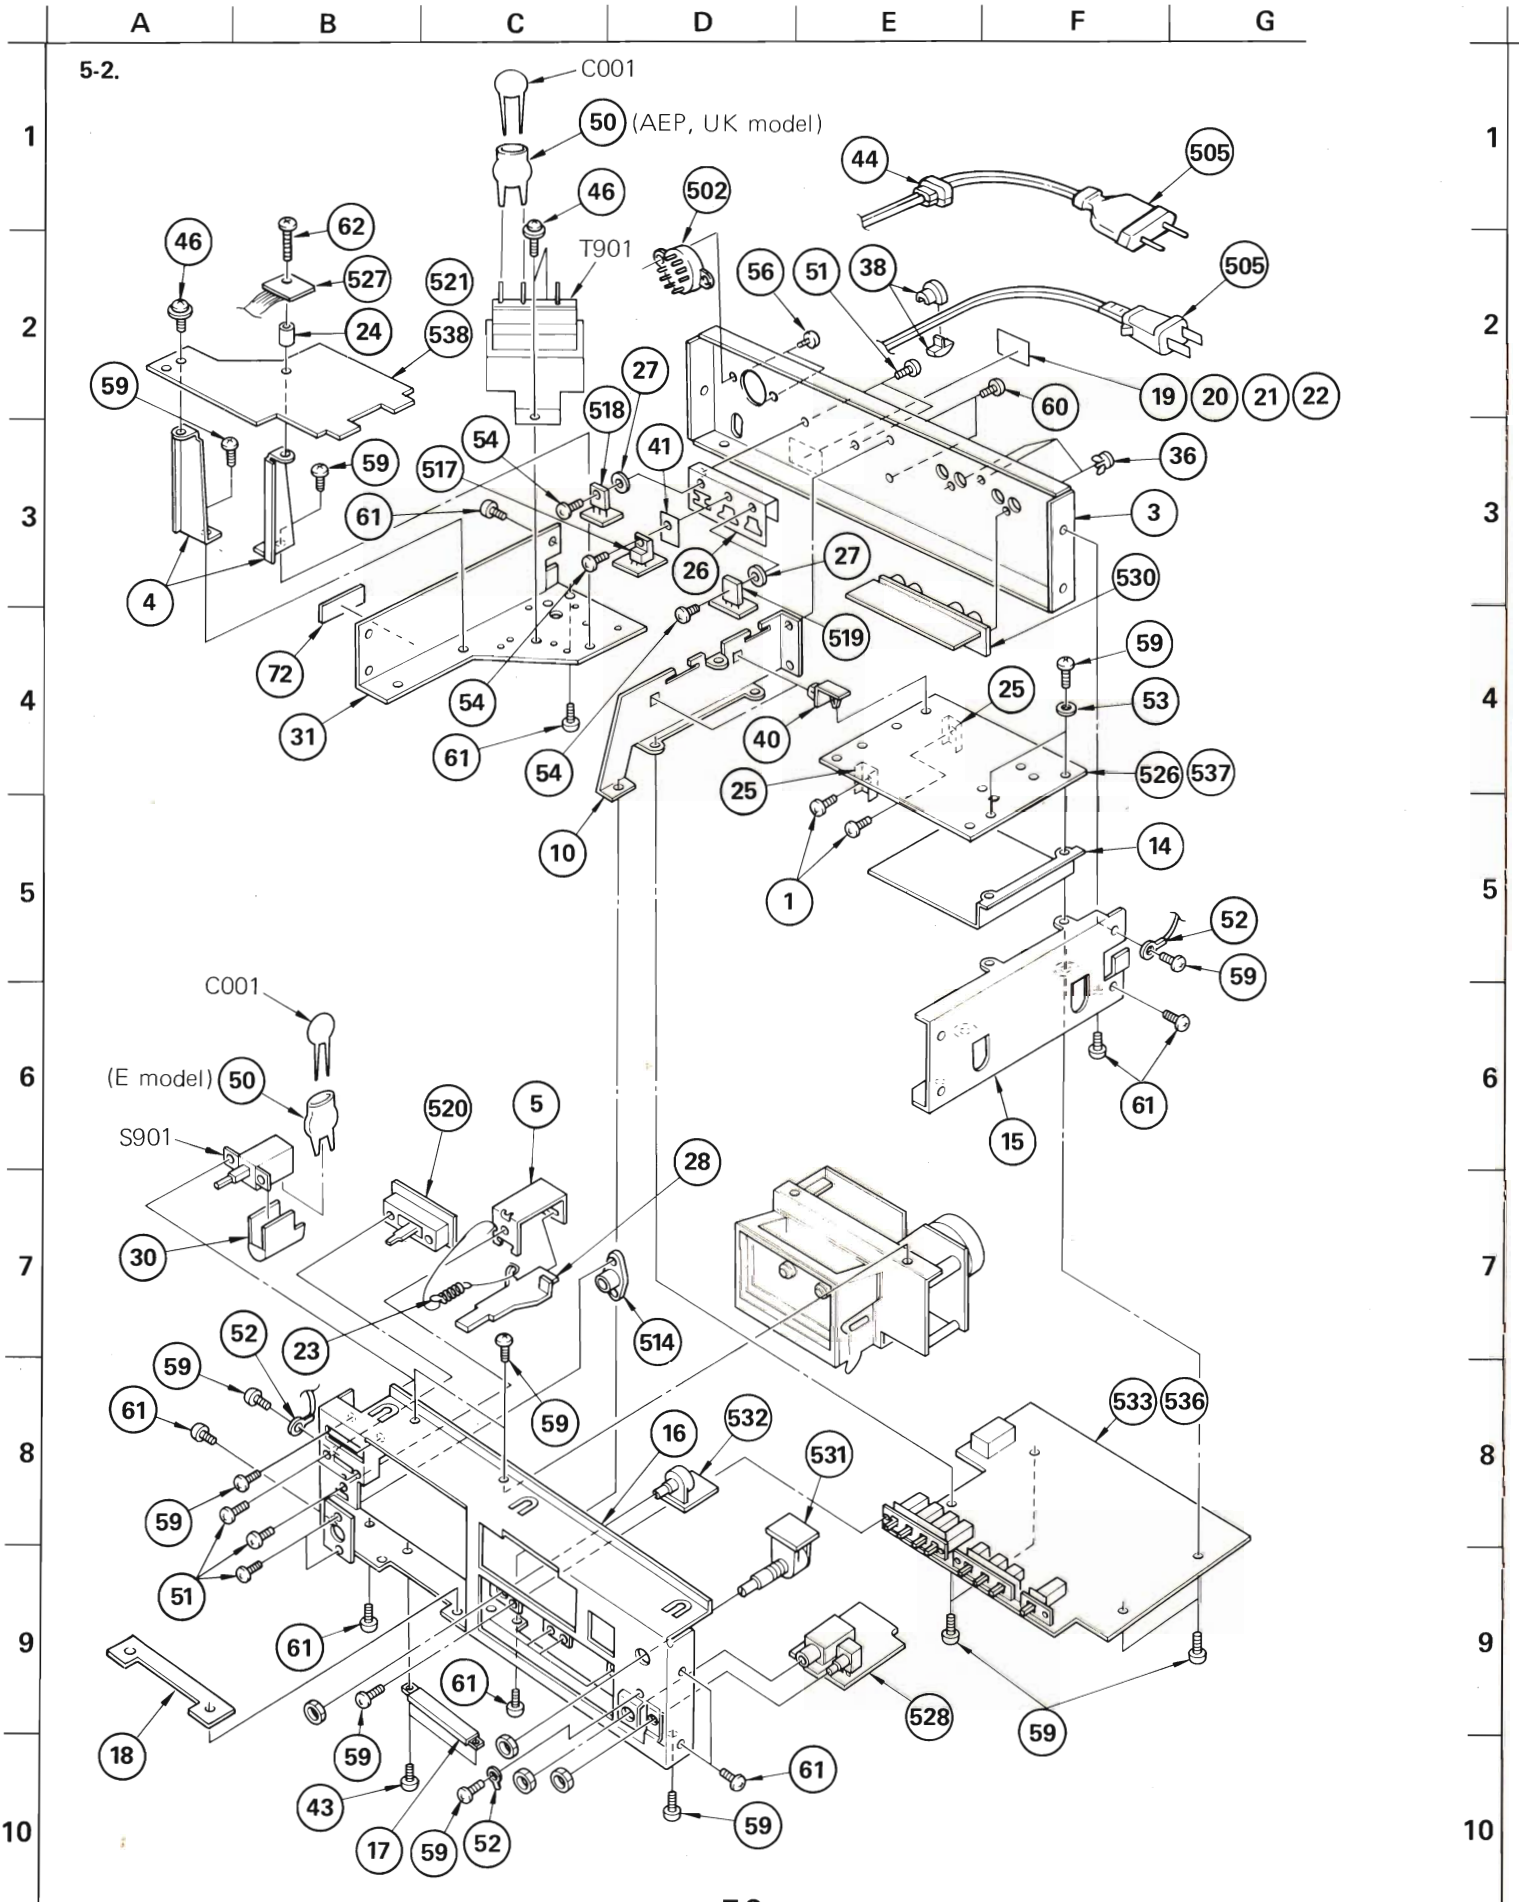

5-3.

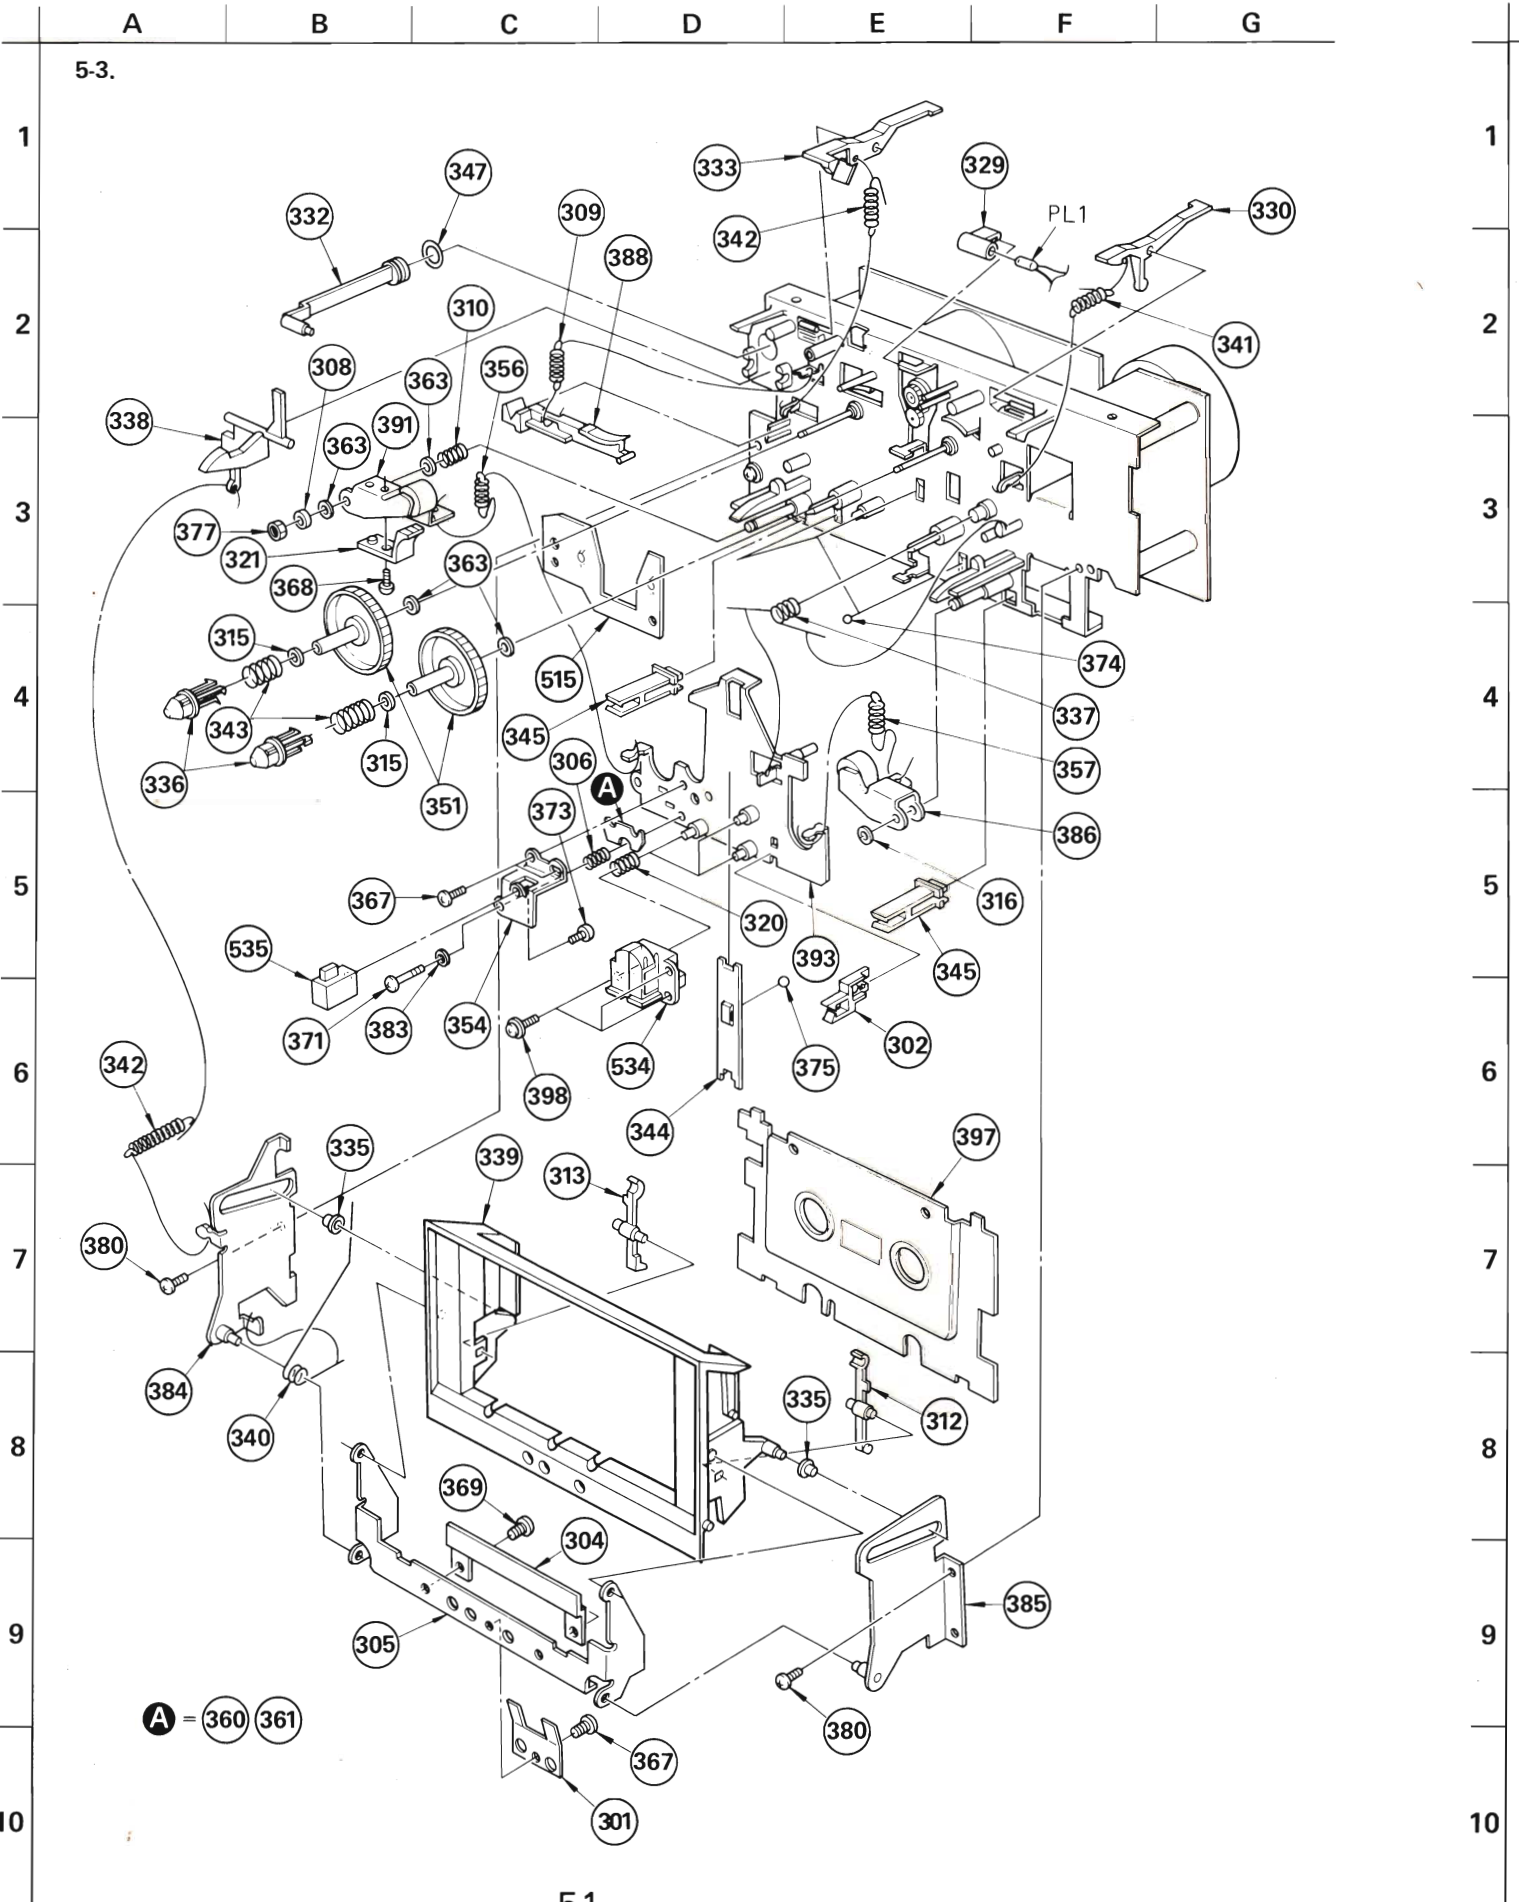

A = 360 361

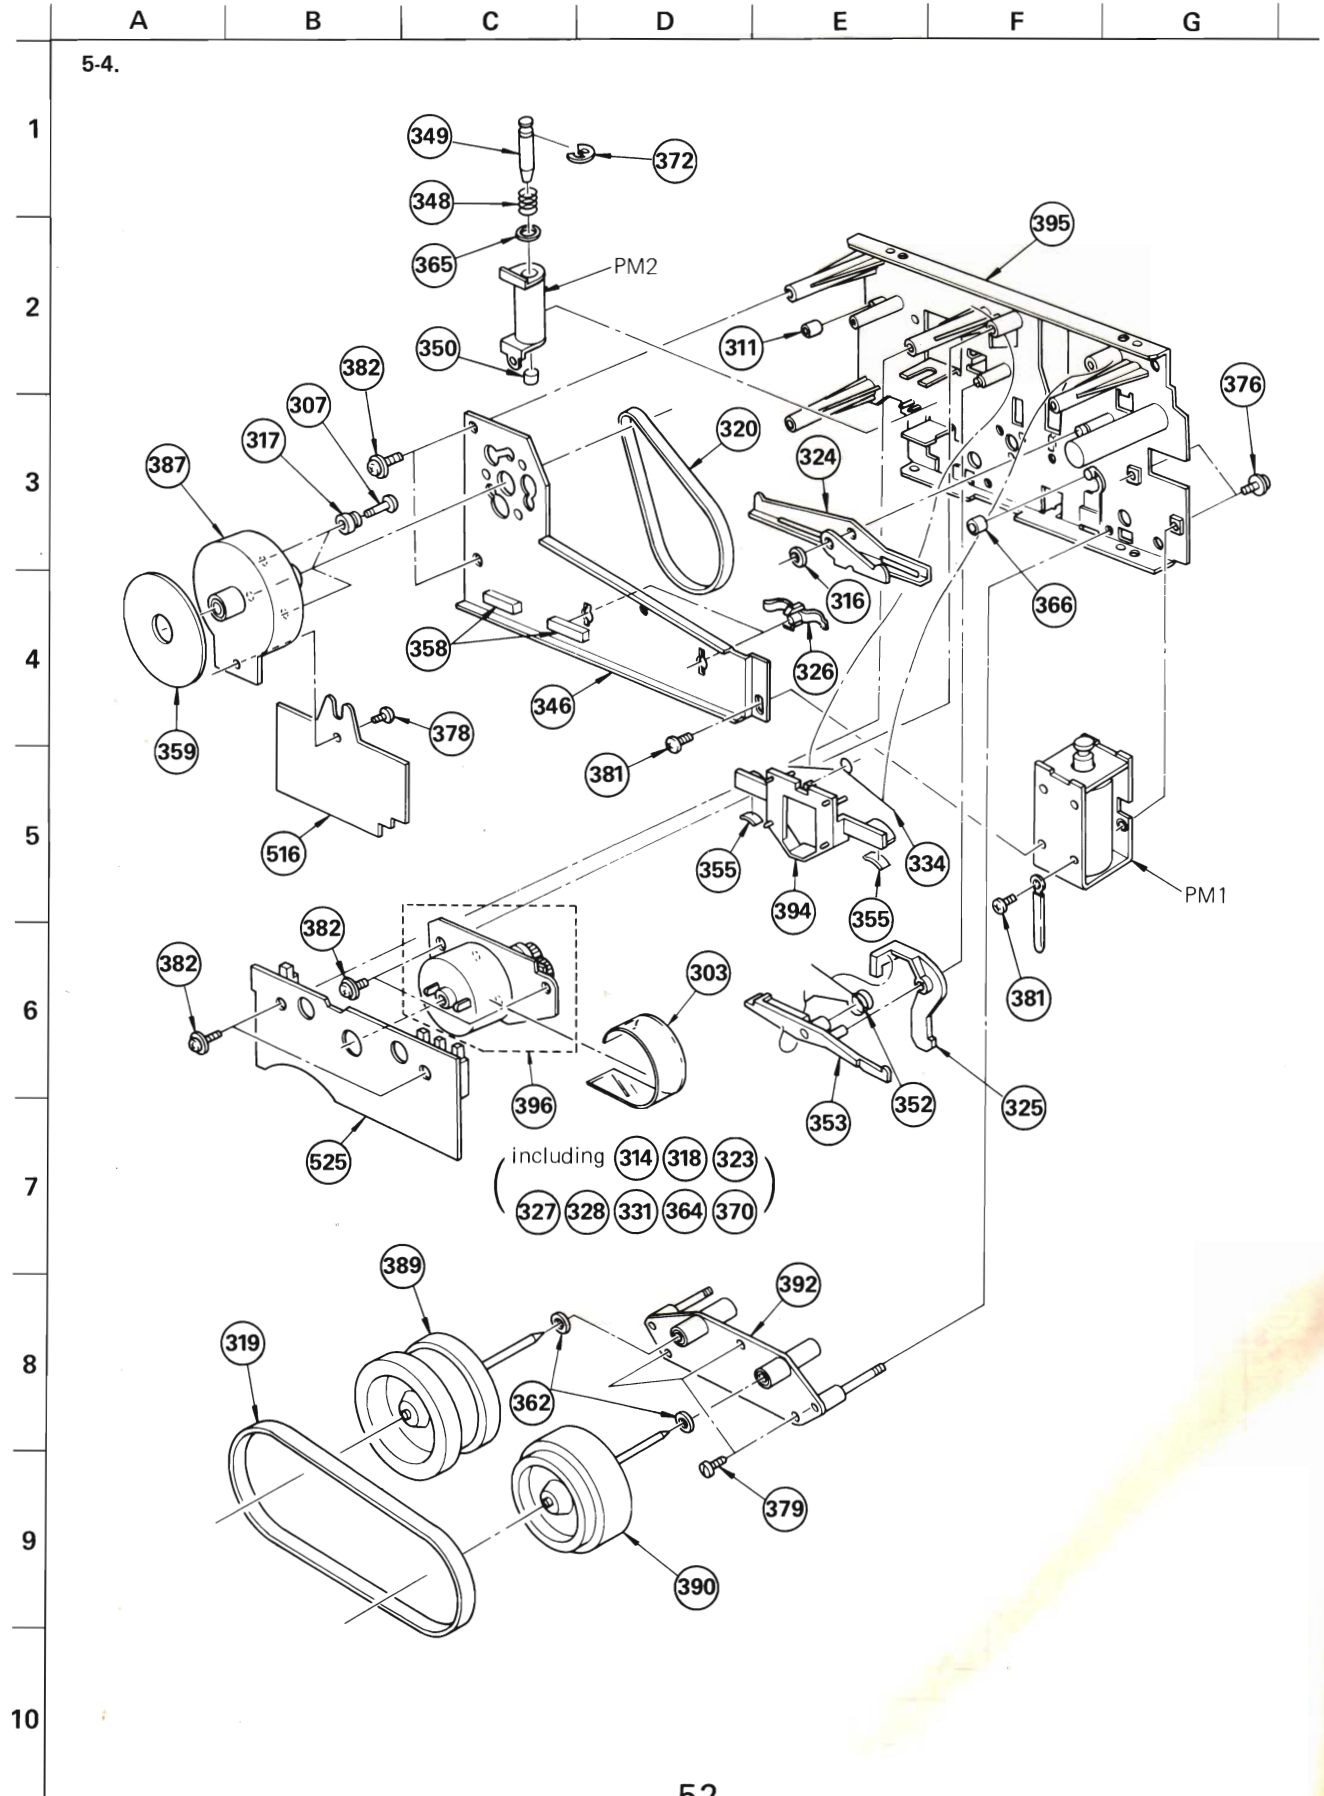



GENERAL SECTION

No.	Part No.	Description
1	2-259-121-00	SCREW, TR
2	3-304-419-31	BUTTON, EJECT
3	♣;3-304-907-41	(US,Canadian)...PLATE, JACK
3	♣;3-304-908-01	(AEP,UK)...PLATE, JACK
3	♣;3-304-908-12	(E)...PLATE, JACK
4	♣;3-304-910-00	BRACKET, PC BOARD
5	♣;3-304-911-00	SLIDER, EJECT
6	3-304-926-11	KNOB (A), PUSH
7	3-304-927-11	KNOB (B), PUSH
8	3-304-929-11	KNOB, HEADPHONE
9	3-304-930-11	KNOB, BIAS
10	♣;3-304-934-00	PLATE, RELAY
11	♣;3-304-935-00	CASE, SHIELD
12	♣;3-304-938-00	HOLDER, FL TUBE
13	♣;3-304-939-00	BRACKET, CONTROL BUTTON
14	♣;3-304-942-00	PLATE, SHIELD, PLAYBACK PCB
15	♣;3-304-944-00	PLATE, SIDE, RIGHT
16	♣;3-304-949-05	CHASSIS, AMPLIFIER
17	3-304-962-00	COVER, MD
18	♣;3-304-975-00	SHEET, ORNAMENTAL
19	3-304-976-00	LABEL, MODEL NUMBER (U,CND)
20	3-304-977-00	LABEL, MODEL NUMBER (AEP3)
21	3-304-978-00	LABEL, MODEL NUMBER (UK)
22	3-304-979-00	LABEL, MODEL NUMBER (E1,E2)
23	3-534-238-XX	SPRING, TENSION
24	♣;3-565-796-00	SPACER, PC BOARD
25	♣;3-567-242-00	HEAT SINK
26	♣;3-572-305-00	HEAT SINK
27	3-572-365-11	SHEET, INSULATING (A)
28	♣;3-575-502-00	BRACKET, EJECT
29	3-575-515-41	KNOB, SLIDE SWITCH
30	3-575-524-00	COVER, POWER SWITCH
31	♣;3-575-537-00	PLATE, SIDE, LEFT
32	♣;3-575-538-21	PLATE, BOTTOM
33	3-575-539-41	CASE
34	3-575-544-31	PLATE, EXPANSION, CASE
35	3-576-731-00	FELT (H)
36	3-646-090-11	RIVET, NYLON
37	3-701-506-01	SET SCREW, DOUBLE POINT 3X4
38	3-701-682-00	(US,Canadian)...STOPPER, CORD
39	3-701-690-00	(UK)...LABEL (MADE IN JAPAN)
40	♣;3-701-832-00	HINGE, CIRCUIT BOARD
41	3-703-037-00	INSULATOR, TO-220
42	3-703-079-21	(US,UK)...LABEL, CAUTION, SUB

GENERAL SECTION

No.	Part No.	Description
43	3-703-108-21	SCREW +BV 3X6, S TIGHT
44	3-703-244-00	(AEP,UK,E)...BUSHING, CORD
45	3-703-330-01	(UK)...LABEL, SEAL
46	3-703-486-00	+PTTW 3X5
47	3-703-710-41	STICKER, SONY SYMBOL (12)
48	4-820-330-21	SCREW, BW, PLUS MINUS
49	4-864-307-00	RING
50	4-875-455-21	(AEP,UK,E)...COVER (DIA.20), CAPACITOR
51	7-621-775-20	SCREW +B 2.6X5
52	7-623-508-01	LUG, 3
53	7-623-955-11	WASHER 4.0, FIBER
54	7-682-147-20	SCREW +P 3X6
55	7-682-247-04	SCREW +K 3X6
56	7-682-547-09	SCREW +B 3X6
57	7-685-146-14	SCREW +P 3X8 TYPE2 SLIT
58	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S
59	7-685-871-01	SCREW +BVTT 3X6 (S)
60	7-685-871-09	SCREW +BVTT 3X6 (S)
61	7-685-872-01	SCREW +BVTT 3X8 (S)
62	7-685-877-01	SCREW +BVTT 3X20 (S)
63	9-911-837-XX	CUSHION, FILTER
64	9-911-841-XX	CUSHION
65	X-3304-909-0	KNOB (RIGHT) ASSY, REC
66	X-3304-910-0	KNOB (LEFT) ASSY, REC
67	X-3304-911-0	KNOB ASSY, POWER
68	X-3304-913-0	WINDOW ASSY, CASSETTE
69	X-3304-914-0	PANEL ASSY, FRONT
70	X-3304-915-0	ESCUTCHEON SUB ASSY
71	X-3304-916-0	BUTTON ASSY, CONTROL
72	♣;3-703-711-00	LABEL, CAUTION, BARRIER

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "♣" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (1-XXXX-XXXX-XX or 4-XXXX-XXXX-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in  $\mu$ F. Common capacitors are omitted. Refer to the following lists for their part numbers.  
MF: $\mu$ F, PF: $\mu$ F.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F: nonflammable

SEMICONDUCTORS

- In each case, U:  $\mu$ , for example:  
UA...:  $\mu$ A..., UPA...:  $\mu$ PA..., UPC...:  $\mu$ PC,  
UPD...:  $\mu$ PD...

COILS

- MMH: mH, UH:  $\mu$ H

## ACCESSORY & PACKING MATERIAL

No.	Part No.	Description
101	1-551-734-11	CORD, CONNECTION (RK- 74A)
102	3-304-902-00	CUSHION (LEFT), UPPER
103	3-304-903-00	CUSHION (RIGHT), UPPER
104	3-304-904-00	CUSHION (LEFT), LOWER
105	3-304-905-00	CUSHION (RIGHT), LOWER
106	3-304-956-00	SHEET, PROTECTION
107	3-304-973-00	SHEET, PROTECTION
108	3-304-980-00	INDIVIDUAL CARTON
109	3-701-630-00	BAG, POLYETHYLENE
110	3-773-146-11	(Canadian,UK,AEP,E)...MANUAL, INSTRUCTION
110	3-773-146-21	(US).....MANUAL, INSTRUCTION
110	3-773-146-41	(AEP).....MANUAL, INSTRUCTION
111	3-793-481-13	(Canadian,AEP,UK,E)...INSTRUCTION
112	3-793-828-11	QUESTIONNAIRE
113	8-890-454-10	(Canadian)...TAPE (UCX-S)
114	X-3701-105-0	ROD ASSY, CLEANING, HEAD

## MECHANISM SECTION

No.	Part No.	Description
301	3-304-639-00	PLATE, SHIELD, HEAD
302	▲;3-304-963-00	RETAINER, LEAD
303	3-306-209-00	PLATE (D), SHIELD, MOTOR
304	3-306-214-00	ESCUTCHEON, HEAD ORNAMENT
305	3-306-215-00	LEVER, FULCRUM, HOLDER
306	3-481-272-00	SPRING, COMPRESSION
307	3-489-077-21	SCREW, MOTOR STOPPER
308	3-491-191-00	COLLAR
309	3-537-205-00	SPRING, TENSION
310	3-537-213-00	SPRING, COMPRESSION
311	3-538-051-00	RUBBER, BRAKE
312	3-555-113-00	SPRING (RIGHT)
313	3-555-114-00	SPRING (LEFT)
314	3-558-708-01	WASHER, STOPPER
315	3-558-708-11	WASHER, STOPPER

## MECHANISM SECTION

No.	Part No.	Description
316	3-558-708-21	WASHER, STOPPER
317	3-564-017-00	RUBBER, CUSHION
318	3-564-027-11	FELT, LIMITER
319	3-564-088-00	BELT (2), CAPSTAN
320	3-564-121-00	SPRING, COMPRESSION
321	3-564-138-00	GUIDE (S), TAPE
322	3-564-319-00	BELT, CAPSTAN
323	3-575-304-00	SHAFT, GEAR, FR
324	▲;3-575-307-00	LEVER, FWD
325	3-575-318-00	LEVER, LOCK, TUNING
326	3-575-321-00	RETAINER, THRUST, CAPSTAN
327	3-575-324-00	GEAR, LIMITER
328	3-575-327-00	STOPPER
329	3-575-328-00	HOLDER, LAMP
330	▲;3-575-331-00	LEVER, DETECTION, HALF
331	3-575-332-00	GEAR, FR
332	3-575-333-00	PISTON
333	▲;3-575-334-00	LEVER, DETECTION, REC
334	3-575-345-00	SPRING
335	3-575-348-00	ROLLER, GUIDE, THREADING
336	3-575-350-00	CLAW, REEL TABLE
337	3-575-351-00	SPRING
338	3-575-354-00	LEVER, LOCK
339	3-575-355-31	HOLDER, CASSETTE
340	3-575-356-00	SPRING
341	3-575-358-00	SPRING, TENSION
342	3-575-364-00	SPRING, TENSION
343	3-575-365-00	SPRING, COMPRESSION
344	▲;3-575-377-00	SPRING
345	▲;3-575-378-00	GUIDE, LEAD
346	▲;3-575-381-00	RETAINER (W), THRUST
347	3-575-392-00	RING, PISTON
348	3-575-414-00	SPRING, COMPRESSION
349	3-575-415-11	ARBOR, MOVABLE
350	3-575-416-11	ARBOR, FIXED
351	3-575-447-00	TABLE, REEL
352	3-575-458-00	SPRING
353	3-575-460-00	LEVER, SELECT TUNE
354	▲;3-575-464-00	BRACKET, HEAD, ERASE
355	3-575-469-00	SHOE, BRAKE
356	3-575-481-00	SPRING, TENSION
357	3-575-482-00	SPRING, TENSION
358	3-575-485-00	RUBER, VIBRATION PROOF
359	3-575-486-00	SHEET, VIBRATION PROOF
360	3-576-835-01	SEAM, ADJUSTMENT, ERASE HEAD

### NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

### CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers.  
MF:μF, PF:μF.

### RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F: nonflammable

### SEMICONDUCTORS

- In each case, U: μ, for example:  
UA...: μA...; UPA...: μPA...; UPC...: μPC,  
UPD...: μPD...

### COILS

- MMH: mH, UH: μH

MECHANISM SECTION

No.	Part No.	Description
361	3-576-835-11	SEAM, ADJUSTMENT, ERASE HEAD
362	3-701-438-21	WASHER
363	3-701-439-21	WASHER
364	3-701-441-01	WASHER
365	3-701-444-11	WASHER, 6
366	4-855-109-12	RUBBER, LIFTER CUSHION
367	7-621-772-00	SCREW +B 2X3
368	7-621-772-10	SCREW +B 2X4
369	7-621-772-30	SCREW +B 2X6
370	7-621-775-10	SCREW +B 2.6X4
371	7-621-775-50	SCREW +B 2.6X10
372	7-624-110-04	STOP RING 6.0, TYPE -E
373	7-627-552-38	SCREW, PRECISION +P 1.7X3
374	7-671-112-11	BALL, STEEL
375	7-671-113-11	BALL, STEEL
376	7-682-949-01	SCREW +PSW 3X10
377	7-684-023-04	N 3, TYPE 2
378	7-685-533-11	SCREW +BTP 2.6X6 TYPE2 N-S
379	7-685-791-01	SCREW +PTT 2.6X5 (S)
380	7-685-862-01	SCREW +BVT 2.6X6 (S)
381	7-685-870-01	SCREW +BVT 3X5 (S)
382	7-687-246-21	SCREW, TOTSU PTPWH 3X8, TYPE2
383	7-688-002-12	W 2.6, MIDDLE
384	•;X-3575-301-0	PLATE (A) ASSY, HOLDER FULCRUM
385	•;X-3575-302-0	PLATE (B) ASSY, FULCRUM
386	X-3575-304-0	PINCH LEVER (T) ASSY
387	X-3575-308-0	MOTOR COMPLETE ASSY, BSL
388	X-3575-310-0	LEVER ASSY, TENSION, BACK
389	X-3575-319-0	FLYWHEEL (RIGHT) ASSY
390	X-3575-320-0	FLYWHEEL (LEFT) ASSY
391	X-3575-321-0	PINCH LEVER (S) ASSY
392	X-3575-322-0	BASE ASSY, CAPSTAN
393	X-3575-323-0	CHASSIS ASSY, HEAD
394	•;X-3575-342-0	PLATE ASSY, BRAKE
395	•;X-3575-344-0	CHASSIS ASSY, MECHANISM
396	X-3575-349-0	MOTOR ASSY, REEL
397	•;X-3575-355-0	PLATE ASSY, ORNAMENTAL
398	3-701-467-01	SCREW 2X5

ELECTRICAL PARTS

Ref.No.	Part No.	Description
501	1-519-247-00	INDICATOR TUBE, FLUORESCENT
502	△.1-526-576-31	(E).....SELECTOR, POWER VOLTAGE
503	1-554-007-00	SWITCH, PUSH (S501-S504)
504	1-554-008-00	SWITCH, PUSH (S505-S508)
505	△.1-551-472-00	(E2).....CORD, POWER
505	△.1-555-735-00	(E1).....CORD, POWER
505	△.1-555-795-00	(AEP).....CORD, POWER
505	△.1-556-035-00	(UK).....CORD, POWER
505	△.1-556-874-00	(US,Canadian)...CORD, POWER
506	•;1-560-060-00	PIN, CONNECTOR 2P
507	•;1-560-061-00	PIN, CONNECTOR 3P
508	•;1-560-062-00	PIN, CONNECTOR 4P
509	•;1-560-063-00	PIN, CONNECTOR 5P
510	•;1-560-064-00	PIN, CONNECTOR 6P
511	•;1-560-065-00	PIN, CONNECTOR 8P
512	•;1-560-338-00	PIN, CONNECTOR 7P
513	•;1-560-339-00	PIN, CONNECTOR 9P
514	1-561-293-00	SOCKET (4P)
515	•;1-603-823-00	PC BOARD, PHOTO
516	•;1-603-825-00	PC BOARD, SERVO
517	•;1-606-778-00	PC BOARD, TR-1
518	•;1-606-779-00	PC BOARD, TR-2
519	•;1-606-780-00	PC BOARD, TR-3
520	•;1-606-781-00	PC BOARD, TIMER
521	•;1-606-782-00	PC BOARD, SYSTEM CONTROL
522	•;1-606-783-00	PC BOARD, METER (A)
523	•;1-606-784-00	PC BOARD, METER (B)
524	•;1-606-785-00	PC BOARD, CONTROL SWITCH
525	•;1-606-786-00	PC BOARD, MD
526	•;1-606-787-00	PC BOARD, PB
527	•;1-607-454-00	PC BOARD,
528	•;1-608-472-00	PC BOARD, H.P
529	•;1-608-473-00	PC BOARD, LAMP
530	•;1-608-474-00	PC BOARD, PIN JACK
531	•;1-608-475-00	PC BOARD, VOL
532	•;1-608-476-00	PC BOARD, BIAS FINE
533	•;1-608-477-00	PC BOARD, REC
534	8-825-500-30	HEAD, REC/PB (RPA230-3602)
535	8-825-604-30	HEAD, ERASE (EF206-36B)
536	•;A-2006-049-A	MOUNTED PCB, REC
537	•;A-2008-037-A	MOUNTED PCB, PB
538	•;A-2019-141-A	MOUNTED PCB, SYSTEM CONTROL
C001	△.1-161-744-00	(AEP,UK,E).....CAP, CERAMIC 10000PF
C001	△.1-161-749-00	(US,Canadian)...CAP, CERAMIC 10000PF

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "•" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

SEMICONDUCTORS

In each case, U : μ, for example:  
 UA...: μA...; UPA...: μPA...; UPC...: μPC;  
 UPD...: μPD...

CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers.  
 MF: μF, PF: μμF.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

• F : nonflammable

COILS

• MMH : mH, UH : μH

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



## ELECTRICAL PARTS

## ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C101	1-107-231-00	MICA	360PF	5%	50V
C103	1-130-305-00	FILM	0.022MF	5%	100V
C104	1-123-830-00	ELECT	4.7MF	20%	50V
C105	1-130-289-00	FILM	0.0047MF	5%	100V
C107	1-161-319-00	CERAMIC	470PF	10%	50V
C108	1-130-634-00	FILM	0.15MF	5%	50V
C109	1-130-628-00	FILM	0.047MF	5%	50V
C110	1-130-625-00	FILM	0.027MF	5%	50V
C112	1-130-633-00	FILM	0.12MF	5%	50V
C113	1-130-892-00	FILM	0.015MF	3%	100V
C114	1-130-856-00	FILM	0.0068MF	3%	100V
C115	1-130-623-00	FILM	0.018MF	5%	50V
C116	1-130-631-00	FILM	0.082MF	5%	50V
C118	1-130-635-00	FILM	0.18MF	5%	50V
C119	1-130-634-00	FILM	0.15MF	5%	50V
C120	1-130-632-00	FILM	0.1MF	5%	50V
C121	1-130-632-00	FILM	0.1MF	5%	50V
C122	1-130-621-00	FILM	0.012MF	5%	50V
C123	1-130-633-00	FILM	0.12MF	5%	50V
C124	1-130-851-00	FILM	0.082MF	3%	100V
C126	1-130-893-00	FILM	0.027MF	3%	100V
C127	1-130-856-00	FILM	0.0068MF	3%	100V
C128	1-123-232-00	ELECT	4.7MF	20%	50V
C201	1-107-231-00	MICA	360PF	5%	50V
C203	1-130-305-00	FILM	0.022MF	5%	100V
C204	1-123-830-00	ELECT	4.7MF	20%	50V
C205	1-130-289-00	FILM	0.0047MF	5%	100V
C207	1-161-319-00	CERAMIC	470PF	10%	50V
C208	1-130-634-00	FILM	0.15MF	5%	50V
C209	1-130-628-00	FILM	0.047MF	5%	50V
C210	1-130-625-00	FILM	0.027MF	5%	50V
C212	1-130-633-00	FILM	0.12MF	5%	50V
C213	1-130-892-00	FILM	0.015MF	3%	100V
C214	1-130-856-00	FILM	0.0068MF	3%	100V
C215	1-130-623-00	FILM	0.018MF	5%	50V
C216	1-130-631-00	FILM	0.082MF	5%	50V
C218	1-130-635-00	FILM	0.18MF	5%	50V
C219	1-130-634-00	FILM	0.15MF	5%	50V
C220	1-130-632-00	FILM	0.1MF	5%	50V
C221	1-130-632-00	FILM	0.1MF	5%	50V
C222	1-130-621-00	FILM	0.012MF	5%	50V
C223	1-130-633-00	FILM	0.12MF	5%	50V
C224	1-130-851-00	FILM	0.082MF	3%	100V
C226	1-130-893-00	FILM	0.027MF	3%	100V
C227	1-130-856-00	FILM	0.0068MF	3%	100V

Ref.No.	Part No.	Description			
C228	1-123-232-00	ELECT	4.7MF	20%	50V
C307	1-130-635-00	FILM	0.18MF	5%	50V
C308	1-130-634-00	FILM	0.15MF	5%	50V
C309	1-130-632-00	FILM	0.1MF	5%	50V
C310	1-130-632-00	FILM	0.1MF	5%	50V
C311	1-130-621-00	FILM	0.012MF	5%	50V
C312	1-130-633-00	FILM	0.12MF	5%	50V
C315	1-130-851-00	FILM	0.082MF	3%	100V
C317	1-130-856-00	FILM	0.0068MF	3%	100V
C318	1-130-893-00	FILM	0.027MF	3%	100V
C319	1-123-232-00	ELECT	4.7MF	20%	50V
C321	1-130-625-00	FILM	0.027MF	5%	50V
C323	1-123-234-00	ELECT	10MF	20%	50V
C324	1-130-620-00	FILM	0.01MF	5%	50V
C325	1-130-626-00	FILM	0.033MF	5%	50V
C326	1-130-622-00	FILM	0.015MF	5%	50V
C327	1-130-629-00	FILM	0.056MF	5%	50V
C328	1-130-621-00	FILM	0.012MF	5%	50V
C329	1-130-630-00	FILM	0.068MF	5%	50V
C330	1-130-622-00	FILM	0.015MF	5%	50V
C334	1-130-634-00	FILM	0.15MF	5%	50V
C335	1-130-628-00	FILM	0.047MF	5%	50V
C336	1-130-625-00	FILM	0.027MF	5%	50V
C337	1-130-633-00	FILM	0.12MF	5%	50V
C339	1-130-856-00	FILM	0.0068MF	3%	100V
C340	1-130-623-00	FILM	0.018MF	5%	50V
C344	1-130-631-00	FILM	0.082MF	5%	50V
C350	1-107-172-00	MICA	130PF	5%	500V
C351	1-107-171-00	MICA	120PF	5%	500V
C407	1-130-635-00	FILM	0.18MF	5%	50V
C408	1-130-634-00	FILM	0.15MF	5%	50V
C409	1-130-632-00	FILM	0.1MF	5%	50V
C410	1-130-632-00	FILM	0.1MF	5%	50V
C411	1-130-621-00	FILM	0.012MF	5%	50V
C412	1-130-633-00	FILM	0.12MF	5%	50V
C415	1-130-851-00	FILM	0.082MF	3%	100V
C417	1-130-856-00	FILM	0.0068MF	3%	100V
C418	1-130-893-00	FILM	0.027MF	3%	100V
C419	1-123-232-00	ELECT	4.7MF	20%	50V
C421	1-130-625-00	FILM	0.027MF	5%	50V
C423	1-123-234-00	ELECT	10MF	20%	50V
C424	1-130-620-00	FILM	0.01MF	5%	50V
C425	1-130-626-00	FILM	0.033MF	5%	50V
C426	1-130-622-00	FILM	0.015MF	5%	50V
C427	1-130-629-00	FILM	0.056MF	5%	50V

### NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

### CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers.
- MF: μF, PF: μF.

### RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F: nonflammable

### SEMICONDUCTORS

- In each case, U: μ, for example: UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

### COILS

- MMH: mH, UH: μH

ELECTRICAL PARTS

Ref.No.	Part No.	Description			
C428	1-130-621-00	FILM	0.012MF	5%	50V
C429	1-130-630-00	FILM	0.068MF	5%	50V
C430	1-130-622-00	FILM	0.015MF	5%	50V
C434	1-130-634-00	FILM	0.15MF	5%	50V
C435	1-130-628-00	FILM	0.047MF	5%	50V
C436	1-130-625-00	FILM	0.027MF	5%	50V
C437	1-130-633-00	FILM	0.12MF	5%	50V
C439	1-130-856-00	FILM	0.0068MF	3%	100V
C440	1-130-623-00	FILM	0.018MF	5%	50V
C444	1-130-631-00	FILM	0.082MF	5%	50V
C450	1-107-172-00	MICA	130PF	5%	500V
C451	1-107-171-00	MICA	120PF	5%	500V
C507	▲ 1-123-335-00	ELECT	330MF	20%	25V
C508	▲ 1-123-311-00	ELECT	1000MF	20%	10V
C509	▲ 1-123-335-00	ELECT	330MF	20%	25V
C511	▲ 1-123-311-00	ELECT	1000MF	20%	10V
C513	1-141-225-00	CAP, TUNING, TRIMAR			
C601	▲ 1-123-337-00	ELECT	1000MF	20%	25V
C602	▲ 1-123-697-00	ELECT	1000MF	20%	25V
C603	▲ 1-123-697-00	ELECT	1000MF	20%	25V
C604	▲ 1-123-361-00	ELECT	220MF	20%	25V
C609	▲ 1-123-349-00	ELECT	1000MF	20%	35V
C610	▲ 1-123-325-00	ELECT	2200MF	20%	16V
C623	1-130-626-00	FILM	0.033MF	5%	50V
C624	1-130-635-00	FILM	0.18MF	5%	50V
C636	▲ 1-123-323-00	ELECT	470MF	20%	16V
C802	1-130-623-00	FILM	0.018MF	5%	50V
CNJ301	1-507-531-00	PLATE, PIN-JACK			
CNJ302	1-507-531-00	PLATE, PIN-JACK			
CNJ401	1-507-531-00	PLATE, PIN-JACK			
CNJ402	1-507-531-00	PLATE, PIN-JACK			
CNJ501	1-507-659-00	JACK			
CP501	1-464-132-00	UNIT, BIAS OSCILLATOR			
D501	8-719-910-64	DIODE HZ 68 1L			
D502	8-719-910-64	DIODE HZ 68 1L			
D503	8-719-815-55	DIODE 1S1555			
D504	8-719-815-55	DIODE 1S1555			
D505	8-719-815-55	DIODE 1S1555			
D506	8-719-815-55	DIODE 1S1555			
D507	8-719-815-55	DIODE 1S1555			
D508	8-719-815-55	DIODE 1S1555			
D509	8-719-815-55	DIODE 1S1555			
D601	▲ 8-719-200-02	DIODE 10E-2			
D602	▲ 8-719-200-02	DIODE 10E-2			
D603	▲ 8-719-200-02	DIODE 10E-2			

ELECTRICAL PARTS

Ref.No.	Part No.	Description
D604	▲ 8-719-200-02	DIODE 10E-2
D605	▲ 8-719-200-02	DIODE 10E-2
D606	▲ 8-719-999-81	DIODE EQA01-08R1
D607	8-719-200-02	DIODE 10E-2
D608	8-719-200-02	DIODE 10E-2
D609	8-719-902-23	DIODE HZ 22-3L
D610	8-719-922-71	DIODE HZ 27-1L
D611	▲ 8-719-200-02	DIODE 10E-2
D612	▲ 8-719-200-02	DIODE 10E-2
D613	▲ 8-719-200-02	DIODE 10E-2
D614	▲ 8-719-200-02	DIODE 10E-2
D616	8-719-815-55	DIODE 1S1555
D617	8-719-815-55	DIODE 1S1555
D618	8-719-910-92	DIODE HZ 9A2L
D619	8-719-815-55	DIODE 1S1555
D620	8-719-815-55	DIODE 1S1555
D621	8-719-815-55	DIODE 1S1555
D622	8-719-815-55	DIODE 1S1555
D623	8-719-815-55	DIODE 1S1555
D624	8-719-815-55	DIODE 1S1555
D625	8-719-200-02	DIODE 10E-2
D626	8-719-200-02	DIODE 10E-2
D627	8-719-815-55	DIODE 1S1555
D628	8-719-815-55	DIODE 1S1555
D629	8-719-815-55	DIODE 1S1555
D630	8-719-815-55	DIODE 1S1555
D631	8-719-815-55	DIODE 1S1555
D632	8-719-200-02	DIODE 10E-2
D633	8-719-815-55	DIODE 1S1555
D634	8-719-815-55	DIODE 1S1555
D636	8-719-815-55	DIODE 1S1555
D637	8-719-815-55	DIODE 1S1555
D638	8-719-815-55	DIODE 1S1555
D639	8-719-200-02	DIODE 10E-2
D640	8-719-200-02	DIODE 10E-2
D641	8-719-815-55	DIODE 1S1555
D642	8-719-815-55	DIODE 1S1555
D643	8-719-815-55	DIODE 1S1555
D644	8-719-815-55	DIODE 1S1555
D645	8-719-815-55	DIODE 1S1555
D701	8-719-902-33	DIODE SLR-34UR5
D702	8-719-902-26	DIODE SLR-34PG5
D703	8-719-902-25	DIODE SLR-34DU5
D801	8-719-910-29	DIODE HZ 12C 3L
D802	8-719-815-55	DIODE 1S1555

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

SEMICONDUCTORS

In each case, U : μ, for example:  
 UA...: μA... , UPA...: μPA... , UPC...: μPC,  
 UPD...: μPD...

CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers. MF: μF, PF: μμF.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F : nonflammable

COILS

- MMH : mH, UH : μH

The components identified by shading and mark ▲ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

## ELECTRICAL PARTS

Ref.No.	Part No.	Description
D803	8-719-815-55	DIODE 1S1555
D901	8-719-100-27	DIODE RD4.7E-82
D902	8-719-815-55	DIODE 1S1555
H901	8-719-814-11	DIODE THS102
H902	8-719-814-11	DIODE THS102
IC 101	8-759-100-04	IC CX-174
IC 102	8-759-100-04	IC CX-174
IC 201	8-759-100-04	IC CX-174
IC 202	8-759-100-04	IC CX-174
IC 301	8-759-100-04	IC CX-174
IC 302	8-759-100-04	IC CX-174
IC 401	8-759-100-04	IC CX-174
IC 402	8-759-100-04	IC CX-174
IC 501	8-759-700-04	IC NJM2043D-D
IC 502	8-759-961-38	IC BA6138
IC 503	8-759-145-57	IC UPC4557C
IC 601	8-759-900-71	IC MSM58361RS
IC 602	8-759-729-03	IC NJM2903D
IC 603	8-759-133-90	IC UPC339C
IC 604	8-759-984-69	IC MB84069UB
IC 801	8-759-904-72	IC MSL9359RS
IC 802	8-759-100-12	IC UPD554C-089
IC 901	8-750-600-69	IC CX-069A
IC 902	8-759-700-58	IC NJM4558D-FA
L101	1-407-240-00	MICRO INDUCTOR 22MMH
L102	1-408-259-00	MICRO INDUCTOR 15MMH
L201	1-407-240-00	MICRO INDUCTOR 22MMH
L202	1-408-259-00	MICRO INDUCTOR 15MMH
L301	1-408-259-00	MICRO INDUCTOR 15MMH
L302	1-408-254-00	MICRO INDUCTOR 5.6MMH
L303	1-408-252-00	MICRO INDUCTOR 3.9MMH
L304	1-408-253-00	MICRO INDUCTOR 4.7MMH
L305	1-408-252-00	MICRO INDUCTOR 3.9MMH
L306	1-408-259-00	MICRO INDUCTOR 15MMH
L401	1-408-259-00	MICRO INDUCTOR 15MMH
L402	1-408-254-00	MICRO INDUCTOR 5.6MMH
L403	1-408-252-00	MICRO INDUCTOR 3.9MMH
L404	1-408-253-00	MICRO INDUCTOR 4.7MMH
L405	1-408-252-00	MICRO INDUCTOR 3.9MMH
L406	1-408-259-00	MICRO INDUCTOR 15MMH
L501	1-407-177-XX	MICRO INDUCTOR 470UH
L502	1-407-177-XX	MICRO INDUCTOR 470UH
L801	1-407-177-XX	MICRO INDUCTOR 470UH
LPF 301	1-231-388-00	FILTER, LOWPASS
LPF 401	1-231-388-00	FILTER, LOWPASS

## ELECTRICAL PARTS

Ref.No.	Part No.	Description
PL1	1-518-313-00	LAMP, PILOT
PL501	1-518-489-21	LAMP, PILOT
PL502	1-518-463-00	LAMP, PILOT
PL503	1-518-463-00	LAMP, PILOT
PM1	1-454-333-00	SOLENOID, PLUNGER
PM2	1-454-291-00	SOLENOID, PLUNGER
Q101	8-729-663-47	TRANSISTOR 2SC1364
Q102	8-729-663-48	TRANSISTOR 2SC1364-8
Q103	8-729-663-48	TRANSISTOR 2SC1364-8
Q104	8-729-663-48	TRANSISTOR 2SC1364-8
Q105	8-729-663-48	TRANSISTOR 2SC1364-8
Q106	8-729-663-48	TRANSISTOR 2SC1364-8
Q107	8-729-663-48	TRANSISTOR 2SC1364-8
Q108	8-729-663-48	TRANSISTOR 2SC1364-8
Q109	8-729-663-48	TRANSISTOR 2SC1364-8
Q110	8-729-663-48	TRANSISTOR 2SC1364-8
Q201	8-729-663-47	TRANSISTOR 2SC1364
Q202	8-729-663-48	TRANSISTOR 2SC1364-8
Q203	8-729-663-48	TRANSISTOR 2SC1364-8
Q204	8-729-663-48	TRANSISTOR 2SC1364-8
Q205	8-729-663-48	TRANSISTOR 2SC1364-8
Q206	8-729-663-48	TRANSISTOR 2SC1364-8
Q207	8-729-663-48	TRANSISTOR 2SC1364-8
Q208	8-729-663-48	TRANSISTOR 2SC1364-8
Q209	8-729-663-48	TRANSISTOR 2SC1364-8
Q210	8-729-663-48	TRANSISTOR 2SC1364-8
Q301	8-729-334-58	TRANSISTOR 2SC1345
Q302	8-729-663-48	TRANSISTOR 2SC1364-8
Q303	8-729-663-48	TRANSISTOR 2SC1364-8
Q304	8-729-663-48	TRANSISTOR 2SC1364-8
Q305	8-729-663-48	TRANSISTOR 2SC1364-8
Q306	8-729-663-48	TRANSISTOR 2SC1364-8
Q307	8-729-663-48	TRANSISTOR 2SC1364-8
Q308	8-729-663-48	TRANSISTOR 2SC1364-8
Q309	8-729-663-48	TRANSISTOR 2SC1364-8
Q310	8-729-663-48	TRANSISTOR 2SC1364-8
Q311	8-729-663-48	TRANSISTOR 2SC1364-8
Q312	8-729-100-13	TRANSISTOR 2SC2001
Q313	8-729-663-47	TRANSISTOR 2SC1364
Q314	8-729-663-48	TRANSISTOR 2SC1364-8
Q401	8-729-334-58	TRANSISTOR 2SC1345
Q402	8-729-663-48	TRANSISTOR 2SC1364-8
Q403	8-729-663-48	TRANSISTOR 2SC1364-8
Q404	8-729-663-48	TRANSISTOR 2SC1364-8
Q405	8-729-663-48	TRANSISTOR 2SC1364-8

### NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

### CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers. MF: μF, PF: μuF.

### RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.
- F: nonflammable

### SEMICONDUCTORS

- In each case, U: μ, for example: UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

### COILS

- MMH: mH, UH: μH



ELECTRICAL PARTS

Ref.No.	Part No.	Description
Q406	8-729-663-48	TRANSISTOR 2SC1364-8
Q407	8-729-663-48	TRANSISTOR 2SC1364-8
Q408	8-729-663-48	TRANSISTOR 2SC1364-8
Q409	8-729-663-48	TRANSISTOR 2SC1364-8
Q410	8-729-663-48	TRANSISTOR 2SC1364-8
Q411	8-729-663-48	TRANSISTOR 2SC1364-8
Q412	8-729-100-13	TRANSISTOR 2SC2001
Q413	8-729-663-47	TRANSISTOR 2SC1364
Q414	8-729-663-48	TRANSISTOR 2SC1364-8
Q501	8-729-203-02	TRANSISTOR 2SK30A-0
Q502	8-729-315-22	TRANSISTOR 2SD1152
Q503	8-729-315-22	TRANSISTOR 2SD1152
Q504	8-729-180-93	TRANSISTOR 2SD809
Q505	8-729-384-48	TRANSISTOR 2SA844
Q506	8-729-203-02	TRANSISTOR 2SK30A-0
Q507	8-729-384-48	TRANSISTOR 2SA844
Q508	8-729-173-13	TRANSISTOR 2SB731
Q510	8-729-663-47	TRANSISTOR 2SC1364
Q511	8-729-663-47	TRANSISTOR 2SC1364
Q512	8-729-602-67	TRANSISTOR 2SA1026-7
Q513	8-729-602-67	TRANSISTOR 2SA1026-7
Q514	8-729-663-48	TRANSISTOR 2SC1364-8
Q515	8-729-663-48	TRANSISTOR 2SC1364-8
Q601	8-729-180-93	TRANSISTOR 2SD809
Q602	8-729-180-93	TRANSISTOR 2SD809
Q603	8-729-288-02	TRANSISTOR 2SD880
Q604	8-729-663-47	TRANSISTOR 2SC1364
Q605	8-729-180-92	TRANSISTOR 2SD809
Q606	8-729-663-47	TRANSISTOR 2SC1364
Q607	8-729-602-67	TRANSISTOR 2SA1026-7
Q608	8-729-602-67	TRANSISTOR 2SA1026-7
Q609	8-729-663-47	TRANSISTOR 2SC1364
Q610	8-729-663-47	TRANSISTOR 2SC1364
Q611	8-729-663-47	TRANSISTOR 2SC1364
Q612	8-729-663-47	TRANSISTOR 2SC1364
Q613	8-729-663-47	TRANSISTOR 2SC1364
Q614	8-729-663-47	TRANSISTOR 2SC1364
Q615	8-729-663-47	TRANSISTOR 2SC1364
Q616	8-729-663-47	TRANSISTOR 2SC1364
Q617	8-729-602-67	TRANSISTOR 2SA1026-7
Q618	8-729-602-67	TRANSISTOR 2SA1026-7
Q619	8-729-602-67	TRANSISTOR 2SA1026-7
Q620	8-729-602-67	TRANSISTOR 2SA1026-7
Q621	8-729-602-67	TRANSISTOR 2SA1026-7
Q622	8-729-602-67	TRANSISTOR 2SA1026-7

ELECTRICAL PARTS

Ref.No.	Part No.	Description
Q623	8-729-602-67	TRANSISTOR 2SA1026-7
Q624	8-729-663-47	TRANSISTOR 2SC1364
Q625	8-729-663-47	TRANSISTOR 2SC1364
Q626	8-729-102-03	TRANSISTOR 2SD1020
Q627	8-729-102-03	TRANSISTOR 2SD1020
Q628	8-729-103-43	TRANSISTOR 2SB734
Q629	8-729-663-48	TRANSISTOR 2SC1364-8
Q630	8-729-880-83	TRANSISTOR 2SB808
Q631	8-729-880-83	TRANSISTOR 2SB808
Q632	8-729-811-24	TRANSISTOR 2SD1012
Q633	8-729-811-24	TRANSISTOR 2SD1012
Q634	8-729-663-47	TRANSISTOR 2SC1364
Q635	8-729-180-93	TRANSISTOR 2SD809
Q636	8-729-602-67	TRANSISTOR 2SA1026-7
Q637	8-729-663-47	TRANSISTOR 2SC1364
Q638	8-729-663-47	TRANSISTOR 2SC1364
Q639	8-729-103-43	TRANSISTOR 2SB734-4
Q640	8-729-663-48	TRANSISTOR 2SC1364-8
Q641	8-729-602-67	TRANSISTOR 2SA1026-7
Q642	8-729-602-67	TRANSISTOR 2SA1026-7
Q643	8-729-663-48	TRANSISTOR 2SC1364-8
Q801	8-729-663-48	TRANSISTOR 2SC1364-8
Q803	8-729-602-67	TRANSISTOR 2SA1026-7
Q805	8-729-602-67	TRANSISTOR 2SA1026-7
Q807	8-729-602-67	TRANSISTOR 2SA1026-7
Q808	8-729-602-67	TRANSISTOR 2SA1026-7
Q901	8-729-177-43	TRANSISTOR 2SD774
Q902	8-729-103-43	TRANSISTOR 2SB734
Q903	8-729-177-43	TRANSISTOR 2SD774
Q904	8-729-103-43	TRANSISTOR 2SB734
Q905	8-729-101-02	TRANSISTOR PH102
Q906	8-729-101-02	TRANSISTOR PH102
R101	1-244-915-51	CARBON 56K 5% 1/2W
R102	1-244-853-00	CARBON 150 5% 1/2W
R103	1-244-890-00	CARBON 5.1K 5% 1/2W
R104	1-244-924-00	CARBON 130K 5% 1/2W
R110	1-244-897-00	CARBON 10K 5% 1/2W
R111	1-244-929-00	CARBON 220K 5% 1/2W
R116	1-214-966-00	METAL 1.2M 1% 1/4W
R119	1-214-758-00	METAL 16K 1% 1/4W
R121	1-214-729-00	METAL 1K 1% 1/4W
R122	1-214-766-00	METAL 36K 1% 1/4W
R126	1-214-713-00	METAL 220 1% 1/4W
R127	1-214-131-00	METAL 910 1% 1/4W

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers. MF: μF, PF: μF.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.
- F: nonflammable

SEMICONDUCTORS

- In each case, U: μ, for example: UA...: μA..., UPA...: μPA..., UPC...: μPC, UPD...: μPD...

COILS

- MMH: mH, UH: μH

## ELECTRICAL PARTS

Ref.No.	Part No.	Description				
R128	1-214-746-00	METAL	5.1K	1%	1/4W	
R130	1-214-741-00	METAL	3.3K	1%	1/4W	
R131	1-214-753-00	METAL	10K	1%	1/4W	
R132	1-214-741-00	METAL	3.3K	1%	1/4W	
R142	1-214-964-00	METAL	1M	1%	1/4W	
R145	1-214-758-00	METAL	16K	1%	1/4W	
R165	1-214-964-00	METAL	1M	1%	1/4W	
R201	1-244-915-51	CARBON	56K	5%	1/2W	
R202	1-244-853-00	CARBON	150	5%	1/2W	
R203	1-244-890-00	CARBON	5.1K	5%	1/2W	
R204	1-244-924-00	CARBON	130K	5%	1/2W	
R210	1-244-897-00	CARBON	10K	5%	1/2W	
R211	1-244-929-00	CARBON	220K	5%	1/2W	
R212	1-244-905-00	CARBON	22K	5%	1/2W	
R216	1-214-966-00	METAL	1.2M	1%	1/4W	
R219	1-214-758-00	METAL	16K	1%	1/4W	
R221	1-214-729-00	METAL	1K	1%	1/4W	
R222	1-214-766-00	METAL	36K	1%	1/4W	
R226	1-214-713-00	METAL	220	1%	1/4W	
R227	1-214-131-00	METAL	910	1%	1/4W	
R228	1-214-746-00	METAL	5.1K	1%	1/4W	
R230	1-214-741-00	METAL	3.3K	1%	1/4W	
R231	1-214-753-00	METAL	10K	1%	1/4W	
R232	1-214-741-00	METAL	3.3K	1%	1/4W	
R242	1-214-964-00	METAL	1M	1%	1/4W	
R245	1-214-758-00	METAL	16K	1%	1/4W	
R265	1-214-964-00	METAL	1M	1%	1/4W	
R301	1-244-909-00	CARBON	33K	5%	1/2W	
R304	1-244-873-00	CARBON	1K	5%	1/2W	
R314	1-214-964-00	METAL	1M	1%	1/4W	
R320	1-214-758-00	METAL	16K	1%	1/4W	
R337	1-214-966-00	METAL	1.2M	1%	1/4W	
R341	1-214-758-00	METAL	16K	1%	1/4W	
R349	1-214-746-00	METAL	5.1K	1%	1/4W	
R350	1-214-131-00	METAL	910	1%	1/4W	
R351	1-214-713-00	METAL	220	1%	1/4W	
R356	1-214-741-00	METAL	3.3K	1%	1/4W	
R360	1-214-753-00	METAL	10K	1%	1/4W	
R361	1-214-741-00	METAL	3.3K	1%	1/4W	
R366	1-214-739-00	METAL	2.7K	1%	1/4W	
R386	1-244-881-00	CARBON	2.2K	5%	1/2W	
R399	1-244-881-00	CARBON	2.2K	5%	1/2W	
R401	1-244-909-00	CARBON	33K	5%	1/2W	
R404	1-244-873-00	CARBON	1K	5%	1/2W	
R414	1-214-964-00	METAL	1M	1%	1/4W	

## ELECTRICAL PARTS

Ref.No.	Part No.	Description				
R420	1-214-758-00	METAL	16K	1%	1/4W	
R437	1-214-966-00	METAL	1.2M	1%	1/4W	
R441	1-214-758-00	METAL	16K	1%	1/4W	
R449	1-214-746-00	METAL	5.1K	1%	1/4W	
R450	1-214-131-00	METAL	910	1%	1/4W	
R451	1-214-713-00	METAL	220	1%	1/4W	
R456	1-214-741-00	METAL	3.3K	1%	1/4W	
R460	1-214-753-00	METAL	10K	1%	1/4W	
R461	1-214-741-00	METAL	3.3K	1%	1/4W	
R466	1-214-739-00	METAL	2.7K	1%	1/4W	
R486	1-244-881-00	CARBON	2.2K	5%	1/2W	
R499	1-244-881-00	CARBON	2.2K	5%	1/2W	
R501	1-244-865-00	CARBON	470	5%	1/2W	
R502	1-244-865-00	CARBON	470	5%	1/2W	
R508	1-244-849-00	CARBON	100	5%	1/2W	
R509	1-244-849-00	CARBON	100	5%	1/2W	
R510	1-244-857-00	CARBON	220	5%	1/2W	
R511	1-244-897-00	CARBON	10K	5%	1/2W	
R512	1-244-873-00	CARBON	1K	5%	1/2W	
R513	1-244-879-00	CARBON	1.8K	5%	1/2W	
R514	1-244-857-00	CARBON	220	5%	1/2W	
R515	1-244-897-00	CARBON	10K	5%	1/2W	
R516	1-244-873-00	CARBON	1K	5%	1/2W	
R517	1-244-879-00	CARBON	1.8K	5%	1/2W	
R604	1-244-881-00	CARBON	2.2K	5%	1/2W	
R693 $\Delta$	1-212-849-00	FUSIBLE	4.7	5%	1/4W	F
R710 $\Delta$	1-206-470-00	METAL	20	5%	2W	F
R718 $\Delta$	1-212-855-00	FUSIBLE	8.2	5%	1/4W	F
R719 $\Delta$	1-217-393-00	FUSIBLE	33	5%	1/4W	F
R819	1-244-868-00	CARBON	620	5%	1/2W	
R901	1-214-777-00	METAL	100K	1%	1/4W	
R905	1-214-960-00	METAL	680K	1%	1/4W	
R908	1-214-960-00	METAL	680K	1%	1/4W	
R911	1-214-743-00	METAL	3.9K	1%	1/4W	
R914	1-214-743-00	METAL	3.9K	1%	1/4W	
R950 $\Delta$	1-217-379-00	FUSIBLE	2.2	5%	1/4W	F
R951 $\Delta$	1-217-379-00	FUSIBLE	2.2	5%	1/4W	F
R3006	1-214-964-00	METAL	1M	1%	1/4W	
R4006	1-214-964-00	METAL	1M	1%	1/4W	
RV101	1-224-645-XX	RES, ADJ, CARBON	10K			
RV201	1-224-645-XX	RES, ADJ, CARBON	10K			
RV301	1-224-646-XX	RES, ADJ, CARBON	22K			
RV302	1-226-236-00	RES, ADJ, CARBON	10K			
RV401	1-224-646-XX	RES, ADJ, CARBON	22K			
RV402	1-226-236-00	RES, ADJ, CARBON	10K			

### NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "  $\Delta$  " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers ( $\Delta$ - $\Delta\Delta\Delta$ - $\Delta\Delta\Delta$ -XX or  $\Delta$ - $\Delta\Delta\Delta$ - $\Delta\Delta\Delta$ -X) may be different from those used in the set.

### SEMICONDUCTORS

In each case, U :  $\mu$ , for example:  
 UA...:  $\mu$ A...; UPA...:  $\mu$ PA...; UPC...:  $\mu$ PC;  
 UPD...:  $\mu$ PD...

### CAPACITORS:

- All capacitors are in  $\mu$ F. Common capacitors are omitted. Refer to the following lists for their part numbers.  
 MF:  $\mu$ F; PF:  $\mu$ F.

### RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

- F : nonflammable

### COILS

- MMH : mH, UH :  $\mu$ H

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

ELECTRICAL PARTS

Ref.No.	Part No.	Description
RV501	1-226-740-00	RES, VAR, CARBON 20K/20K
RV502	1-226-560-00	RES, VAR, CARBON 5K
RV503	1-226-980-00	RES, VAR, CARBON 20K/20K
RV601	1-226-233-00	RES, ADJ, CARBON 1K
RV901	1-224-661-00	RES, ADJ, METAL GLAZE 50K
S601	1-552-809-00	SWITCH, SLIDE
S701	1-552-539-00	SWITCH, KEY BOARD
S702	1-552-539-00	SWITCH, KEY BOARD
S703	1-552-539-00	SWITCH, KEY BOARD
S704	1-552-539-00	SWITCH, KEY BOARD
S705	1-552-539-00	SWITCH, KEY BOARD
S706	1-552-539-00	SWITCH, KEY BOARD
S707	1-552-539-00	SWITCH, KEY BOARD
S708	1-553-235-00	SWITCH, KEY BOARD
S709	1-553-235-00	SWITCH, KEY BOARD
S801	1-552-532-00	SWITCH, PUSH
S802	1-552-532-00	SWITCH, PUSH
S901	△.1-553-318-00	(AEP,UK,E).....SWITCH, PUSH (AC POWER)
S901	△.1-553-319-00	(US,Canadian)...SWITCH, PUSH (AC POWER)
T901	△.1-447-319-00	(US,Canadian)...TRANSFORMER, POWER
T901	△.1-447-320-00	(E).....TRANSFORMER, POWER
T901	△.1-447-321-00	(AEP,UK).....TRANSFORMER, POWER

NOTE:

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- Items marked "▲" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Due to standardization, parts with part numbers (Δ-ΔΔΔ-ΔΔΔ-XX or Δ-ΔΔΔΔ-ΔΔΔ-X) may be different from those used in the set.

SEMICONDUCTORS

In each case, U : μ, for example:  
 UA...: μA...; UPA...: μPA...; UPC...: μPC;  
 UPD...: μPD...

CAPACITORS:

- All capacitors are in μF. Common capacitors are omitted. Refer to the following lists for their part numbers.  
 MF: μF, PF: μμF.

RESISTORS

- All resistors are in ohms. Common 1/4W, 1/8W and 1/16W carbon resistors are omitted. Refer to the following lists for their part numbers.

• F : nonflammable

COILS

• MMH : mH, UH : μH

The components identified by shading and mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une trame et une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



## ELECTROLYTIC CAPACITORS

CAP. (μF)	RATING → : Use the high voltage rated one.					
	6.3 VOLT.	10 VOLT.	16 VOLT.	25 VOLT.	35 VOLT.	50 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.47					→	1-121-726-00
1.0					→	1-121-391-00
2.2					→	1-121-450-00
3.3	→	→	→	1-121-392-00	→	1-121-393-00
4.7	→	→	→	1-121-395-00	→	1-121-396-00
10	→	→	1-121-651-00	1-121-398-00	→	1-121-738-00
22	→	→	1-121-479-00	1-121-480-00	1-121-662-00	1-121-152-00
33	→	→	1-121-403-00	1-121-404-00	1-121-652-00	1-121-405-00
47	→	1-121-352-00	1-121-409-00	1-121-410-00	1-121-653-00	1-121-411-00
100	→	1-121-414-00	1-121-415-00	1-121-416-00	1-121-357-00	1-121-417-00
220	1-121-419-00	1-121-420-00	1-121-421-00	1-121-422-00	1-121-261-00	1-121-423-00
330	1-121-751-00	1-121-805-00	1-121-521-00	1-121-654-00	1-121-655-00	1-121-656-00
470	1-121-424-00	1-121-425-00	1-121-426-00	1-121-733-00	1-121-361-00	1-121-810-00
1000	→	1-121-736-00	1-121-245-00	1-121-657-00	1-121-388-00	1-123-061-00
2200	1-121-658-00	1-121-659-00	1-121-660-00	1-123-067-00	1-121-984-00	→
3300	1-121-661-00	1-123-075-00	1-123-071-00	→	→	→

CAP. (μF)	100 VOLT.	160 VOLT.	250 VOLT.	350 VOLT.
	PART No.	PART No.	PART No.	PART No.
0.47	→	→	→	→
1.0	1-123-249-00	1-123-252-00	1-123-003-00	1-121-168-00
2.2	1-123-250-00	1-123-026-00	→	1-123-028-00
3.3	1-121-995-00	→	1-123-004-00	1-123-006-00
4.7	1-123-255-00	1-121-246-00	1-121-759-00	1-123-007-00
10	1-121-126-00	1-121-999-00	1-123-254-00	1-123-008-00
22	1-121-996-00	1-123-253-00	1-123-005-00	1-123-022-00
33	1-121-997-00	1-121-757-00	→	→
47	1-123-251-00	1-121-919-00	→	→
100	1-123-084-00	→	→	→

## CERAMIC CAPACITORS

CAP. (pF)	RATING						
	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (pF)	50 VOLT.	CAP. (μF)	50 VOLT.
	PART No.		PART No.		PART No.		PART No.
0.5	1-101-837-00	22	1-102-959-00	150	1-101-361-00	0.001	1-102-074-00
0.75	1-101-586-00	24	1-102-960-00	160	1-101-367-00	0.0012	1-102-118-00
1.0	1-102-934-00	27	1-102-961-00	180	1-102-976-00	0.0015	1-102-119-00
1.5	1-101-576-00	30	1-102-962-00	200	1-102-977-00	0.0018	1-102-120-00
2.0	1-102-935-00	33	1-102-963-00	220	1-102-978-00	0.0022	1-102-121-00
3	1-102-936-00	36	1-102-964-00	240	1-102-979-00	0.0027	1-102-122-00
4	1-102-937-00	39	1-102-965-00	270	1-102-980-00	0.0033	1-102-123-00
5	1-102-942-00	43	1-102-966-00	300	1-102-981-00	0.0039	1-102-124-00
6	1-102-943-00	47	1-101-880-00	330	1-102-820-00	0.0047	1-102-125-00
7	1-102-944-00	51	1-101-882-00	360	1-102-821-00	0.0056	1-102-126-00
8	1-102-945-00	56	1-101-884-00	390	1-102-822-00	0.0068	1-102-127-00
9	1-102-946-00	62	1-101-886-00	430	1-102-823-00	0.0082	1-102-128-00
10	1-102-947-00	68	1-101-888-00	470	1-102-824-00	0.01	1-102-129-00
11	1-102-948-00	75	1-101-890-00	510	1-101-059-00	0.022	1-101-005-00
12	1-102-949-00	82	1-102-971-00	560	1-102-115-00	0.047	1-101-006-00
13	1-102-950-00	91	1-102-972-00	680	1-102-116-00		
15	1-102-951-00	100	1-102-973-00	820	1-102-117-00		
16	1-102-952-00	110	1-102-815-00				
18	1-102-953-00	120	1-102-816-00				
20	1-102-958-00	130	1-101-081-00				

0.001μF = 1,000pF

## CERAMIC (SEMICONDUCTOR) CAPACITORS

CAP. (μF)	RATING → : Use the high voltage rated one.				
	25 VOLT.	50 VOLT.	CAP. (μF)	25 VOLT.	50 VOLT.
	PART No.	PART No.		PART No.	PART No.
0.001	→	1-161-039-00	0.018	1-161-016-00	1-161-054-00
0.0012	→	1-161-040-00	0.022	1-161-017-00	1-161-055-00
0.0015	→	1-161-041-00	0.027	1-161-018-00	1-161-056-00
0.0018	→	1-161-042-00	0.033	1-161-019-00	1-161-057-00
0.0022	→	1-161-043-00	0.039	1-161-010-00	1-161-058-00
0.0027	→	1-161-044-00	0.047	1-161-021-00	1-161-059-00
0.0033	→	1-161-045-00	0.056	→	1-161-060-00
0.0039	→	1-161-046-00	0.068	→	1-161-061-00
0.0047	→	1-161-047-00	0.082	1-161-024-00	1-161-062-00
0.0056	→	1-161-048-00	0.1	1-161-025-00	1-161-063-00
0.0068	→	1-161-049-00			
0.0082	1-161-012-00	1-161-050-00			
0.01	1-161-013-00	1-161-051-00			
0.012	→	1-161-052-00			
0.015	1-161-015-00	1-161-053-00			

MYLAR CAPACITORS

RATING											
CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.	CAP. (μF)	50 VOLT.	100 VOLT.	200 VOLT.
	PART No.	PART No.	PART No.		PART No.	PART No.	PART No.		PART No.	PART No.	PART No.
0.001	1-108-227-00	1-108-365-00	1-108-409-00	0.01	1-108-239-00	1-108-377-00	1-108-421-00	0.1	1-108-251-00	1-108-389-00	1-108-433-00
0.0012	1-108-351-00	1-108-366-00	1-108-410-00	0.012	1-108-357-00	1-108-378-00	1-108-422-00	0.12	1-108-363-00	1-108-390-00	1-108-434-00
0.0015	1-108-228-00	1-108-367-00	1-108-411-00	0.015	1-108-240-00	1-108-379-00	1-108-423-00	0.15	1-108-252-00	1-108-391-00	1-108-435-00
0.0018	1-108-352-00	1-108-368-00	1-108-412-00	0.018	1-108-358-00	1-108-380-00	1-108-424-00	0.18	1-108-364-00	1-108-392-00	1-108-436-00
0.0022	1-108-230-00	1-108-369-00	1-108-413-00	0.022	1-108-242-00	1-108-381-00	1-108-425-00	0.22	1-108-254-00	1-108-393-00	1-108-437-00
0.0027	1-108-353-00	1-108-370-00	1-108-414-00	0.027	1-108-359-00	1-108-382-00	1-108-426-00	0.27	1-108-854-00	-	-
0.0033	1-108-232-00	1-108-371-00	1-108-415-00	0.033	1-108-244-00	1-108-383-00	1-108-427-00	0.33	1-108-855-00	-	-
0.0039	1-108-354-00	1-108-372-00	1-108-416-00	0.039	1-108-360-00	1-108-384-00	1-108-428-00	0.39	1-108-856-00	-	-
0.0047	1-108-234-00	1-108-373-00	1-108-417-00	0.047	1-108-246-00	1-108-385-00	1-108-429-00	0.47	1-108-857-00	-	-
0.0056	1-108-355-00	1-108-374-00	1-108-418-00	0.056	1-108-361-00	1-108-386-00	1-108-430-00				
0.0068	1-108-237-00	1-108-375-00	1-108-419-00	0.068	1-108-249-00	1-108-387-00	1-108-431-00				
0.0082	1-108-356-00	1-108-376-00	1-108-420-00	0.082	1-108-362-00	1-108-388-00	1-108-432-00				



TANTALUM CAPACITORS

RATING								→ : Use the high voltage rated one.
CAP. (μF)	3.15 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	25 VOLT.	35 VOLT.	
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.01						→		1-131-396-00
0.015						→		1-131-397-00
0.022						→		1-131-398-00
0.033						→		1-131-399-00
0.047						→		1-131-400-00
0.068					→	→		1-131-401-00
0.1					→	→		1-131-402-00
0.15					→	→		1-131-403-00
0.22					→	→		1-131-404-00
0.33					→	1-131-409-00		1-131-405-00
0.47	-	-	-	-	1-131-412-00	→		1-131-406-00
0.68	-	-	-	1-131-415-00	→	1-131-410-00		1-131-407-00
1.0	-	-	1-131-418-00	-	1-131-413-00	→		1-131-408-00
1.5	-	1-131-421-00	-	1-131-416-00	→	1-131-411-00		1-131-348-00
2.2	1-131-424-00	-	1-131-419-00	-	1-131-414-00	1-131-355-00		1-131-349-00
3.3	-	1-131-422-00	-	1-131-417-00	1-131-362-00	1-131-356-00		1-131-350-00
4.7	1-131-425-00	-	1-131-420-00	1-131-369-00	1-131-363-00	1-131-357-00		1-131-351-00
6.8	-	1-131-423-00	1-131-376-00	1-131-370-00	1-131-364-00	1-131-358-00		1-131-352-00
10	1-131-426-00	1-131-383-00	1-131-377-00	1-131-377-00	1-131-371-00	1-131-365-00		1-131-353-00
15	1-131-390-00	1-131-384-00	1-131-378-00	1-131-372-00	1-131-366-00	1-131-360-00		-
22	1-131-391-00	1-131-385-00	1-131-379-00	1-131-373-00	1-131-367-00			
33	1-131-392-00	1-131-386-00	1-131-380-00	1-131-374-00				
47	1-131-393-00	1-131-387-00	1-131-381-00	-				
68	1-131-394-00	1-131-388-00	-	-				
100	1-131-395-00	-	-	-				



TANTALUM CAPACITORS

RATING						
CAP. (μF)	3 VOLT.	6.3 VOLT.	10 VOLT.	16 VOLT.	20 VOLT.	35 VOLT.
	PART No.	PART No.	PART No.	PART No.	PART No.	PART No.
0.033						1-131-273-00
0.047						1-131-274-00
0.068						1-131-275-00
0.1						1-131-276-00
0.15						1-131-277-00
0.22			-	-	1-131-262-00	1-131-278-00
0.33			-	-	1-131-263-00	1-131-279-00
0.47			1-131-169-00	-	1-131-264-00	1-131-280-00
0.68			-	1-131-258-00	-	1-131-265-00
1.0			1-131-254-00	-	1-131-266-00	1-131-281-00
1.5		1-131-250-00	-	-	1-131-267-00	1-131-282-00
2.2		-	-	1-131-259-00	1-131-268-00	1-131-283-00
3.3		-	1-131-255-00	-	1-131-269-00	1-131-284-00
4.7		1-131-251-00	1-131-171-00	-	1-131-270-00	-
6.8		-	-	1-131-260-00	1-131-271-00	-
10		-	1-131-256-00	-	1-131-272-00	-
15		1-131-252-00	-	1-131-261-00	-	-
22		-	1-131-257-00	-	-	-
33	1-131-176-00	1-131-253-00	1-131-173-00	-	-	-
47	1-131-288-00	1-131-174-00	-	-	-	-
100	1-131-177-00	-	-	-	-	-




1/4 WATT CARBON RESISTORS


Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.	Ω	Part No.
1.0	1-246-401-00	10	1-246-425-00	100	1-246-449-00	1.0k	1-246-473-00	10k	1-246-497-00	100k	1-246-521-00	1.0M	1-246-545-00
1.1	1-246-402-00	11	1-246-426-00	110	1-246-450-00	1.1k	1-246-474-00	11k	1-246-498-00	110k	1-246-522-00	1.1M	1-210-814-00
1.2	1-246-403-00	12	1-246-427-00	120	1-246-451-00	1.2k	1-246-475-00	12k	1-246-499-00	120k	1-246-523-00	1.2M	1-210-815-00
1.3	1-246-404-00	13	1-246-428-00	130	1-246-452-00	1.3k	1-246-476-00	13k	1-246-500-00	130k	1-246-524-00	1.3M	1-210-816-00
1.5	1-246-405-00	15	1-246-429-00	150	1-246-453-00	1.5k	1-246-477-00	15k	1-246-501-00	150k	1-246-525-00	1.5M	1-210-817-00
1.6	1-246-406-00	16	1-246-430-00	160	1-246-454-00	1.6k	1-246-478-00	16k	1-246-502-00	160k	1-246-526-00	1.6M	1-210-818-00
1.8	1-246-407-00	18	1-246-431-00	180	1-246-455-00	1.8k	1-246-479-00	18k	1-246-503-00	180k	1-246-527-00	1.8M	1-210-819-00
2.0	1-246-408-00	20	1-246-432-00	200	1-246-456-00	2.0k	1-246-480-00	20k	1-246-504-00	200k	1-246-528-00	2.0M	1-210-820-00
2.2	1-246-409-00	22	1-246-433-00	220	1-246-457-00	2.2k	1-246-481-00	22k	1-246-505-00	220k	1-246-529-00	2.2M	1-210-821-00
2.4	1-246-410-00	24	1-246-434-00	240	1-246-458-00	2.4k	1-246-482-00	24k	1-246-506-00	240k	1-246-530-00	2.4M	1-244-754-00
2.7	1-246-411-00	27	1-246-435-00	270	1-246-459-00	2.7k	1-246-483-00	27k	1-246-507-00	270k	1-246-531-00	2.7M	1-244-755-00
3.0	1-246-412-00	30	1-246-436-00	300	1-246-460-00	3.0k	1-246-484-00	30k	1-246-508-00	300k	1-246-532-00	3.0M	1-244-756-00
3.3	1-246-413-00	33	1-246-437-00	330	1-246-461-00	3.3k	1-246-485-00	33k	1-246-509-00	330k	1-246-533-00	3.3M	1-244-757-00
3.6	1-246-414-00	36	1-246-438-00	360	1-246-462-00	3.6k	1-246-486-00	36k	1-246-510-00	360k	1-246-534-00	3.6M	1-244-758-00
3.9	1-246-415-00	39	1-246-439-00	390	1-246-463-00	3.9k	1-246-487-00	39k	1-246-511-00	390k	1-246-535-00	3.9M	1-244-759-00
4.3	1-246-416-00	43	1-246-440-00	430	1-246-464-00	4.3k	1-246-488-00	43k	1-246-512-00	430k	1-246-536-00	4.3M	1-244-760-00
4.7	1-246-417-00	47	1-246-441-00	470	1-246-465-00	4.7k	1-246-489-00	47k	1-246-513-00	470k	1-246-537-00	4.7M	1-244-761-00
5.1	1-246-418-00	51	1-246-442-00	510	1-246-466-00	5.1k	1-246-490-00	51k	1-246-514-00	510k	1-246-538-00	5.1M	1-244-762-00
5.6	1-246-419-00	56	1-246-443-00	560	1-246-467-00	5.6k	1-246-491-00	56k	1-246-515-00	560k	1-246-539-00		
6.2	1-246-420-00	62	1-246-444-00	620	1-246-468-00	6.2k	1-246-492-00	62k	1-246-516-00	620k	1-246-540-00		
6.8	1-246-421-00	68	1-246-445-00	680	1-246-469-00	6.8k	1-246-493-00	68k	1-246-517-00	680k	1-246-541-00		
7.5	1-246-422-00	75	1-246-446-00	750	1-246-470-00	7.5k	1-246-494-00	75k	1-246-518-00	750k	1-246-542-00		
8.2	1-246-423-00	82	1-246-447-00	820	1-246-471-00	8.2k	1-246-495-00	82k	1-246-519-00	820k	1-246-543-00		
9.1	1-246-424-00	91	1-246-448-00	910	1-246-472-00	9.1k	1-246-496-00	91k	1-246-520-00	910k	1-246-544-00		

HARDWARE NOMENCLATURE

Screw:

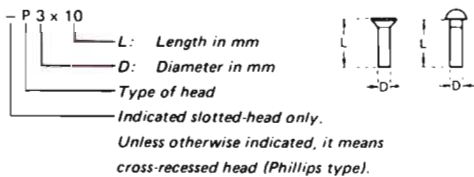

Nut, Washer, Retaining ring:



Reference Designation	Shape	Description	Remarks
<b>SCREWS</b>			
P		pan-head screw	binding-head (B) screw for replacement
PWH		pan-head screw with washer face	binding-head (B) screw and flat washer for replacement
PS PSP		pan-head screw with spring washer	binding-head (B) screw and spring washer for replacement
PSW PSPW		pan-head screw with spring and flat washers	binding-head (B) screw and spring and flat washers for replacement
R		round-head screw	binding-head (B) screw for replacement
K		flat-countersunk-head screw	
RK		oval-countersunk-head screw	
B		binding-head screw	
T		truss-head screw	binding-head (B) screw for replacement
F		flat-fillister-head screw	
RF		fillister-head screw	
BV		brazier-head screw	

Reference Designation	Shape	Description	Remarks
<b>SELF-TAPPING SCREWS</b>			
TA		self-tapping screw	ex: TA, P 3 x 10
PTP		pan-head self-tapping screw	binding-head self-tapping (TA, B) screw for replacement
PTPWH		pan-head self-tapping screw with washer face	binding-head self-tapping (TA, B) screw and flat washer for replacement
PTTWH		pan-head thread-rolling screw with washer face	binding-head (B) screw and flat washer for replacement
<b>SET SCREWS</b>			
SC		set screw	
SC		hexagon-socket set screw	ex: SC 2.6 x 4, hexagon socket
<b>NUT</b>			
N		nut	
<b>WASHERS</b>			
W		flat washer	
SW		spring washer	
LW		internal-tooth lock washer	ex: LW3, internal
LW		external-tooth lock washer	ex: LW3, external
<b>RETAINING RINGS</b>			
E		retaining ring	
G		grip-type retaining ring	

Sony Corporation  
Consumer Products Group  
Technical Support Dept.

English  
83C06138-1  
Printed in Japan  
© 1983



# SONY®

## tape deck Service Bulletin No. 135

CONSUMER SERVICE COMPANY  
Technical Department

Model: TC-K777/K555/K555ES/K81/K71

Subject: Head Wiring

Date: October 14, 1983

Please refer to the illustration below when soldering leads to the tape head terminal board (RPS202-3602A/B, RPS230-3602). Note the change of the PC board pattern.

